


Cadillac CT6 Sedan 2016 fuse box diagram

Engine compartment fuse block

The underhood fuse block is on the driver side of the engine compartment.

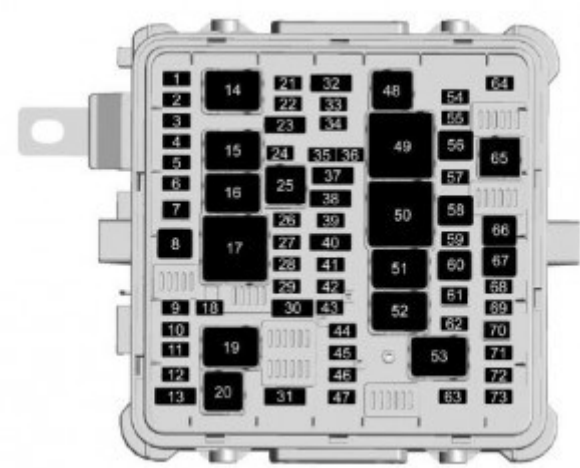

Cadillac CT6 Sedan – fuse box – engine

compartment


Number	Usage
1	Traction power inverter 2
2	Power coolant pump
3	—
4	Traction power inverter 1
5	Transmission/Ignition
6	—
7	Starter 2
8	Starter 1
9	Horn
10	—
11	Right LED
12	Left LED
13	Left and right high-beam headlamps
14	A/C control relay
15	Starter 2 relay
16	Starter 1 relay
17	Run/Crank relay
18	Right cornering LED
19	Headlamp low-beam relay
20	High-beam headlamp relay
21	A/C clutch
22	—

23	Coolant heater control module
24	Coolant pump
25	Coolant pump relay
26	HI fuel
27	Steering column lock
28	Rear heated seats
29	Front heated seats
30	—
31	LED LGT BAT
32	A/C control module/—
33	AIR solenoid
34	—
35	Engine control module
36	Engine control module 2
37	Coolant pump/ Ignition coils—odd
38	Ignition coils—even/ Non walk 2
39	Non walk
40	Instrument cluster
41	—
42	Fuel pump power module
43	Instrument panel body/Ignition
44	Aeroshutter
45	Washer
46	Front sensor
47	Left cornering LED
48	AIR solenoid relay
49	Air pump relay
50	Engine control module relay
51	Wiper speed relay
52	Wiper control relay
53	Headlamp control relay
54	—
55	—
56	Air pump
57	—
58	Instrument panel electronic center
59	—
60	ABS pump
61	Front wiper

62	Headlamp leveling
63	Electric brake booster module
64	—
65	—
66	Transfer case control module
67	Electric brake booster
68	Rear seat entertainment display
69	—
70	—
71	ABS valve
72	—
73	—

Instrument panel fuse block

The instrument panel fuse block is behind the driver side instrument panel storage compartment.

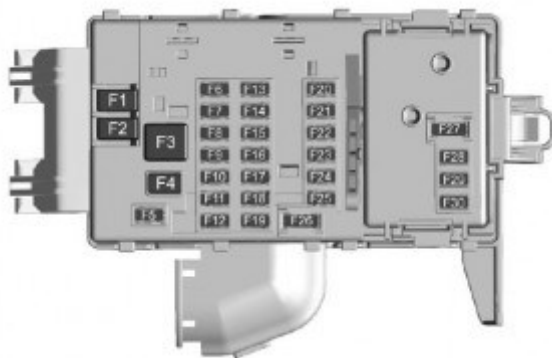


Cadillac CT6 Sedan – fuse box – instrument panel

Fuses	Usage
F1	Power outlet
F2	Visor
F3	Front blower
F4	Body control module 8
F5	Power steering column
F6	Column lock
F7	Glove box door
F8	Front heated seat module
F9	Sensing and diagnostic module
F10	Body control module 4
F11	Body control module 3
F12	Data link connector
F13	—
F14	—

F15	Rear vision camera
F16	Display
F17	HVAC control
F18	OnStar
F19	—
F20	Lane departure warning
F21	—
F22	INFO 2
F23	Central gateway module
F24	INFO 1
F25	Video processing module
F26	Steering wheel controls
F27	USB charge port
F28	Wireless charger
F29	—
F30	Speaker

Rear compartment fuse block

The rear compartment fuse block is behind a cover on the passenger side of the rear compartment.

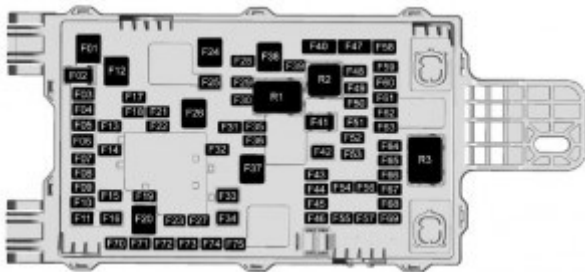

Cadillac CT6 Sedan – fuse box – rear

compartment

Number	Usage
F01	UCAP
F02	Trunk power outlet
F03	Driver window motor
F04	—
F05	Canister vent
F06	Right rear memory seat
F07	Body control module 7
F08	Driver seat adjustment switch
F09	Passive entry/Passive start
F10	Rear subwoofer amplifier
F11	Driver memory seat module

F12	—
F13	—
F14	Right rear seat
F15	Left front amplifier
F16	Right front seat
F17	Rear heated seat
F18	Battery/Regulated voltage control
F19	Door mirror switch
F20	—
F21	Vehicle integration control module
F22	—
F23	Rear closure
F24	—
F25	Left motorized safety belt pretensioner
F26	Rear defogger
F27	Right front amplifier
F28	Amplifier
F29	Sunroof
F30	Body control module 2
F31	Body control module 6
F32	Exterior rearview mirror
F33	Right window
F34	Power trunk module
F35	On-board charging module
F36	Alarm siren module
F37	DC AC inverter
F38	Rear blower
F39	Fuel pump power
F40	—
F41	Rear seat power outlet
F42	Left rear memory seat
F43	—
F44	Rear closure
F45	Auxiliary audio/ Video/Radio
F46	External object calculating/Side blind zone alert/ Radar short range sensor
F47	—
F48	Right front seat
F49	Memory bolster module
F50	Body control module 1

F51	Transmission control module
F52	Parking assist
F53	Heated, cooled or ventilated seats (if equipped)
F54	Rain sensor/Power sounder/Intrusion/ Universal remote system
F55	Front memory seat module
F56	Evaporative emissions leak check module
F57	Voltage current temperature module
F58	—
F59	Engine control module power
F60	Right motorized safety belt pretensioner
F61	Parking lamps
F62	—
F63	—
F64	Engine control module/Ignition
F65	Rear glass sunshade
F66	Rear vision camera/ Interior rearview mirror
F67	DC DC converter/ Air quality sensor
F68	Damping control module
F69	—
F70	—
F71	—
F72	—
F73	—
F74	—
F75	—

Relays	Usage
R1	Rear seat power outlet relay
R2	Fuel pump relay
R3	Run/Crank relay