

41 62 014**Adjusting tailgate****Special tools required:**

- [00 9 322](#)

**Important:**

Do not damage adjoining body components.

Minor corrections (realignment work) are permitted if the existing adjustment options are not sufficient.




Read contents of [Body, General](#).

Observe [gap dimensions](#).

The tailgate must be provided with all attachment parts for correct adjustment.

Necessary preliminary tasks:

- Partially loosen rear [headlining](#).

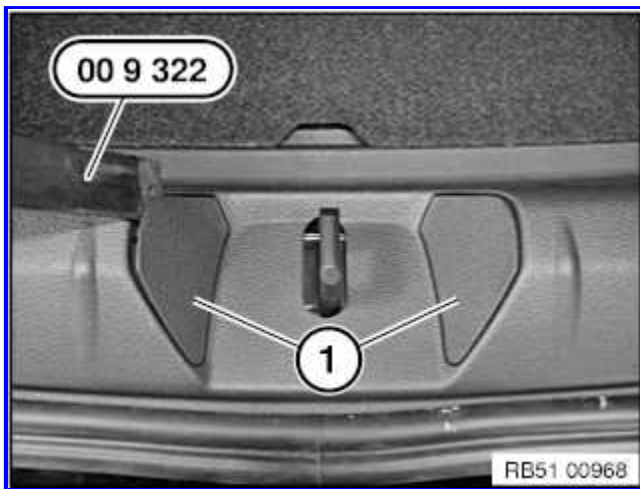


Note:

When the tailgate is closed, the lock striker must not touch or scrape against the tailgate lock.

If necessary, remove lock striker.

Lift out cover (1) with special tool [00 9 322](#).

Release screws underneath. If necessary, remove lock striker.

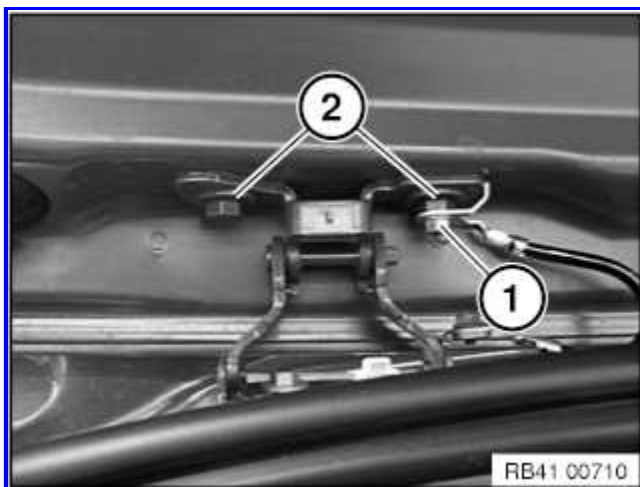

Adjusting the tailgate sideways and vertically:

Slacken nut (1).

Slacken screws (2) on rear lid hinge to rear lid until such stage that rear lid can still be moved.

Adjust tailgate.

Tightening torque [41 62 1AZ/ 41 62 3AZ](#).


Adjusting tailgate laterally and in longitudinal direction:

Slacken nuts (1) and adjust tailgate.

Tightening torque [41 62 2AZ](#).

Adjust [stop pad](#).

Adjust [tailgate catch](#).

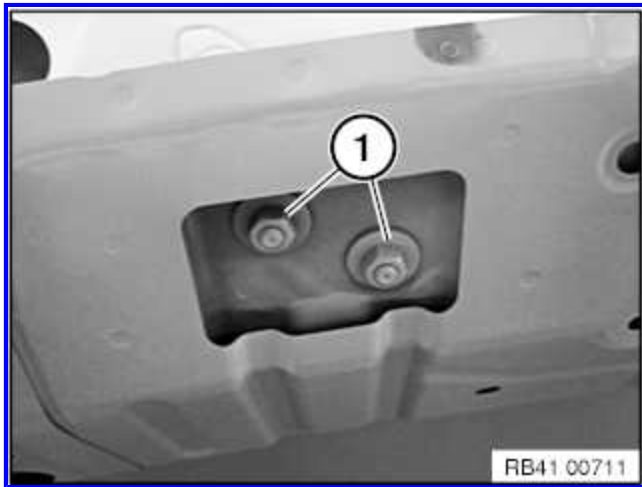**After Installation note:**

- Tighten all screws and nuts to specified torque.
- Touch up unpainted surfaces in the appropriate colour.