

72 12 050

Removing and installing or replacing side airbag, front left or right seat



Warning!

Observe [safety regulations](#) for handling airbag modules and pyrotechnical seat belt tensioners.

Incorrect handling can cause airbags to trigger, resulting in serious injuries.



Important!

Operations on pyrotechnical devices may only be carried out by authorised experts.

Improper, unauthorised operations may result in serious dangers.


Unauthorized persons are strictly prohibited from performing any operations on this system.



Necessary preliminary tasks:

- Disconnect [negative battery cable](#)
- Remove [front seat](#)
- Partially detach [backrest cover](#)

cardiagn.com

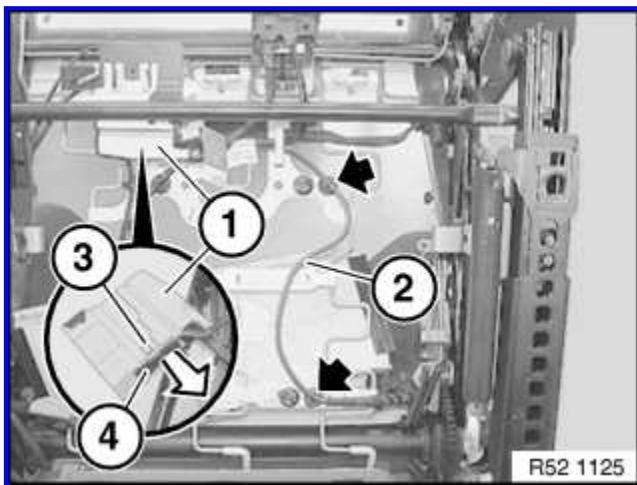

Important!

Make sure airbag wiring harness is exactly routed when installed.


Detach cable strap.

Release airbag wiring harness (2) from cable clips on seat mechanism.


Raise release clip (3) and pull connector (4) out of connector housing (1).

Note:

If necessary, release yellow connector housing (1) from holder on seat mechanism.

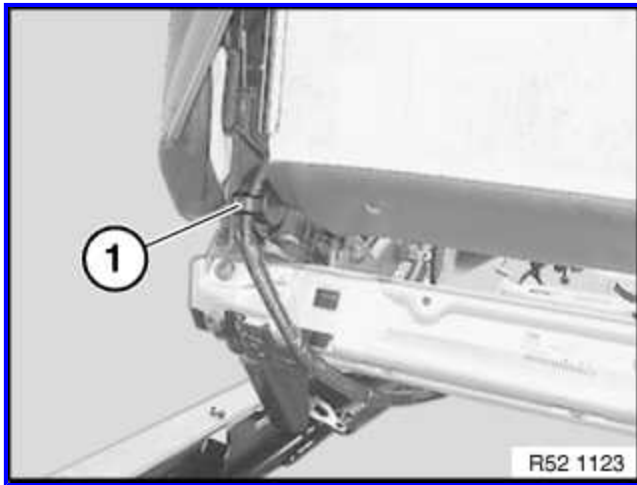

Unclip Omega cable clip (1) from seat mechanism (2).

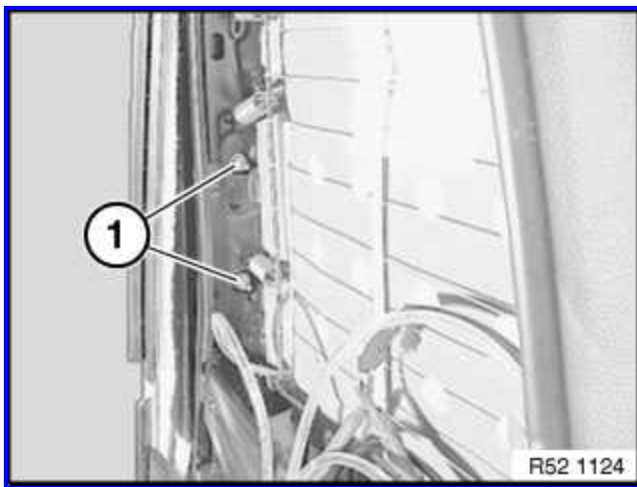

Unscrew nuts (1).

Installation note:

Replace nuts (1).

Tightening torques [72 12 03AZ](#).



Important!

Feed the wiring harness carefully through the seat and backrest mechanism as the edges of the frame can be sharp.