

34 41 220**Removing and installing/renewing all parking brake pads****Special tools required:**

- 32 1 030
- 34 4 000
- [00 9 317](#)


**Necessary preliminary tasks:**

- [Remove](#) rear brake disk.

Note:

During replacement of the hand brake coverings, the following components must also be renewed:

- [Brake shoe expander](#)
- Adjusting screw
- Spring set

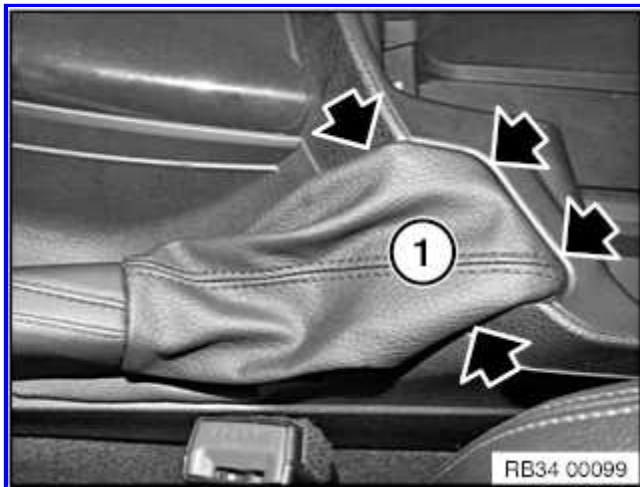

If applicable unclip the gaiter (1) with special tool [00 9 317](#) at top.

Installation note:

First insert the gaiter (1) on the bottom and then clip in on the top.

Lock adjustment unit (ASZE).


Actuate parking brake lever. Connect special tool 32 1 030. Press limit position (1) of adjusting spring back to such an extent that retaining hook (2) engages in limit position (1).

Installation note:


Unlock adjustment unit (ASZE).

Lever out restraining hook (2) with a suitable screwdriver.

Restraining hook (2) must detach from limit position (1) of

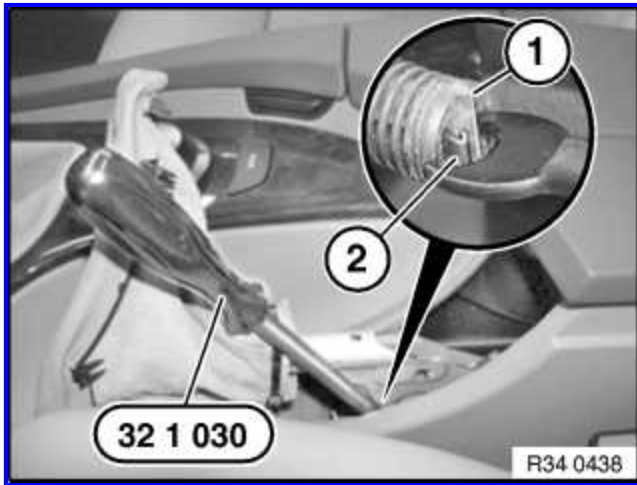

adjusting spring.

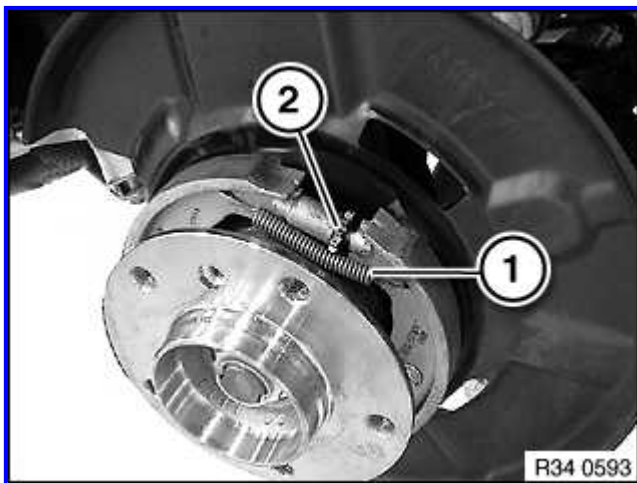

Disconnect return spring (1) with brake spring pliers.


Installation note:

Return spring (1) must not be overelongated.

Check and if necessary replace return spring (1).

Pay attention to installation position of adjusting screw (2).

Apply a thin coat of [grease](#) to bush and screw threads

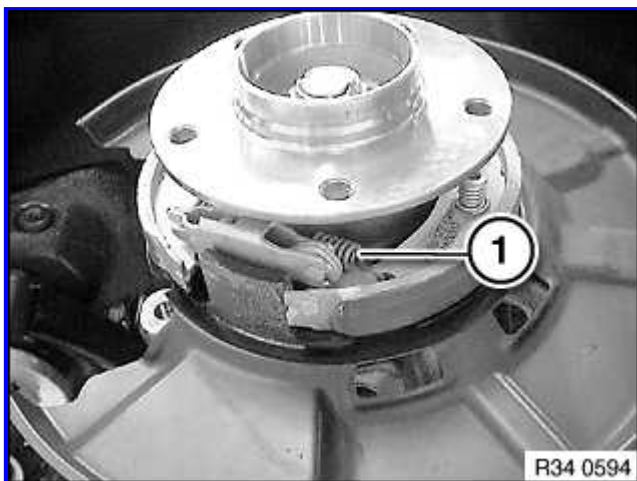


Disconnect return spring (1) with brake spring pliers.

Installation note:

Return spring (1) must not be overelongated.

Check and if necessary replace return spring (1).

Twist roll pins (1) 90° with special tool 34 4 000 and detach.
Remove brake pads (2).

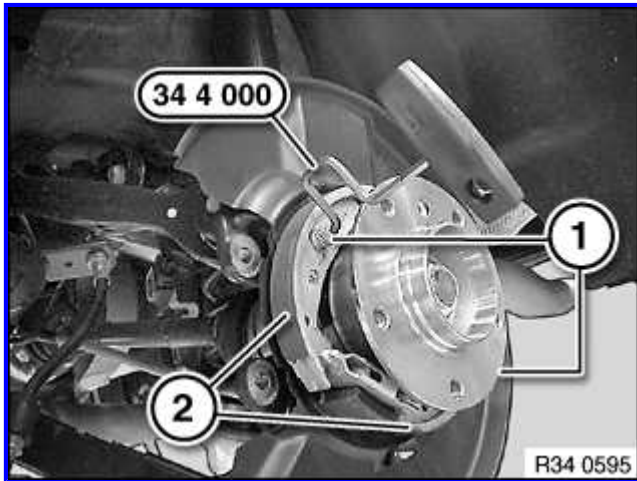**After installation:**

- Adjusting [parking brake](#)