

32 34 030

Removing and installing/replacing airbag unit (sport steering wheel)**Warning!**

Observe the following instructions to avoid any risk of injury by the airbag unit.

- Comply with safety regulations for handling components with gas generators.
- Do not exert any force on the airbag unit.
- Use only specified release tool for the airbag unit.

Note: Incorrect handling may result in triggering of the airbag unit and thereby cause serious injury.

**Important!**


[Steering wheel](#) must be replaced if airbag unit has been triggered!

Follow [procedure after airbag deployment](#).


**Necessary preliminary tasks:**

- Disconnect [battery earth lead](#)

Insert Torx screwdriver T20 (1) vertically into the concealed opening until limit position (2) can be felt.

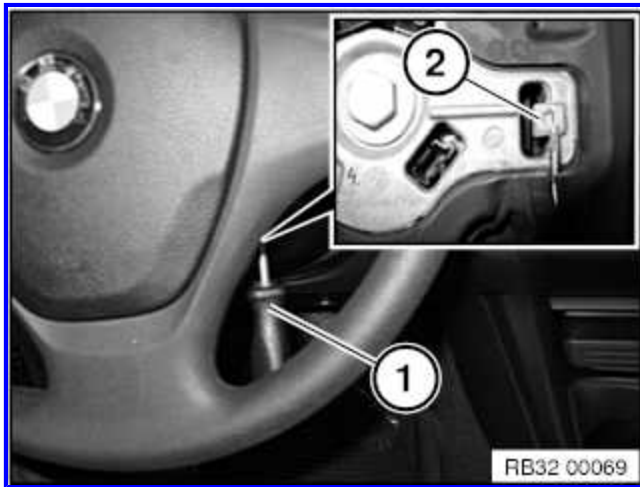

Pull Torx screwdriver (1) approx. 2-3 mm out of opening. Press screwdriver handle towards middle of steering wheel and simultaneously slide into opening to position Torx screwdriver behind retaining spring bracket (refer to graphic below).

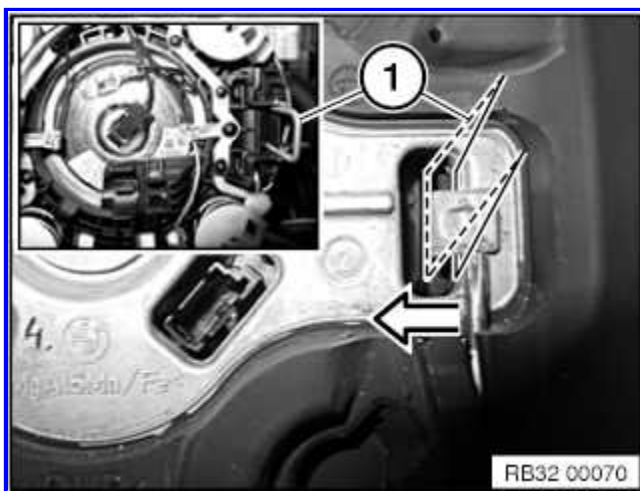

Press retaining spring bracket (1) of airbag unit inwards and simultaneously pull airbag unit upwards until it unlocks.

Repeat procedure on other side.

Installation note:

Carefully push airbag unit in direction of steering column shaft into steering wheel with uniform pressing force until airbag engages noticeably and audibly.



Warning!

Danger of injury!

The airbag unit may only be set down with the airbag itself facing up.

Tilt airbag unit forwards.

Disconnect plug connections(1) and remove airbag unit.

Installation note:

Make sure electrical leads are correctly positioned.

