


61 31 233

Removing and installing/replacing engine electrical system for lane departure warning (M sports steering wheel)



Necessary preliminary tasks:


- [Remove airbag unit](#)

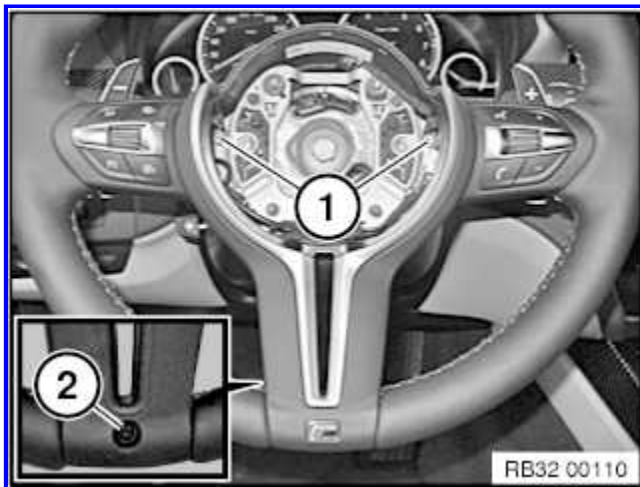

Release screws (1) on steering wheel.

Release screw (2) on rear side of steering wheel.

Remove design cover.

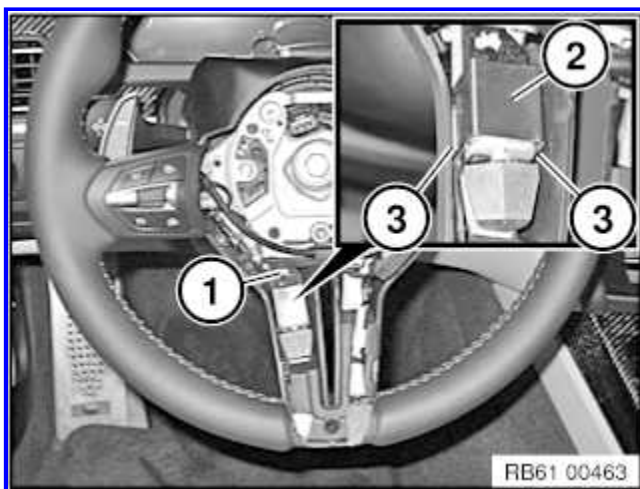



Disconnect plug connection (1).

Carefully unlock retaining clip (2) on latch mechanisms (3) with suitable tool (e. g. screwdriver with 3-mm blade).

Note:


The unlocking procedure is simplified by pressing down the retaining clip (2).

Remove engine electrical system of Lane Departure Warning (1) from steering wheel (2) in direction of arrow.

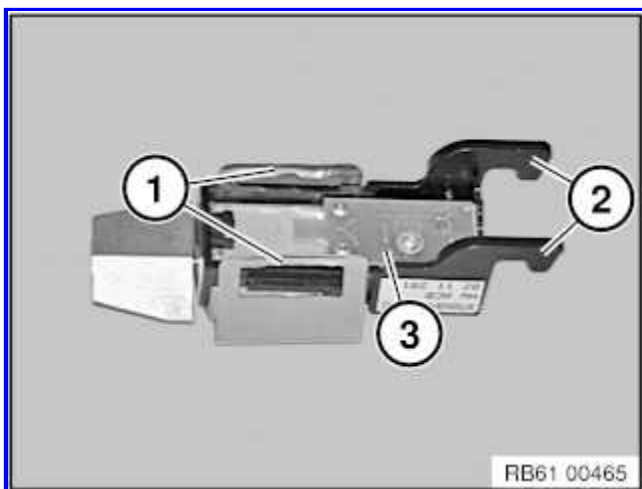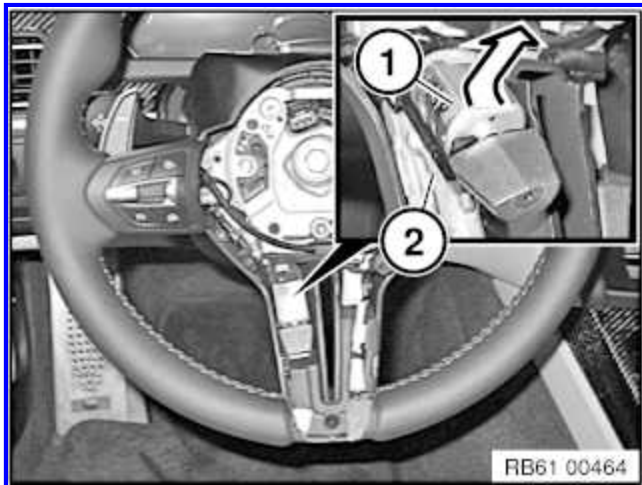

Installation note:

Retaining clip (2) and guides (1) on engine electrical system of Lane Departure Warning (3) must not be damaged or missing.

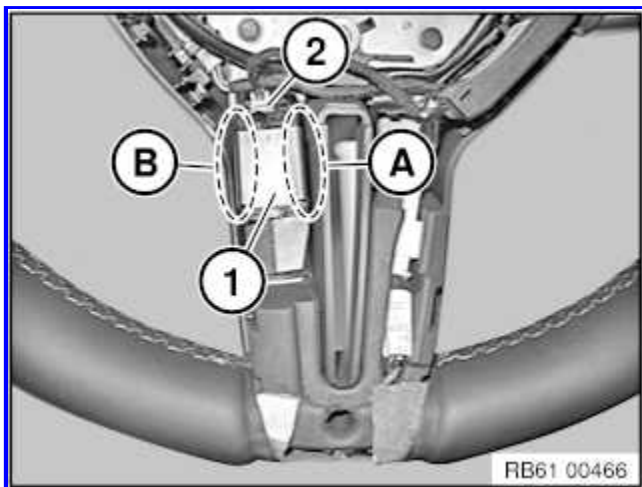

Installation note:

First press down retaining clip (1) in area (A) until it engages. Then press down in area (B) until it engages.

Make sure engine electrical system of Lane Departure Warning is correctly seated.

Make sure plug connection (2) is correctly locked.

Replacement from build date 03/2009:

Engine electrical system must be readjusted.

The service module "Adjustment actuator Lane Departure Warning" can be found at:

- Body
- Camera-based driver support systems



- Adjustment actuator Lane Departure Warning