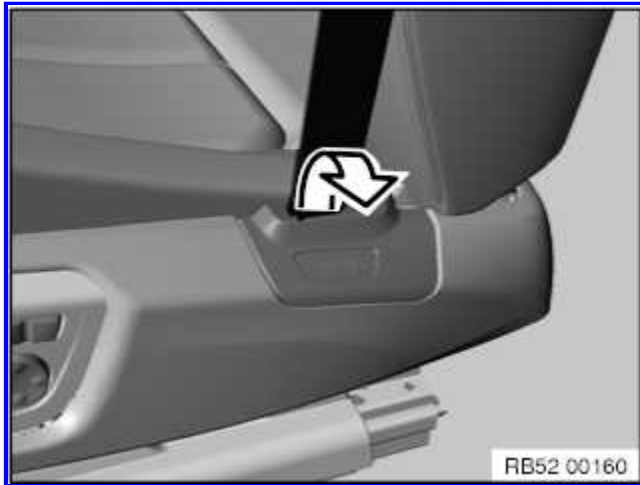


72 11 033**Removing and installing/replacing front left or right seat belt****Necessary preliminary tasks:**


- Remove [panel for door post](#)

For electrical front seat version:

Move backrest to full rearward position.


Grip end fitting cover centrally between seat belt strap and cover.

Unclip end fitting cover in direction of arrow.

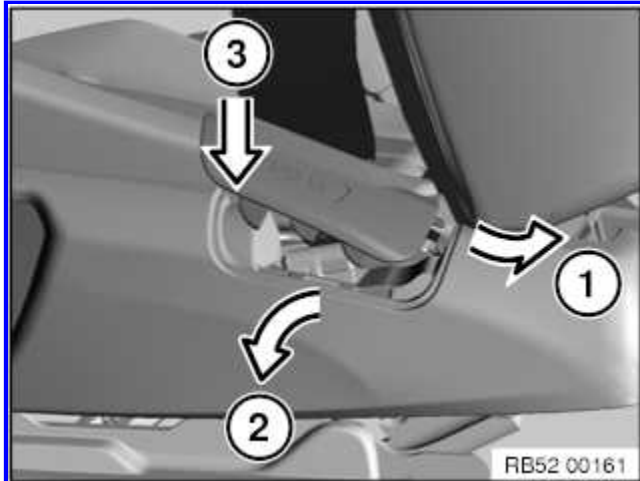*Installation note:*

Install end fitting cover as follows:

1. Insert cover with rear guide in covering.
2. Insert cover in direction of arrow downwards in covering
3. Engage top left of cover in covering.

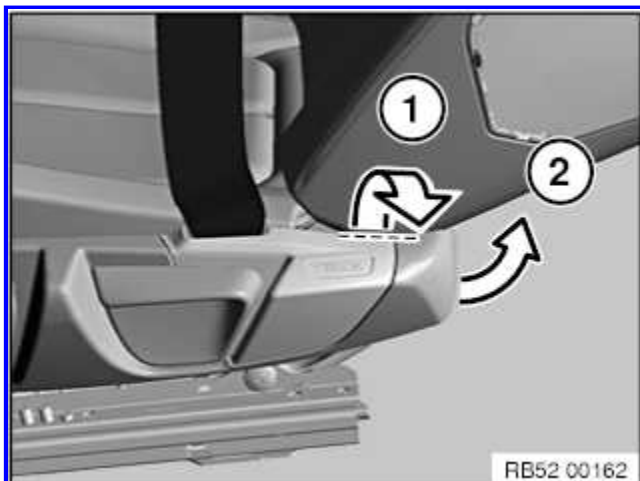
For manual front seat version:

Move backrest to full rearward position.

Grip end fitting cover in marked area between cushion and cover.

Unclip end fitting cover in direction of arrow (1).


Feed out end fitting cover (2) in direction of arrow.

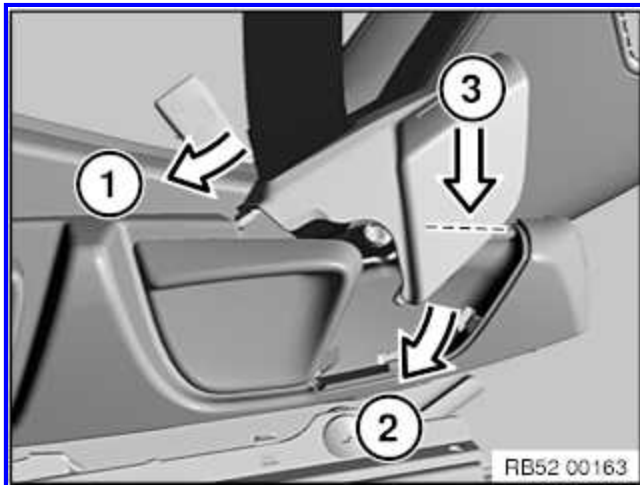

Installation note:

Install end fitting cover as follows:

1. Insert cover with front guide in cover
2. Insert cover in direction of arrow downwards in covering
3. Engage top cover in marked area in covering.

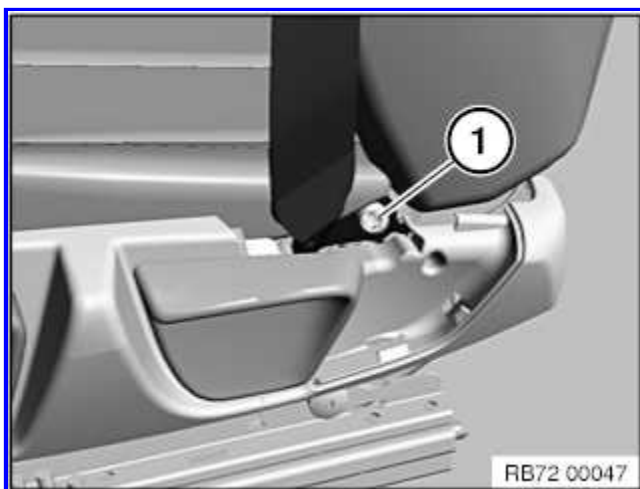


Release screw (1).

Tightening torque: [72 11 2AZ](#).

Remove end fitting.

Installation note:

End fitting is coded against incorrect assembly.

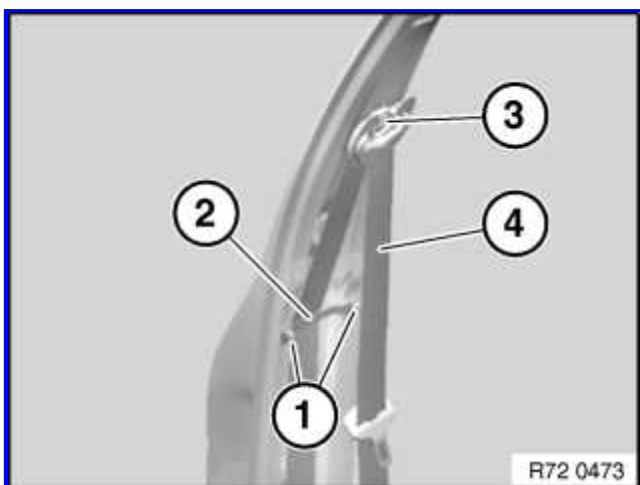

Release screws (1).

Tightening torque: [72 11 4AZ](#).

Remove deflector bar (2).

Release screw (3).

Tightening torque: [72 11 3AZ](#).

Set down belt deflector with belt (4).



Release screw (1).

Tightening torque: [72 11 1AZ](#).

Remove inertia reel mechanism (3).

Installation note:

Encoding (2) of automatic reel must be seated in body recess.

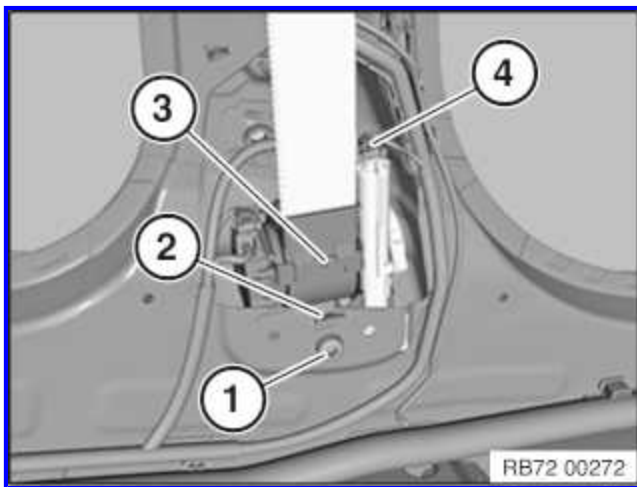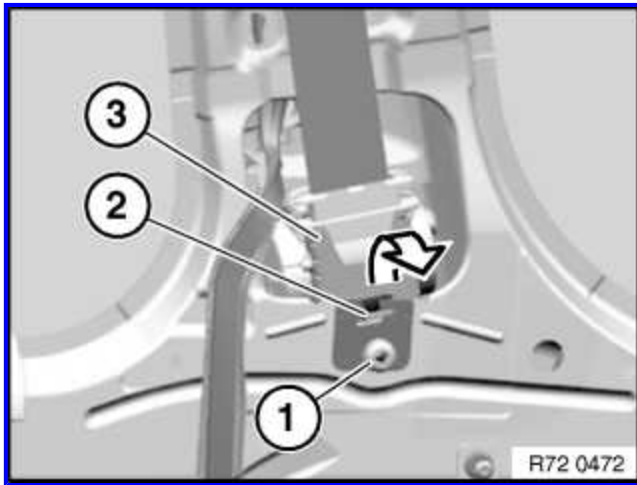

Only for US models:

Unlock plug connection (4) and disconnect.

Release screw (1).

Tightening torque: [72 11 1AZ](#).

Remove inertia reel mechanism (3).

Installation note:

Encoding (2) of automatic reel must be seated in body recess.