

72 11 071**Removing and installing/replacing front lower strap fitting (belt tensioner), front passenger seat***Note:***Only F30 and F35 from Chinese production:**

On these vehicles, the following part numbers must be installed when replacing the lower strap:

Production date	Optional equipment S5ALA (Active Protection)	Faulty part		Required new part	
		Part number	Parts	Part number	Parts
until 09/2013	not fitted	7 292 029	Lower strap, left	7 388 505	New part kit with lower strap and seat belt*
until 09/2013	not fitted	7 292 030	Lower strap, right	7 388 506	New part kit with lower strap and seat belt*
until 09/2013	Installed as optional equipment	7 292 029	Lower strap, left	7 259 387	Lower strap, left
until 09/2013	Installed as optional equipment	7 292 030	Lower strap, right	7 259 388	Lower strap, right

from 09/2013	Installed after series production	7 292 029	Lower strap, left	7 259 387	Lower strap, left
from 09/2013	Installed after series production	7 292 030	Lower strap, right	7 259 388	Lower strap, right

***When a new part is installed, the seat belt must also be replaced on vehicles with production date before 09/2013 without optional equipment S5ALA (Active Protection)!**

(Seat belt is included in the new part kit.)



Necessary preliminary tasks:

- Remove [front passenger seat](#)



Warning!

Read and comply with [safety regulations](#) for handling airbag modules and pyrotechnical belt tensioners.

Improper handling can lead to triggering of the pyrotechnical seat belt tensioner or side airbag, resulting in injuries.


Switch off the ignition!



Installation note:

- Microencapsulated screws must be replaced and may not be reused
- The screw connection must be closed within 20 minutes (start of hardening)
- Microencapsulated screws must not be retightened
- If the nut is used on more than one occasion, first clean the thread

Unfasten plug connection (1) and disconnect.

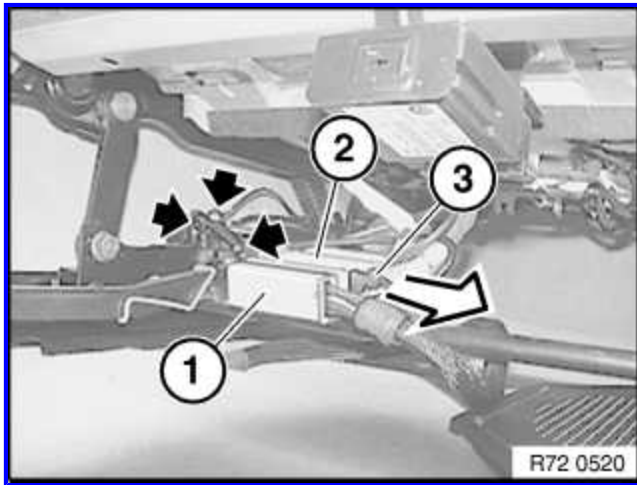


Unlock plug connection (3) and pull all connectors out of connector housing (2).

Disconnect all cable straps.

Removing wiring harness.

Installation note:

- Replace cable strap.
- Cables must not be under tension
- Plugs are coded and must be reinstalled in the correct sequence in the connector housing

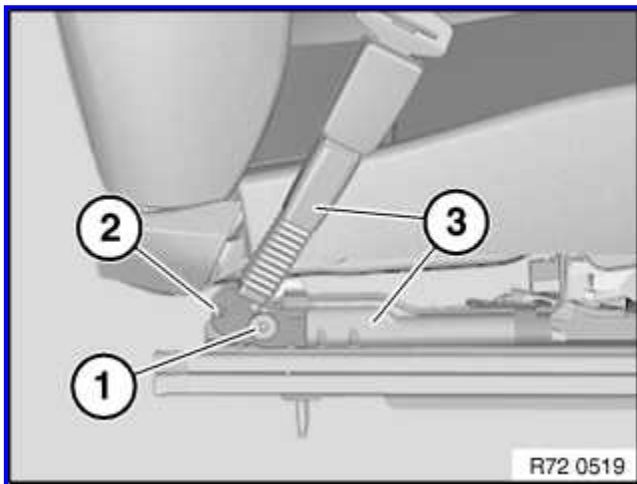

Release screw (1).

Tightening torque [72 11 05AZ](#).

Remove belt pretensioner (3).

Installation note:

Replace screw (1).

Belt tensioner (3) is secured through recess (2) on retaining bracket.