

61 14 035

Removing and installing/replacing front positive battery cable distributor




Warning!

Observe [safety information](#) for handling vehicle battery.



Necessary preliminary tasks:

- Clamp off [battery lead from negative connection point](#)

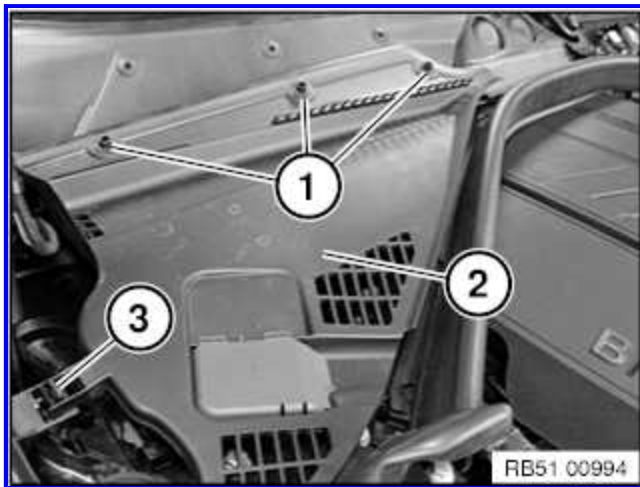


Note:

Graphics shown on the F20 by way of example, deviations in detail are possible in other models.

Turn locks (1) 90° counterclockwise.

Unlock catch (3).

Remove cover (2).

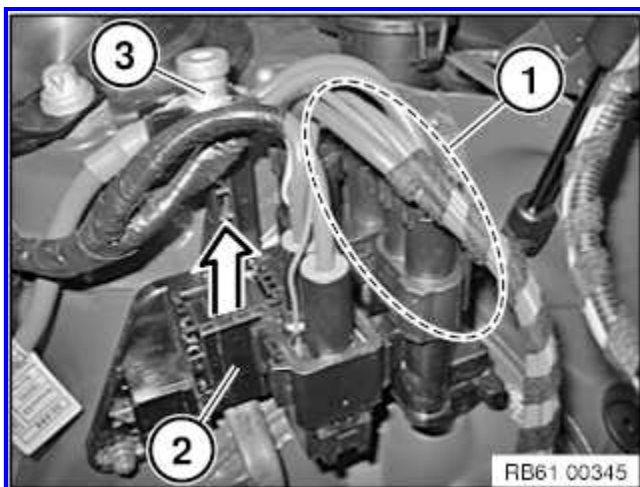

Release and disconnect all plug connections in area (1).

Disengage cover (2) in direction of arrow and take off.

Release nut from positive wire (3) and remove retaining bracket (3).

Tightening torque [61 21 4AZ](#).

Installation note:


Make sure all plug connections are correctly latched.

Make sure cover (2) is correctly locked.

Risk of short circuits!

Ensure positive wire (3) is correctly seated.

Release latch mechanism (arrow) and pull relay carrier (1) up

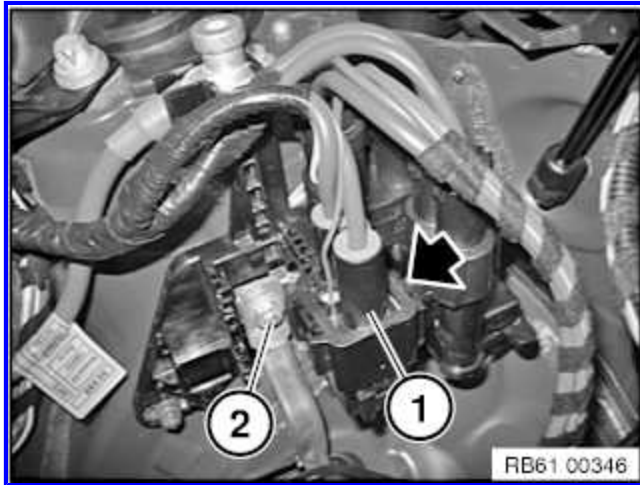

and out of power distribution box.


Release nut from flat positive terminal wire (2) and remove flat positive terminal wire (2).

Tightening torque [61 21 4AZ](#).

Installation note:

Risk of short circuits!

Make sure flat positive terminal wire (2) is correctly seated.

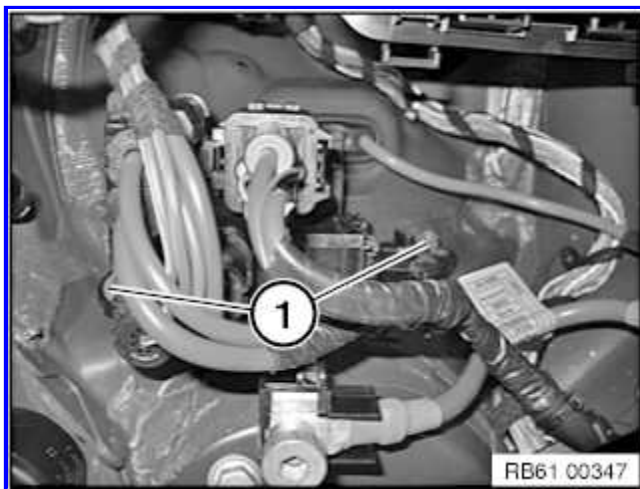

Release nuts (1) and remove power distribution box.

Tightening torque [61 21 2AZ](#).