

61 67 100**Removing and installing/replacing high-pressure nozzle of headlight cleaning system on left (or right)****Special tools required:**

- [00 9 340](#)



**Necessary preliminary tasks:**

- Remove [front bumper panel](#)

Note:

Work shown on the F30 by way of example, deviations in detail are possible in other models.

Use special tool [00 9 340](#) to lift the cover (1).

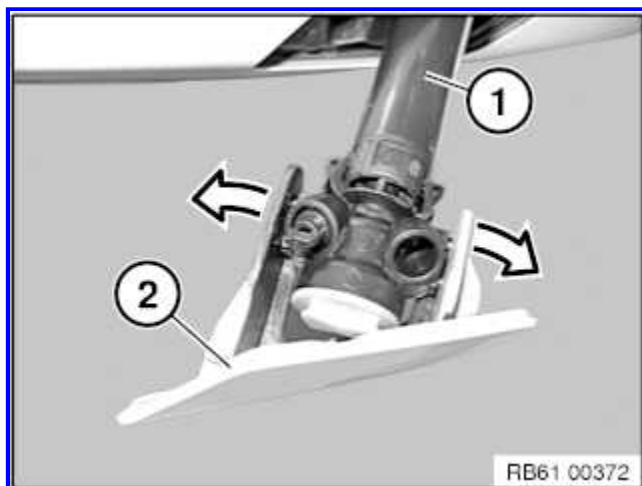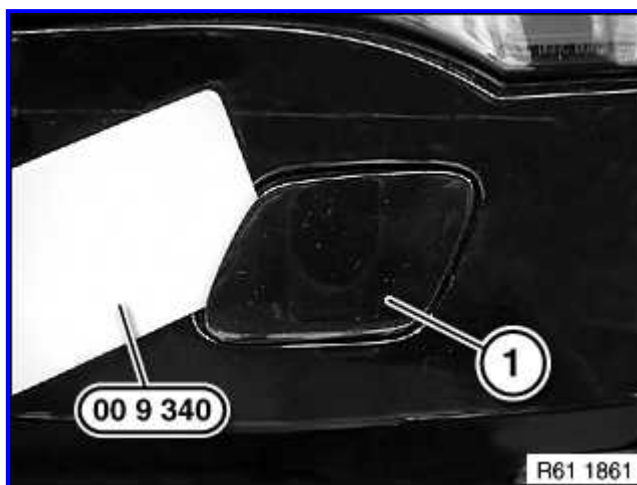


Slowly pull out high-pressure nozzle of headlight washer system (1) at cover (2).

Unclamp cover (2) in direction of arrow and remove.

Allow high-pressure nozzle of headlight washer system (1) to slide back slowly.

Unlock safety coupling (1) of high-pressure line (2) and detach high-pressure line (2) in direction of arrow.

Lift retaining lugs (3) in direction of arrow and feed high-pressure nozzle (4) towards rear out of bumper panel.

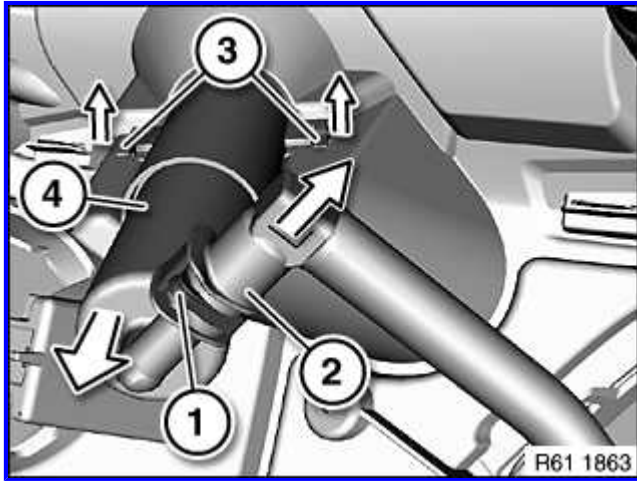

Installation note:

Keep hose connection for high-pressure nozzle (4) and high-pressure line (2) clean and free from grease.

Make sure high-pressure line (2) is correctly engaged on high-pressure nozzle (4).

Make sure high-pressure nozzle (4) is correctly engaged on front bumper panel.

Carry out a function check before fitting bumper panel.

If necessary, top up washer fluid.