

12

**Removing and installing/replacing
ignition coil cover (N55)**

Pull ignition coil cover (1) upward off of rubber mount.

