


33 32 190**Removing and installing/replacing left or right camber arm***Note:*

If the camber arm is detached from the rear axle support/wheel carrier, it is necessary after installation to carry out a [wheel alignment](#).

**Necessary preliminary work:**

- Remove [coil spring, rear](#) .
- Remove [camber arm cover](#).

cardiagn.com

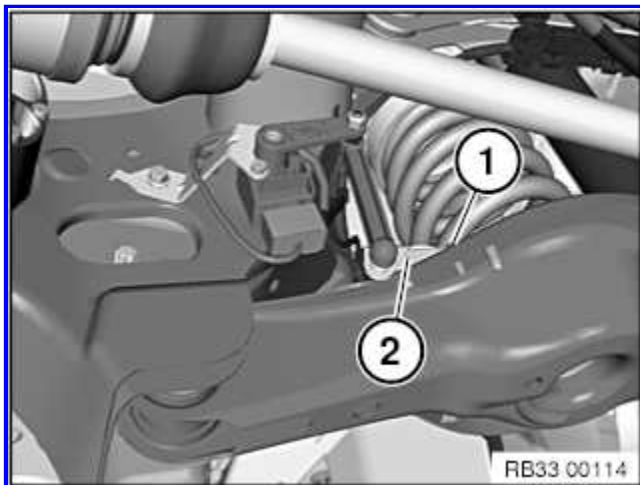Only on left side at ride-height sensor:

Release screw (1) and remove holder (2) with jointed rod.


Tightening torque [37 14 3AZ](#).

Installation note:

Replace screw.

Secure camber arm against falling off.

Mark position of eccentric adjustment washer to rear axle support to simplify subsequent adjustment of rear axle.

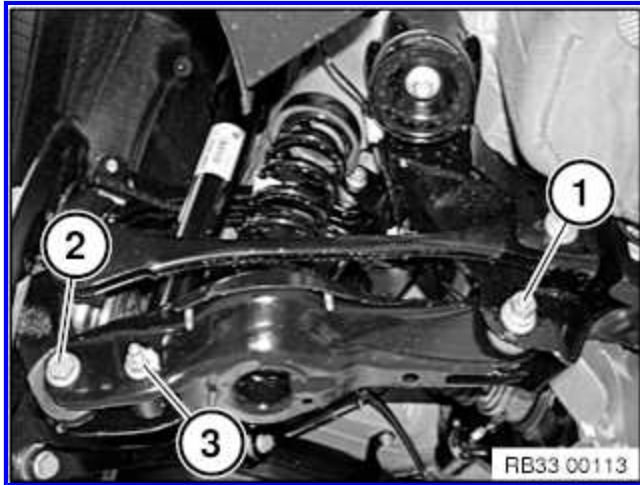

Release nut (1) and remove eccentric bolt.

Tightening torque [33 32 9AZ](#).

Installation note:

Note insertion direction of eccentric screw.

Replace nut.

Tighten down screw connection in [normal position](#).

Release nut (2) and remove screw.

Tightening torque [33 32 10AZ](#).

Installation note:

Note direction of insertion of screw.

Replace nut.

Release nut (3) and remove screw.

Tightening torque [33 52 3AZ](#).

Installation note:

Note direction of insertion of bolts.

Replace screw and nut.

Tighten down screw connection in normal position.



After installation:

- Carry out [wheel alignment procedure](#).