

72 11 096

Removing and installing/replacing rear left or right lower straps




Warning!

Read and comply with [safety instructions](#) for handling airbag modules and pyrotechnical belt tensioners.



Necessary preliminary tasks:

- Remove [rear seat](#)

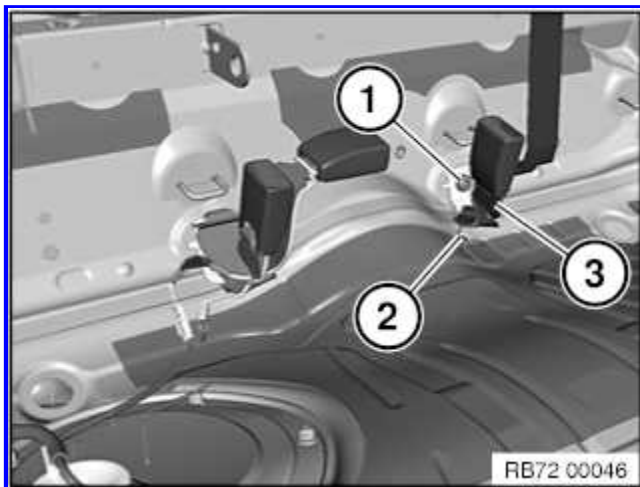

Removal of left lower strap:

Release screw (1).


Tightening torque [72 11 23AZ](#).

Unfasten [plug connection](#) (2) and disconnect.

Remove lower strap (3).

Installation note:

Lower strap is coded against incorrect assembly.

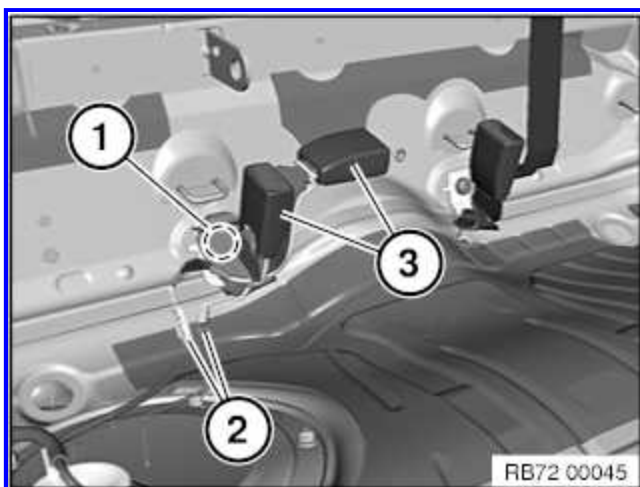

Removal of right lower strap:

Note:

Remove the middle lower strap only in combination with the right lower strap.

Release screw (1).

Tightening torque [72 11 23AZ](#).

Unlock [plug connections](#) (2) and disconnect.


Remove lower strap (3).

Installation note:

Lower strap is encoded against incorrect assembly (3).

Lower strap with belt tensioner:

Removal is depicted for the left lower strap; the right strap is

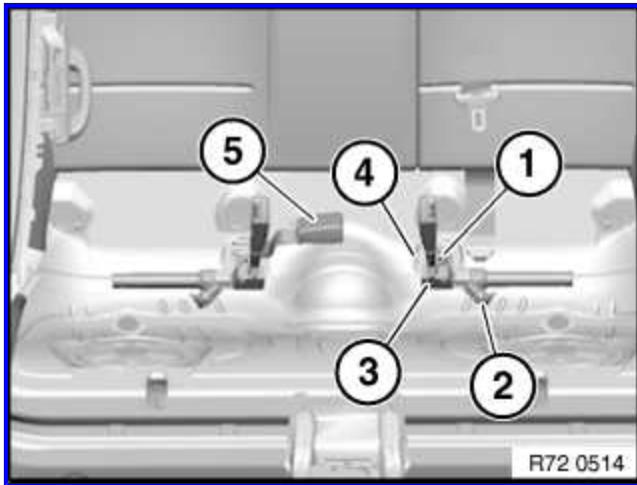

removed in the same manner.

Unfasten [plug connection](#) (2) and disconnect.

Release screw (1).

Tightening torque [72 11 23AZ](#).

Remove lower strap (3).

Installation note:

Coding (4) determines the installation position and prevents the lower strap (3) from turning.

Note:

Only remove the right lower strap (5) in combination with the middle lower strap.