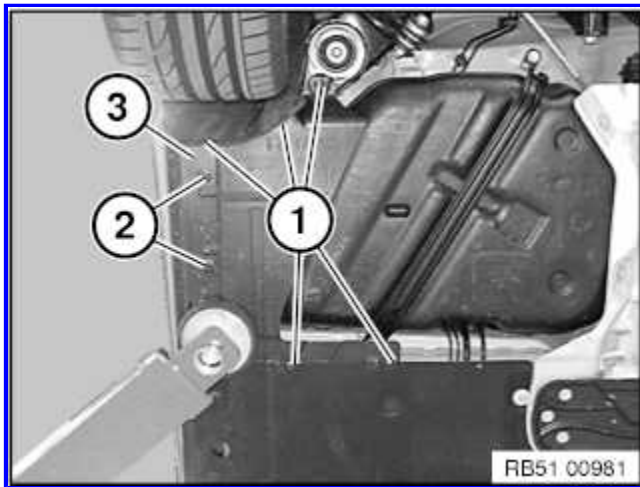


51 75 ...**Removing and installing/replacing tank cover on the left**

Release all expanding rivets (1).

Unfasten screws (2).

Tightening torque [51 75 1AZ](#)

Remove tank (3).