

61 35 179

Replacing and installing (replacing) the solar rain/light sensor and condensation sensor




Important!

Read and comply with notes on protection against electrostatic discharge ([ESD protection](#)).



Necessary preliminary tasks:

- Remove [inside mirror](#)

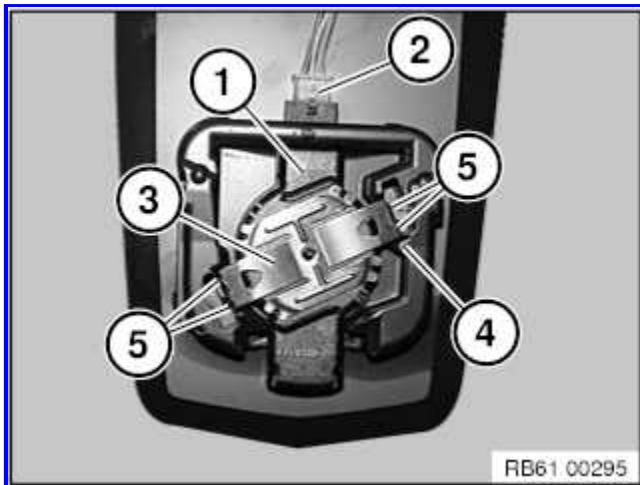

Disconnect plug connection (2).

Unlock the metal spring (3) on both sides outward.

Remove solar rain-light-condensation sensor (1) from windscreen.

Risk of damage:

The silicone-coated surface below it must not be touched or damaged!

Installation note:

Connect plug connection (2) only after fitting solar rain/light and condensation sensor on windscreen!

Press centre of metal spring (3) to ensure latch mechanism is correct in both hooks (5) on each side of retaining element (4).



[Initialise sensor](#)

Note:

- For F2x; (not F25); F3x and F8x (M3; M4) the coding is **automatically** carried out by **JBBFE**.
- On F25, encoding is performed **automatically** via a terminal change (terminal 15) by **Junctionbox**.



Replacement:

Carefully clean windscreen at contact area with rain/light/solar and condensation sensor! Remove all silicone residues.

Remove protective cover from the new solar rain/light and condensation sensor.

Risk of damage:

The silicone-coated surface below the protective cover must not be touched or damaged!