

52 15 405

**Replacing backrest cover for front seat
(sport/manual)****Special tools required:**

- [52 0 050](#)

**Necessary preliminary tasks:**

- Remove [front seat](#)
- Remove [rear panel](#) on front seat backrest
- Remove [guide sleeves](#)

**Important!**


Risk of damage on sharp-edged seat mechanism.

Guide all cables carefully through seat and backrest mechanism.

Make sure cable is routed without kinks and tension.

Make sure plug connections are correctly locked.

Make sure connectors are correctly seated in latch mechanisms.

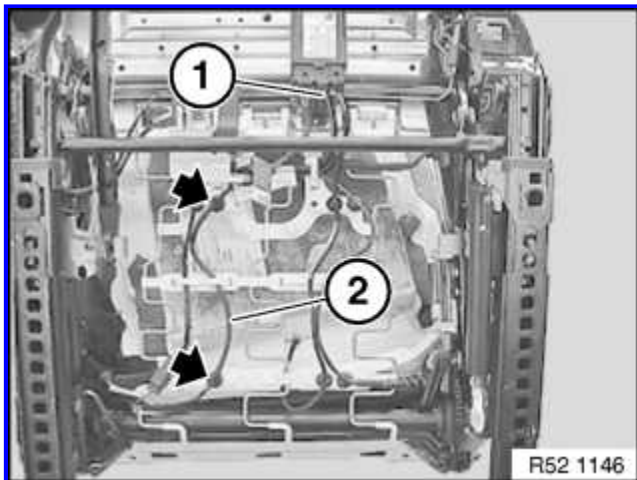**Version with seat heating only:**

Unlock plug connection (1) for seat heating and disconnect.

Detach cable strap.

Release seat heater cable (2) from cable clips on seat mechanism.

Installation note:

Plug connection is encoded to prevent incorrect connection.

Replace cable strap.

Important!

Feed the wiring harness carefully through the seat and

backrest mechanism as the edges of the frame can be sharp.



Lift welt out of backrest frame.

Detach backrest cover at bottom from the metal tabs in the marked area.


Carefully slide bracing cloth with foam through backrest gap and seat structure.

If applicable, route cable carefully through seat and backrest mechanics as the edges of the frame may be sharp.

Installation note:

Slide foam completely through backrest gap and seat structure.

Make sure foam and bracing cloth are correctly fitted.

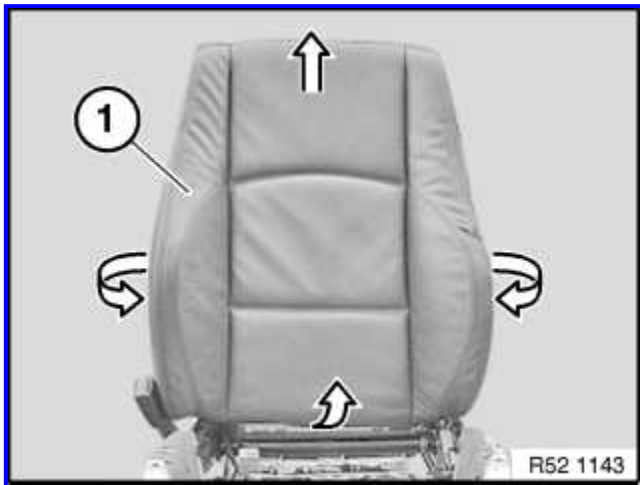

Pull off backrest cover (1) with upholstery sideways and towards top from backrest frame.




Release all clamps in marked area.

Remove backrest cover from padding.

Note:


Remove all remnants of clamps from backrest cover and upholstery.

Installation note:

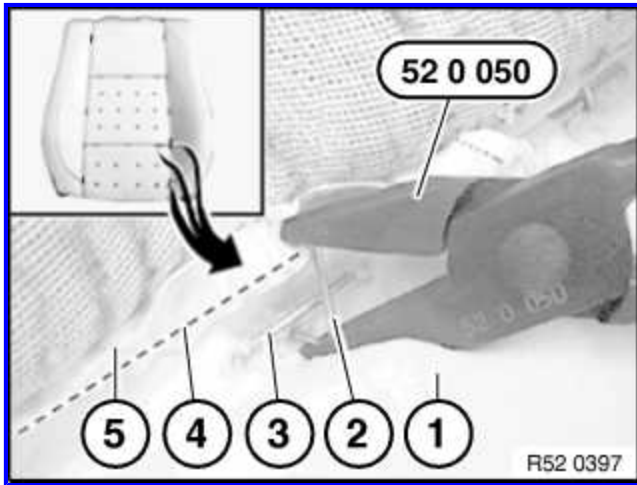

Bend new clamp (2) with special tool [52 0 050](#).

1. Upholstery
2. Clamp
3. Trim wire in upholstery
4. Trim wire in backrest cover
5. Backrest cover

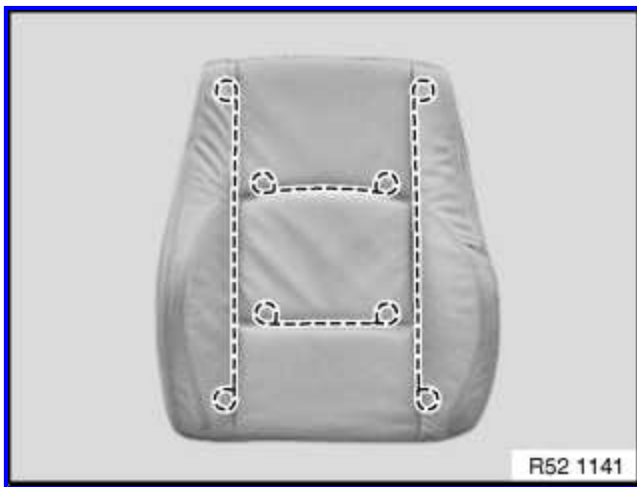

Replacement only:

Pull trim wires out of backrest cover.

Cut new backrest cover to size and insert trim wires.