


52 26 411**Replacing backrest cover for left rear seat (basic seat)****Special tools required:**

- [52 0 050](#)

Necessary preliminary tasks:


- Remove left [backrest](#)
- Remove [guide sleeves](#) left

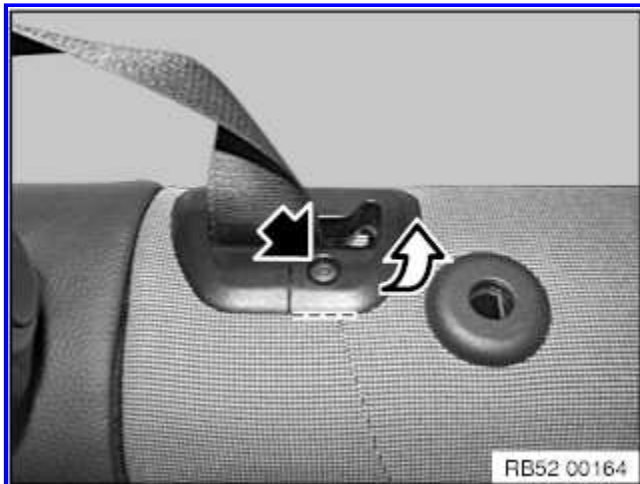


Release screw.

Tightening torque [52 26 07AZ](#).

Lift out trim.

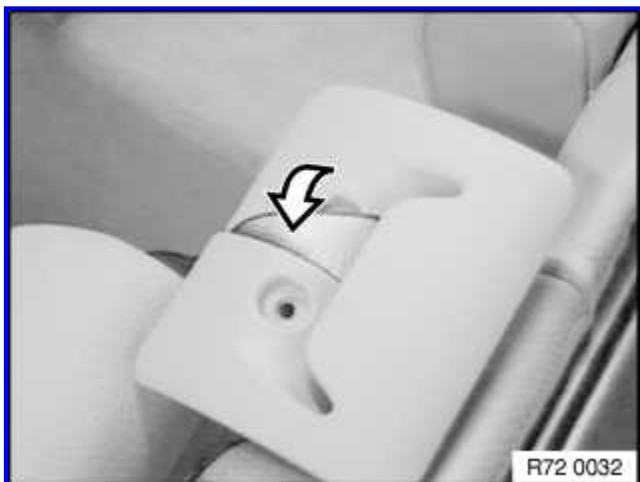


Feed seat belt strap out of cover.

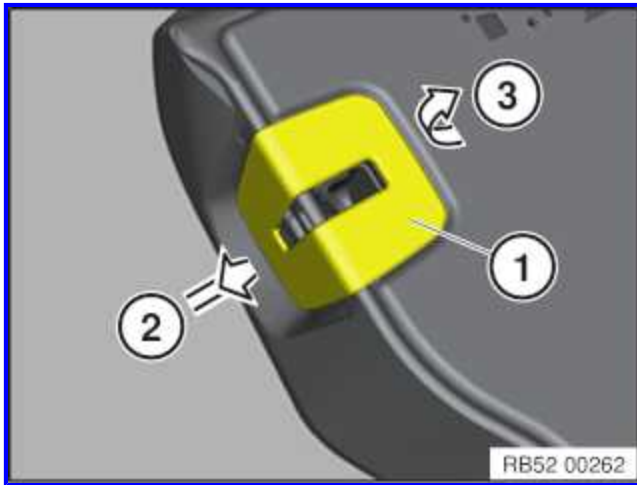

Unclip lock finisher (1) in direction of arrow (2) starting with backrest side section.


Remove lock finisher (1) in direction of arrow (3).

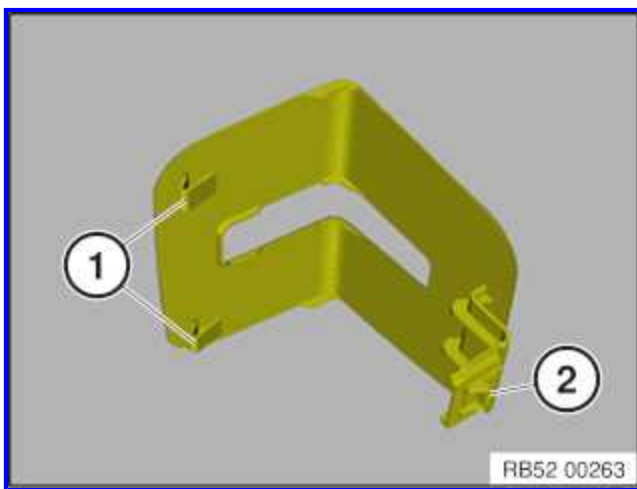

Installation note:

Retaining lugs (1) and (2) of cover must not be damaged.

Replace faulty cover.

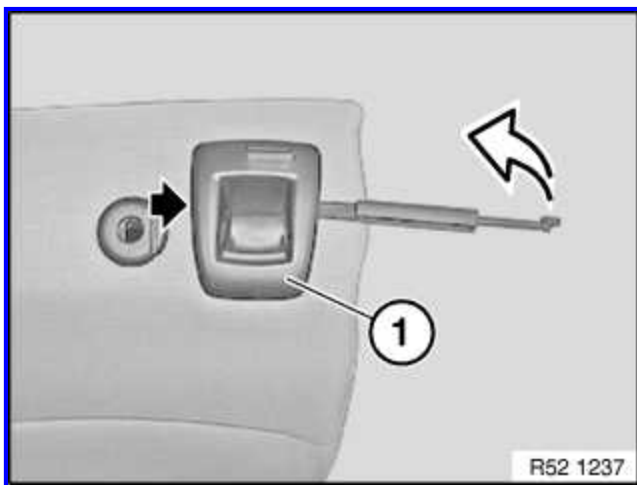

Important!

Risk of damage!

Insert plastic wedge from outside between cover (1) and lock.

Carefully raise outer side of cover (1) with plastic wedge upwards out of catch.

Raise inner side of cover (1) with plastic wedge out of catch.

Remove cover upwards.



Release screw (1).

Tightening torque [52 26 03AZ](#).

Remove outer mount (2).


Installation note:

Replace screw.

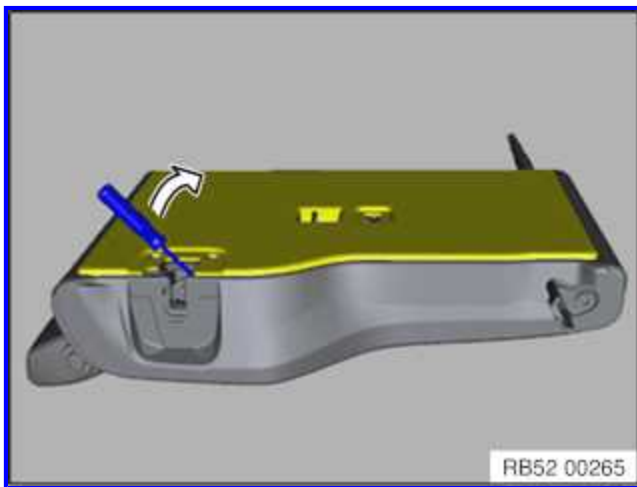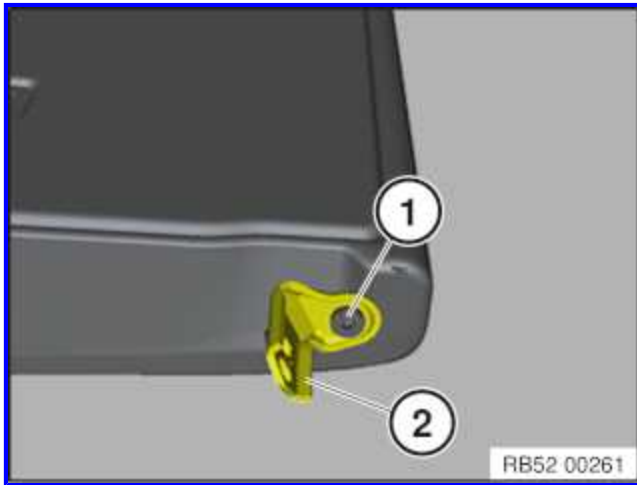

Lever out welt in marked area from backrest frame.

Remove backrest cover with padding from backrest frame.

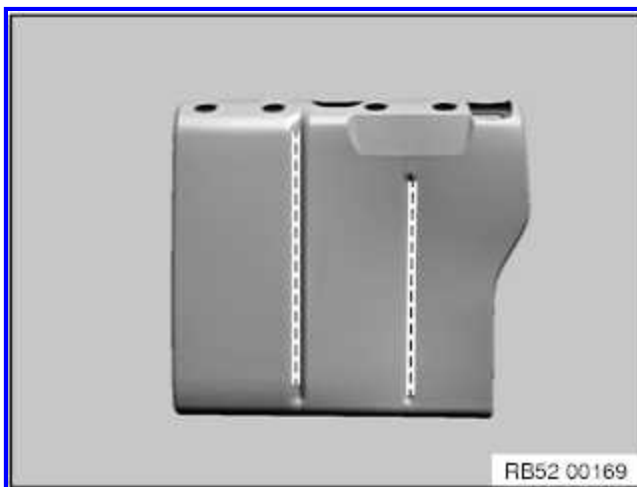

Detaching cover and upholstery:

- Separate all clamps on trim wires
- Remove cover from upholstery
- Remove remaining clamps from cover and upholstery


Replacing cover:

- Remove all trim wires from cover
- If necessary, cut pockets in new cover for trim wires
- Push trim wires into cover pockets

Installation note:

Insert new clamp (2) with special tool [52 0 050](#).

In so doing, enclose wire in padding and trim wire of cover and bend closed.

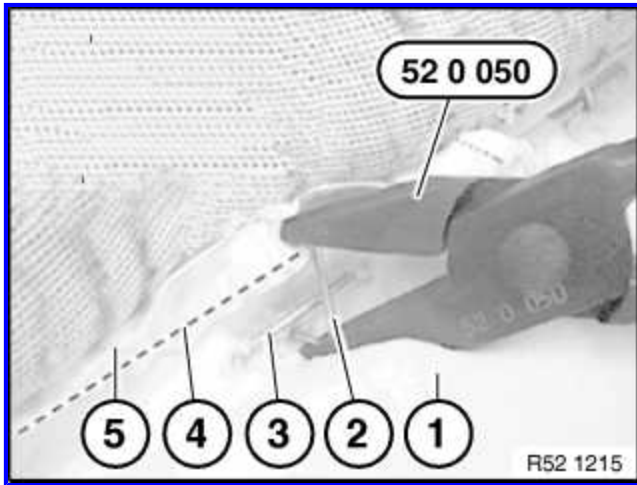

2. Clamp
3. Trim wire in upholstery
4. Trim wire in seat cover
5. Backrest cover