


25 11 041

Replacing ball socket for gearshift lever

**Necessary preliminary tasks:**

- Remove [gearshift lever](#).

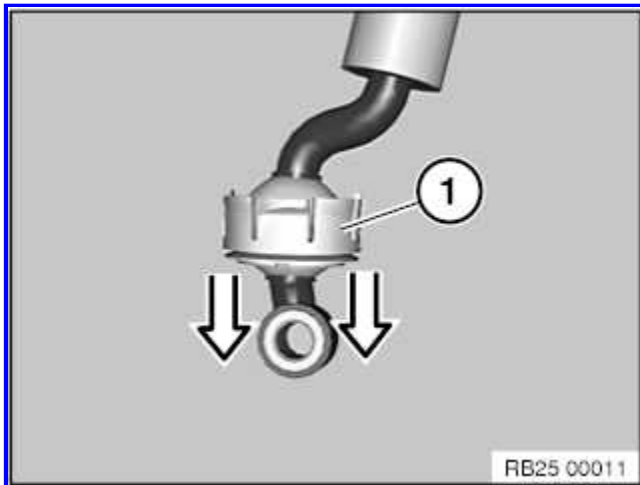

Pull ball socket (1) off the gearshift lever.

Installation note:

[Grease](#) ball joint.