

64 11 ...

## Replacing condensation water drain hose of heating and air conditioning system



### Special tools required:

- [23 4 050](#)
- [00 2 030](#)



### Necessary preliminary tasks:

- Remove [intake filter housing](#)
- Release [left charge air duct](#) at throttle valve
- Partially release [propeller shaft](#)
  - Disconnect propeller shaft at transmission.
  - Release centre mount.
  - Tie up the propeller shaft to the vehicle underbody.


#### **Note:**

A too high deflection angle on the propeller shaft can cause preliminary damage to the joint/propeller shaft!



*Note:*

Picture for example purposes.

Remove acoustic cover (1).

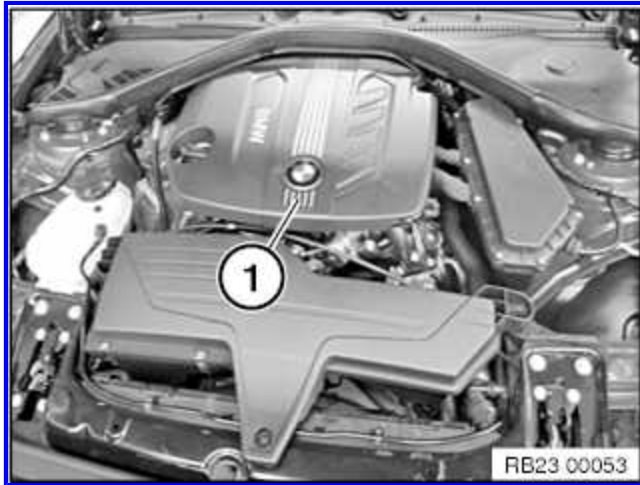


Slacken nut (1).  
Take off holder (2).

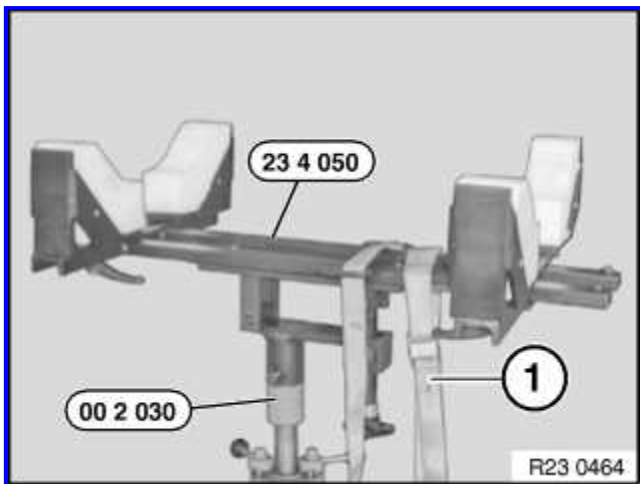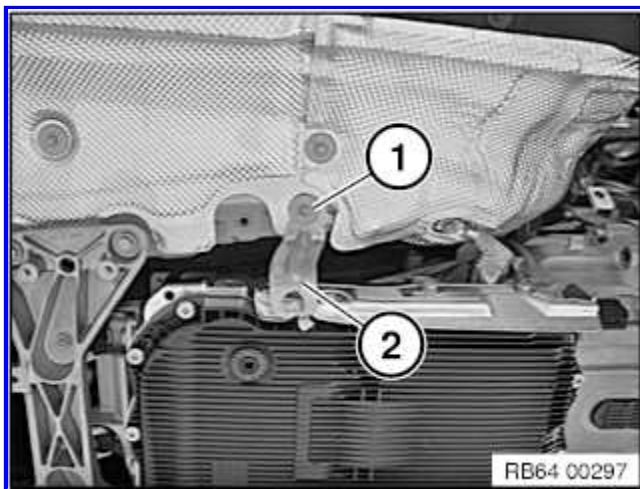

### Supporting transmission:

Support transmission with special tools [23 4 050](#), [00 2 030](#).  
Secure transmission to mounting with tensioning strap (1).


Release screws (1).  
Tightening torque [22 32 3AZ](#).  
Slightly lower the transmission.

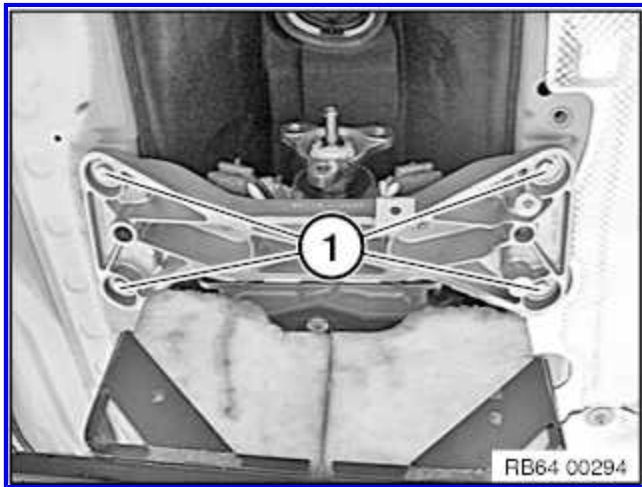

Release condensation water drain hose (1) in marked area and remove in direction of arrow.

*Installation note:*

Firstly secure condensation water drain hose (1) in marked area then lock it by turning slightly to left and right top.

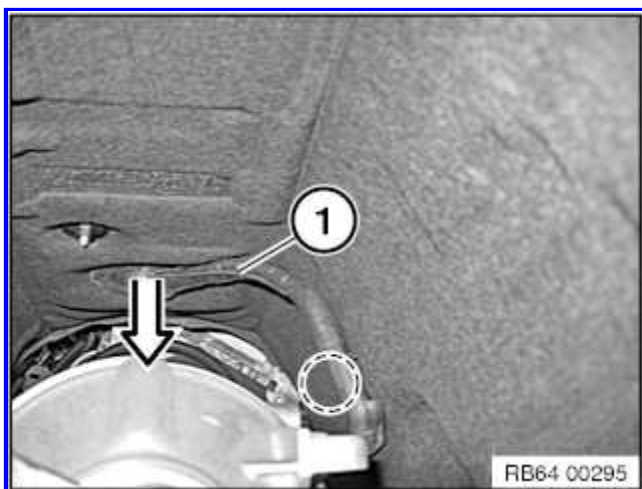

*Installation note:*

Guides (1) on condensation water drain hose (2) must be inserted exactly at marked points in retaining ring (3).

Make sure condensation water drain hose (2) is correctly fitted.

