

41 35 111**Stripping operations - Replacing rear side panel, right***Note:*


Owing to the different engine variants and equipment specifications, not all the components are taken into consideration.

The following list basically represents the removal sequence.

- Disconnect negative battery cable (job number: 61 20 900)
- Remove bumper trim panel (job number: 51 12 156)
- Remove centre bumper guide (job number: 51 12 825)
- Remove right bumper guide (job number: 51 12 828)
- Remove luggage compartment floor trim panel (job number: 51 47 101)
- Remove tail panel cover at top (job number: 51 46 050)
- Remove right rear light (job number: 63 21 265)
- Remove right luggage compartment wheel arch panel (job number: 51 47 161)
- Remove right rear wheel arch cover (job number: 51 71 041)
- Remove right lock striker (job number: 51 21 003)
- Remove rear seat (job number: 52 26 005)
- Remove backrest side section (job number: 52 26 008)
- Remove both backrests (job number: 52 26 020)
- Remove right rear left door sill cover strip (job number: 51 47 030)
- Remove the rear right rocker panel trim (outer) (job number: 51 47 072)
- Remove rear right door edge protection (job number: 51 72 010)
- Remove trim panel for cover on right side member (job number: 51 71 447)
- Remove trim strip on right roof frame (FR number: 51 13 280)
- Remove right gas pressure spring for rear lid (job number:

51 24 300)

- Remove right rear door
- Partially detach tailgate seal
- Remove holder for gas pressure spring on right
- Partially release wiring harness

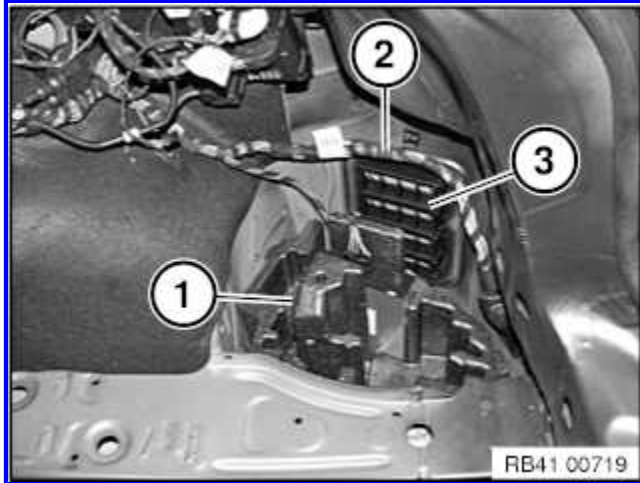

Remove the insert (1) for the control units.

Undo the wiring harness (2) from the tail panel and side wall and set aside.

Release latch mechanisms and remove rear ventilation (3).

Installation note:

The rear ventilation must not be damaged! (watertightness).

All latch mechanisms must engage audibly.