


POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

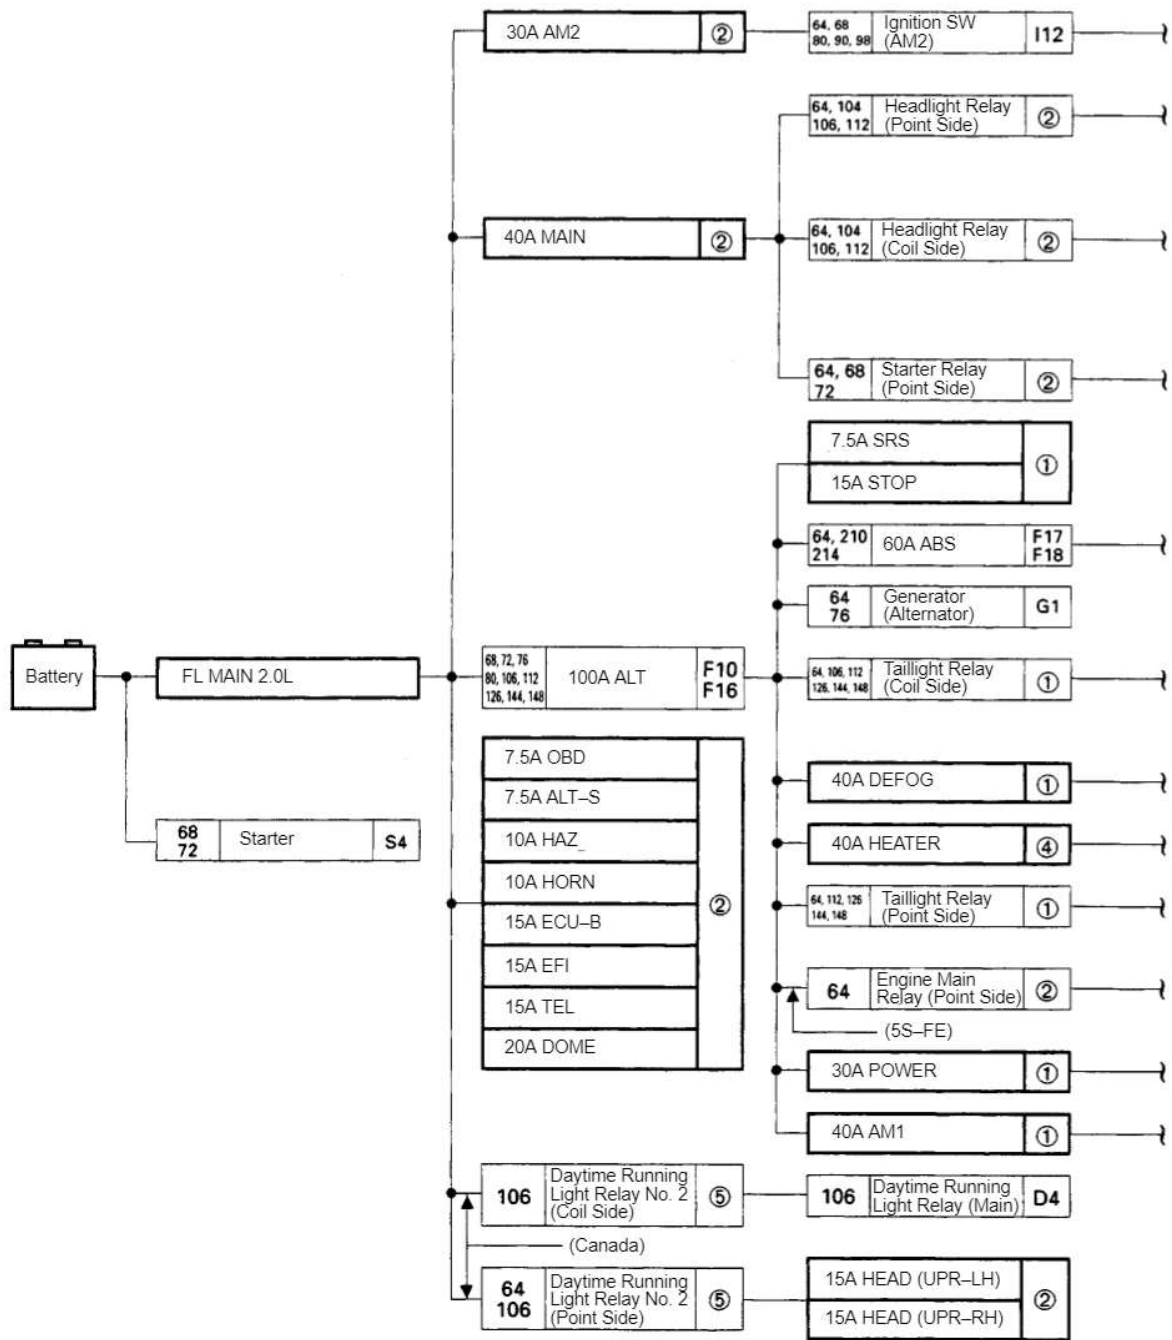


[LOCATION] (1) : J/B No. 1 (See page 20)
(3) : R/B No. 1 (See page 25)

(2) : J/B No. 2 (See page 22)
(7) : R/B No. 7 (See page 27)

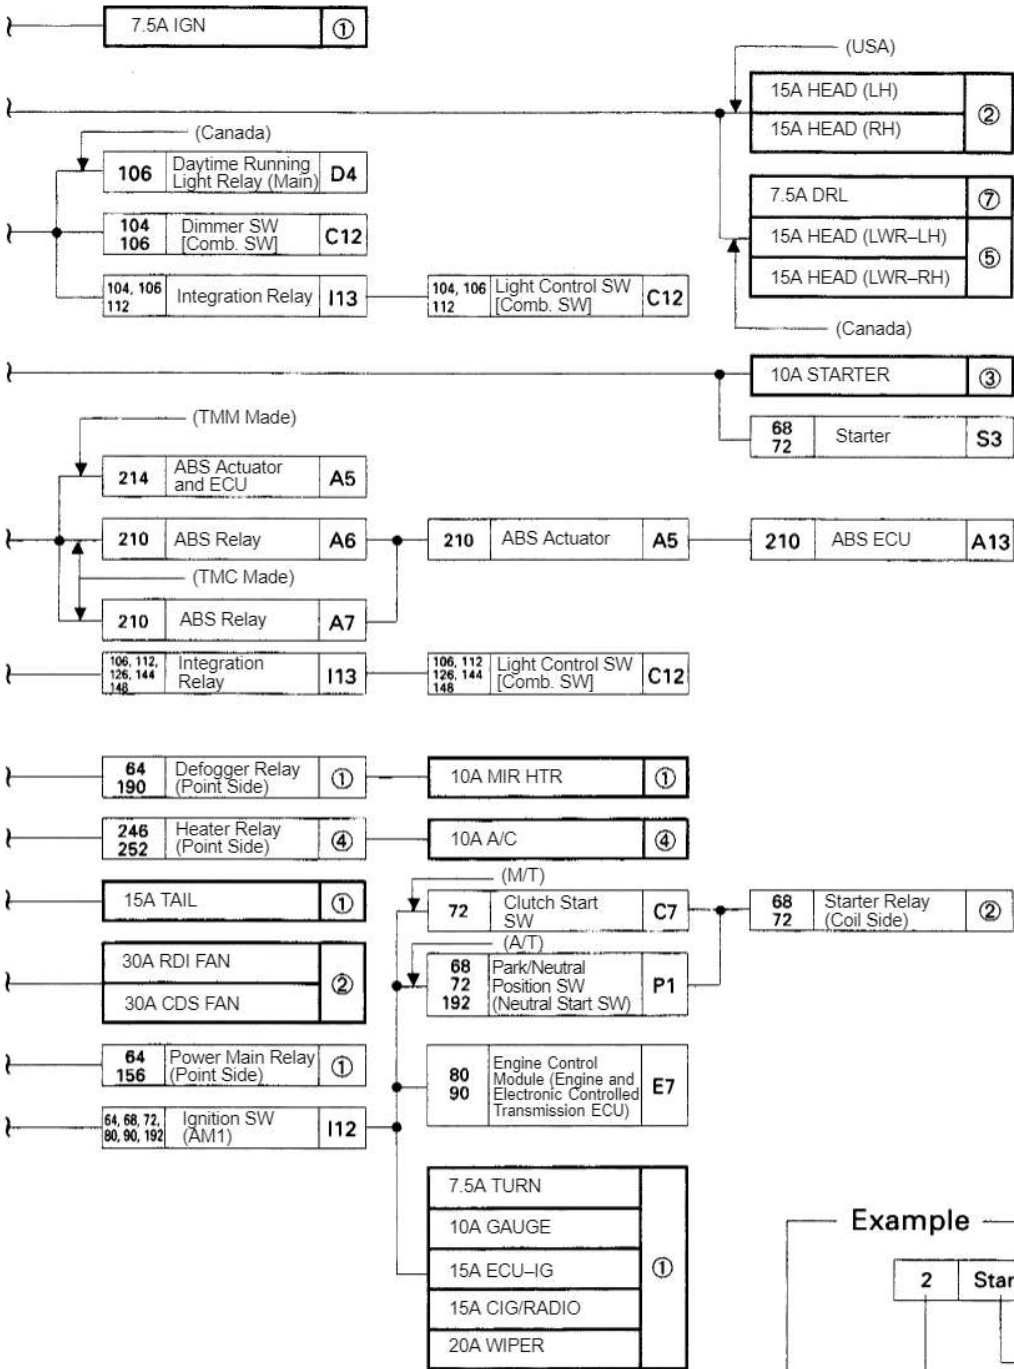

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

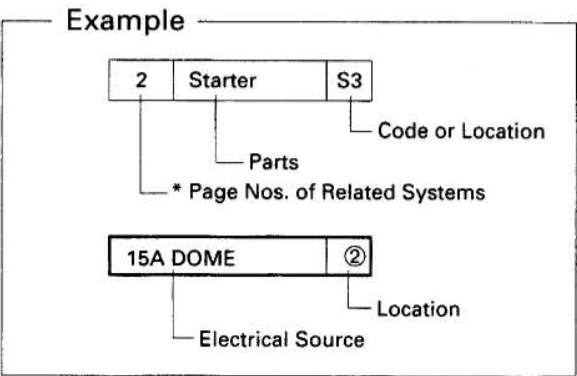

(4) : R/B No. 4 (See page 25) (5) : R/B No. 5 (See page 26) (6) R/B No. 6 (See Page 26)

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 1 (See page 25)
(7) : R/B No. 7 (See page 27) (8) : Fuse Box (F10, F17 See on page 28 29)

cardiagn.com

55

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

56

cardiagn.com

57

[illegible]

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 1 (See page 25)
(7) : R/B No. 7 (See page 27) (8) : Fuse Box (F10, F17 See on page 28 29)

cardiagn.com

59

[illegible]

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 1 (See page 25)
(7) : R/B No. 7 (See page 27) (8) : Fuse Box (F10, F17 See on page 28 29)

186	186	154	154	68 72	182	226 230	226 230	120 192 204 210 214	182 198 210	80 90 98	80 90	80 90 98	80	80 98 198	90 192 236	130 134 138	130 134 138	184 186	236	130 134 138	190	190	190	156 160 168	156 160 168	112 126	126	68 72	68 72	80 90 98 198 204	80 90 98 198 204	106																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																		
Rear Wiper Motor (WG)		Rear Wiper Relay (WG)		Remote Control Mirror LH		Remote Control Mirror RH		Starter (1MZ-FE)		Shift Lock ECU		Stereo Component Amplifier		Stereo Component Amplifier		Stop Light SW		VSV (for A/C Idle-Up)		VSV (for EGR System) (1MZ-FE)		VSV (for Fuel Pressure Up)		VSV (for Intake Air Control) (1MZ-FE)		Vehicle Speed Sensor (Speed Sensor)		Vanity Light LH		Vanity Light RH		Washer Motor		Water Temp. Sender		Diode		Noise Filter		Defogger Relay (Coil Side)		Defogger Relay (Point Side)		Power Main Relay (Coil Side)		Power Main Relay (Point Side)		Taillight Relay (Coil Side)		Taillight Relay (Point Side)		Starter Relay (Point Side)		Starter Relay (Coil Side)		EFI Main Relay (Coil Side)		EFI Main Relay (Point Side)		Headlight Relay (Coil Side)																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																						
R18	R19	R20	R21	S3	S5	S8	S9	S10	V1	V2	V3	V4	V5	V8	V9	W1	W2	①										②																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																						

[illegible]

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 1 (See page 25)
(4) : R/B No. 4 (See page 25) (5) : R/B No. 5 (See page 26) (6) : R/B No. 6 (See page 26)
(7) : R/B No. 7 (See page 27) (8) : Fuse Box (F10, F17 See on page 28 29)

POWER SOURCE (Current Flow Chart)

-Memo

cardiagn.com