

11.Drain Filter

A: SPECIFICATION

Drain valve is a non-disassembled part, so do not remove the drain filter from drain valve. Refer to “Canister” for removal and installation procedures.
<Ref. to EC(H4DOTC)-5, REMOVAL, Canister.>
<Ref. to EC(H4DOTC)-6, INSTALLATION, Canister.>