


Chevrolet Epica 2000 – 2006 fuse box diagram

Engine compartment fuse box

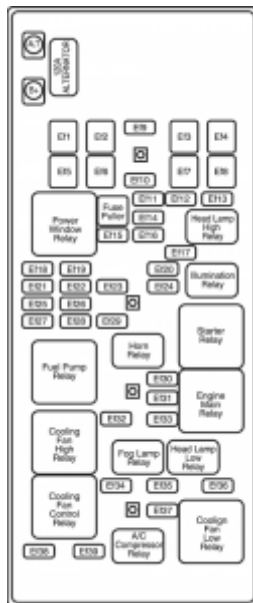


Chevrolet Epica – fuse box diagram – engine compartment

No.	A	Fuse Name	Usage
Ef1	30	HVAC BLWR	Blower Relay
Ef2	60	BCM BATT	BCM
Ef3	60	ABS	EBCM
Ef4	30	IGN1	Ignition Switch
Ef5	20	PWR WIDW	Driver's Power Window/Door Lock Switch
Ef6	20	COOL FAN HI	Cooling Fan High Relay
Ef7	20	COOL FAN LOW	Cooling Fan Low Relay
Ef8	30	ST/IG2	Ignition Switch, Starter Relay
Ef9	15	SPARE	Spare
Ef10	10	SPARE	Spare
Ef11	20	SPARE	Spare
Ef12	25	SPARE	Spare
Ef13	30	SPARE	Spare
Ef14	10	ABS WARNING	Not Used
Ef15	20	S/ROOF	Sun Roof Assembly
Ef16	15	ABS	EBCM, ABS Oil Feeding Connector
Ef17	15	HVAC BLWR	Head Lamp-LH/RH
Ef18	20	DRIVER'S PWR WIDW	Safety Power Window Assembly
Ef19	10	PWR MIRROR	Multi Function Switch

Ef20	10	ILLUM RT	Head Lamp-RH, Parking Lamp-RH, Tail Lamp-RH
Ef21	15	BCM	BCM
Ef22	25	IP FUSE	I/P Fuse Block
Ef23	20	STOP LAMPS	Brake Switch
Ef24	10	ILLUM LT	Head Lamp-LH, Parking Lamp-LH, Tail Lamp-LH, License Lamp
Ef25	30	PWR SEAT	Driver's Power Seat Switch
Ef26	20	FUEL	Fuel Pump Module
Ef27	15	ECM	ECM, Engine Main Relay, Automatic Transaxle
Ef28	20	IGN COIL	1~6 Ignition Coil
Ef29	15	HORN	Horn Relay
Ef30	15	ENG2	1~6 Injector, VSS, Canister Purge Solenoid valve
Ef31	20	ENG3	Not Used
Ef32	—	—	—
Ef33	15	ENG1	Petrol: EGR Solenoid Valve, Alternator, ECM, VIM Solenoid Valve, Oxygen Sensor, CMP Sensor, MAF Sensor, Canister Vent Solenoid Valve Diesel: Booster Pressure Actuator, CMP Sensor, Throttle Plate Actuator, EGR Solenoid, Fuel Heater Relay, WIF Sensor, Glow Plug Control Unit
Ef34	15	FRT FOG	Front Fog Lamp Relay
Ef35	10	LOW BEAM LT	Head Lamp-LH
Ef36	20	PWR AMP	Power Amplifier
Ef37	10	LOW BEAM RT	Head Lamp-RH, Multi Function Switch
Ef38	—	—	—
Ef39	10	A/C CMPSR	A/C Compressor Relay

Instrument Panel Fuse Block

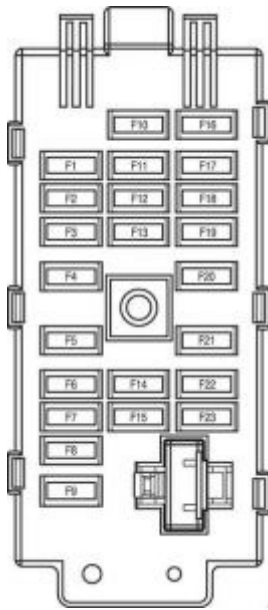


Chevrolet Epica – fuse box diagram – instrument panel

No.	A	Fuse Name	Usage
F1	10	CLUSTER2	I/P Cluster, Information Display Unit, BCM, RKE Module
F2	25	WIPER	Wiper/Washer Switch, Wiper Motor, Rain Sensing Unit
F3	15	ECU	Not Used
F4	10	HVAC	BCM, Blower Relay, MTC/FATC Switch, Mode Actuator, Recirculation Actuator
F5	10	CLOCK	Front Room Lamp/Sun Roof Switch, BCM, Digital Clock
F6	10	RADIO	Audio, Navigation Module
F7	20	HEATING MAT	Heating Mat Switch-Driver/Passenger
F8	20	AUDIO	Audio
F9	10	CLUSTER1	I/P Cluster, MTC/FATC Switch, Digital Clock, Information Display Unit, BCM, Key In Switch, RKE Module
F10	10	SDM	SDM
F11	10	AIR BAG	Passenger Air Bag/Seat Belt Warning Lamp, PPD Sensor
F12	10	WASHER	Washer/Wiper Switch
F13	10	BCM	BCM
F14	20	CIGAR	Extra Power Jack, Cigar Lighter
F15	20	SUB WOOFER	Woofer Speaker
F16	15	B/UP LP	Shift Selector Lever, PNP Switch, Back Up Switch, ECM Room Mirror, Brake Switch, I/P Cluster
F17	15	U/H J/B	ECM, Fuel Pump Module, Automatic Transaxle

F18	10	BCM	BCM
F19	10	OSRVM	Power Mirror-Driver/Passenger, MTC/FATC Switch
F20	15	A/D CONVERTER	Not Used
F21	15	SSPS	SSPS Module
F22	15	ALDL	DLC, Trunk Open Switch
F23	30	ESC	EBCM


BCM fuse block

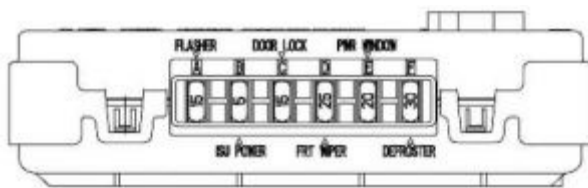

Chevrolet Epica – fuse box diagram – BCM fuse block

No.	A	Usage
A	15	Flasher
B	5	BCM Power
C	15	Door Lock
D	25	Front Wiper
E	20	Power Window
F	30	Defroster

Engine compartment fuse box (diesel)

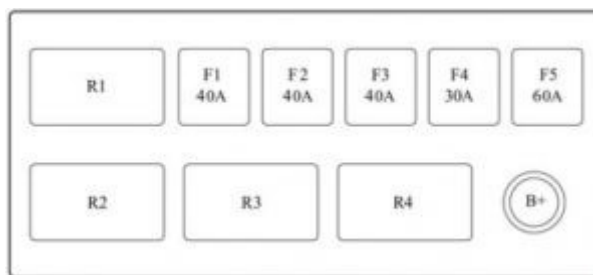

Chevrolet Epica – fuse box diagram – engine compartment (diesel)

No.	A	Usage
F1	40	PTC-3 relay
F2	40	PTC-2 relay
F3	40	PTC-1 relay
F4	30	Fuel filter heater relay
F5	50	Glow plug control unit
Relays		
R1	PTC-3 relay	
R2	PTC-2 relay	
R3	PTC-1 relay	

R4	Fuel filter heater relay
----	--------------------------