


A/C Filter

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


34.A/C Filter

A: REPLACEMENT

- 1) Remove the glove box lid assembly.
 - (1) Remove the glove box damper.
 - (2) Release the stoppers and remove the glove box lid assembly by pulling it toward you.

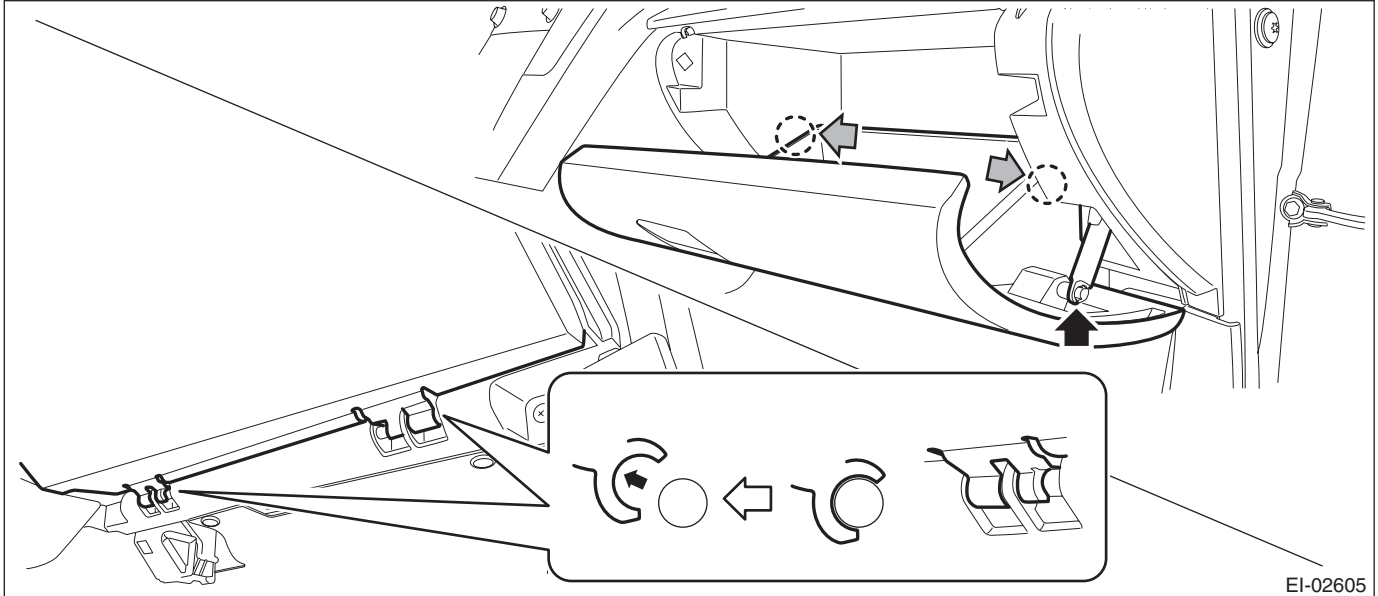


- 2) Remove the A/C filter.
 - (1) Release the lock and remove the A/C filter cover.

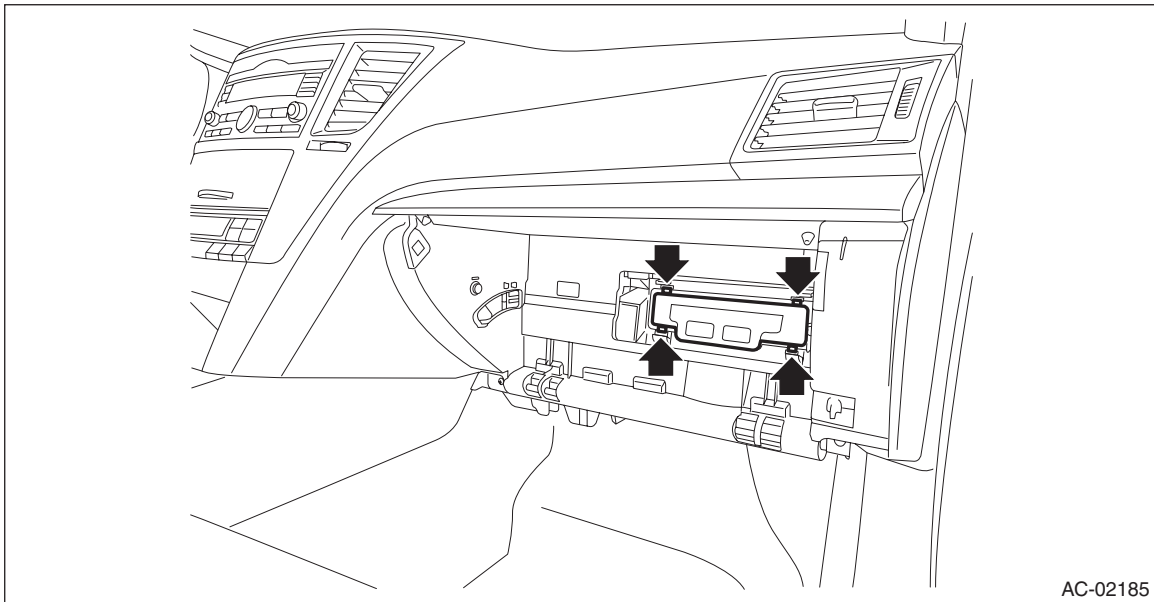

A/C Filter

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(2) Remove the A/C filter.

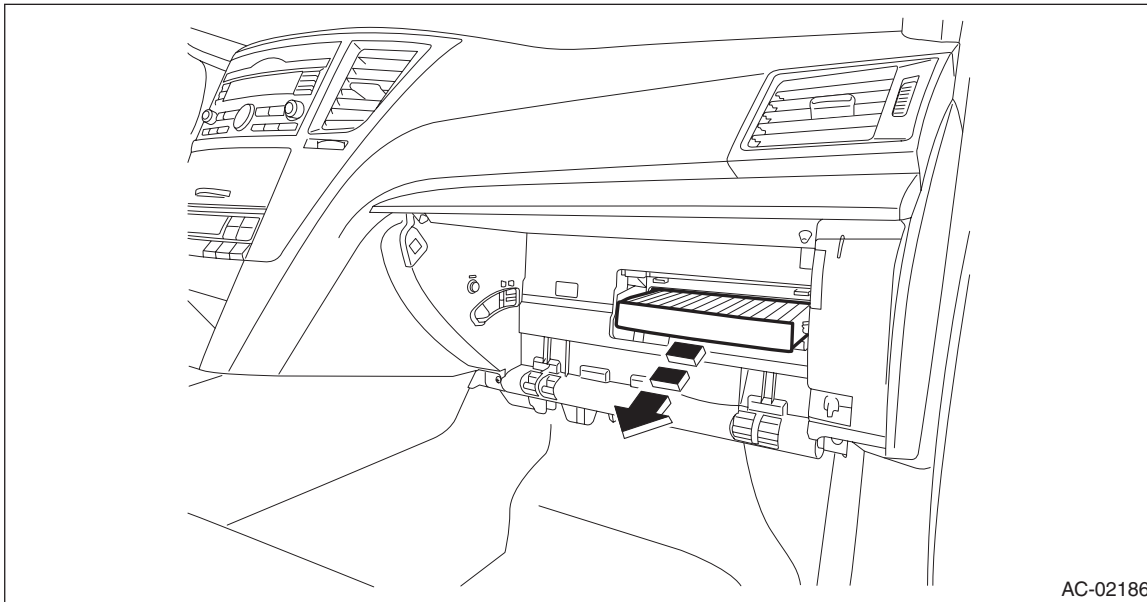

3) Install each part in the reverse order of removal.

B: INSPECTION

Check the A/C filter for dust or dirt, and clean or replace as necessary.