 
 


SST AND SSM

 
	Page
SST (SPECIAL SERVICE TOOLS)	C-2
SSM (SPECIAL SERVICE MATERIALS)	C-12

[illegible]

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	FI	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
	09286-46011	(Injection Pump Spline Shaft Puller)	C					●	●										
	09301-20020	(Clutch Guide Tool)	A							●									
	09302-30031	(Clutch Diaphragm Spring Height No. 3 Gauge)	B							●									
	09303-35011	(Input Shaft Front Bearing Puller)	A							●									
	09304-30012	(Input Shaft Front Bearing Replacer)	A							●									
	09307-30010	(Transmission Extension Housing Metal Replacer)	B								●								
	09308-00010	(Oil Seal Puller)	A								●				●				
	09308-10010	(Oil Seal Puller)	A	●							●	●			●				
	09312-20011	(Transmission Gear Remover & Replacer)	B								●								
	09313-30021	(Detent Ball Plug Socket)	A								●								
	09315-00010	(Clutch Release Bearing Remover & Replacer)	A							●									
	09316-60010	(Transmission & Transfer Bearing Replacer)	B								●				●				
	(09316-00010)	(Replacer Pipe)									●								
	(09316-00030)	(Replacer "B")													●				

 
 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	FI	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
		(Replacer "F")	(09316-00070)								●								
		(Transmission Oil Plug)	09325-20010		A						●	●	●						
		(Companion Flange Holding Tool)	09330-00021		A	●							●		●				
		(Clutch Diaphragm Spring Aligner)	09333-00012		B					●									
		(TOYOTA Automatic Transmission Tool Set)	09350-20013		B							●							
		(Manual Valve Lever Shaft Oil Seal Replacer)	(09361-30011)									●							
		(Guide Bolt)	(09362-30011)									●							
		(Oil Pump Body Setting Band)	(09363-20010)									●							
		(Piston Spring Compressor Set)	(09369-20040)									●							
		(Clutch Drum Thrust Play Gauge)	(09370-12010)									●							
		(Oil Seal Replacer)	(09388-20010)									●							
		(One-way Clutch Test Tool Set)	(09397-22020)									●							
		(Side Gear Thrust Washer Adjust Tool)	09411-22011		B										●				
		(Differential Side Washer Remover & Replacer)	09504-22010		B										●				

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	FI	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
	09506-30011	(Differential Drive Pinion Rear Bearing Cone Replacer)	B												●				
	09506-35010	(Differential Drive Pinion Rear Bearing Replacer)	B	●							●								
	09520-00031	(Rear Axle Shaft Puller)	A												●				
	09520-22011	(Differential Side Gear Shaft Puller)	A												●				
	09550-10012	("B" Replacer Set)	B												●				
	(09252-10010)	(No. 1 Replacer Handle)													●				
	(09557-10010)	(Differential Drive Pinion Front Bearing Replacer)													●				
	(09558-10010)	(Rear Axle Shaft Oil Seal Replacer)													●				
	09550-22011	(Rear Axle Bearing & Differential Tool Set)	B												●				
	(09550-00020)	(Handle)													●				
	(09550-00031)	(Replacer)													●				
	(09550-00040)	(Replacer)													●				
	(09550-00050)	(Replacer)													●				
	09556-30010	(Drive Pinion Front Bearing Remover)	B												●				

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	FI	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
	09557-22022	(Companion Flange Remover & Replacer)	A												●				
	09608-20012	(Front Hub & Drive Pinion Bearing Tool Set)	B								●								
	(09608-00080)	(Replacer)									●								
	(09608-03020)	(Handle)									●								
	09608-30012	(Front Hub & Drive Pinion Bearing Tool Set)	B														●		
	(09608-04030)	(Front Hub Inner Bearing Cone Replacer)															●		
	09608-30022	(Front Hub Bearing Replacer Set)	B												●				
	(09550-00050)	(Replacer)													●				
	(09608-05010)	(Handle)													●				
	(09608-05040)	(Replacer)													●				
	09608-35014	(Axle Hub & Drive Pinion Bearing Tool Set)	B								●				●				
	(09608-06020)	(Handle)									●				●				
	(09608-06090)	(Front Hub Outer & Steering Worm Bearing Replacer)									●								
	(09608-06100)	(Front Hub Outer Replacer)									●								

[illegible]

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	FI	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
		(Steering Rack Oil Seal Tool Set)	09630-24013		B												●		
		(Valve Cap Oil Seal Remover)	(09620-24010)														●		
		(Piston Ring Guide)	(09631-24020)														●		
		(Piston Ring Tool)	(09631-24030)														●		
		(Ring)	(09631-24041)														●		
		(Ring Adapter)	(09631-24050)														●		
		(Cylinder End Stopper Nut Wrench)	(09631-24060)														●		
		(Oil Seal Replacer)	(09631-24070)														●		
		(Rear Suspension Bushing Tool Set)	09710-22041		B										●				
		(Shock Absorber Overhaul Tool Set)	09720-00011		B									●					
		(Front Shock Absorber Ring Nut Wrench)	(09721-00071)											●					
		(Front Shock Absorber Stand)	(09721-00080)											●					
		(Lower Suspension Arm Bushing Remove & Replacer)	09726-10010		B										●				
		(Lower Suspension Arm Bushing Remover & Replacer)	09726-12022		B									●					

722

[illegible]

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	FI	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
					09842-30050	(Wiring "A" EFI Inspection)	B	●											
					09921-00010	(Spring Tension Tool)	A				●	●							
					09950-00020	(Bearing Remover)	B				●				●				
					09950-00030	(Bearing Remover Attachment)	B								●				
					09950-20016	(Universal Puller)	A	●			●				●				
					09992-00093	(Oil Pressure Gauge Set)	A					●							