

EXTERIOR/INTERIOR TRIM



	Page
1. General Description.....	2
2. Front Grille	
3. Front Under Cover	
4. Front Bumper	
5. Rear Bumper	4
6. Mud Guard	
7. Protector	
8. Cowl Panel	
9. Front Door Trim	
10. Rear Door Trim	
11. Glove Box	
12. Roof Rail	
13. Console Box	
14. Instrument Panel Assembly	
15. Upper Inner Trim	
16. Lower Inner Trim	
17. Rear Quarter Trim	
18. Sun Visor	
19. Roof Trim	
20. Rear Gate Trim	
21. Floor Mat	
22. Luggage Floor Mat	

A: COMPONENT S911001A05

- Vehicle without option code “KS” ☆




- Tightening torque: N·m (kgf-m, ft-lb)**
T: 93 (9.5, 69)

EI-2

GENERAL DESCRIPTION

Exterior/Interior Trim

- Vehicle with option code "KS" ☆

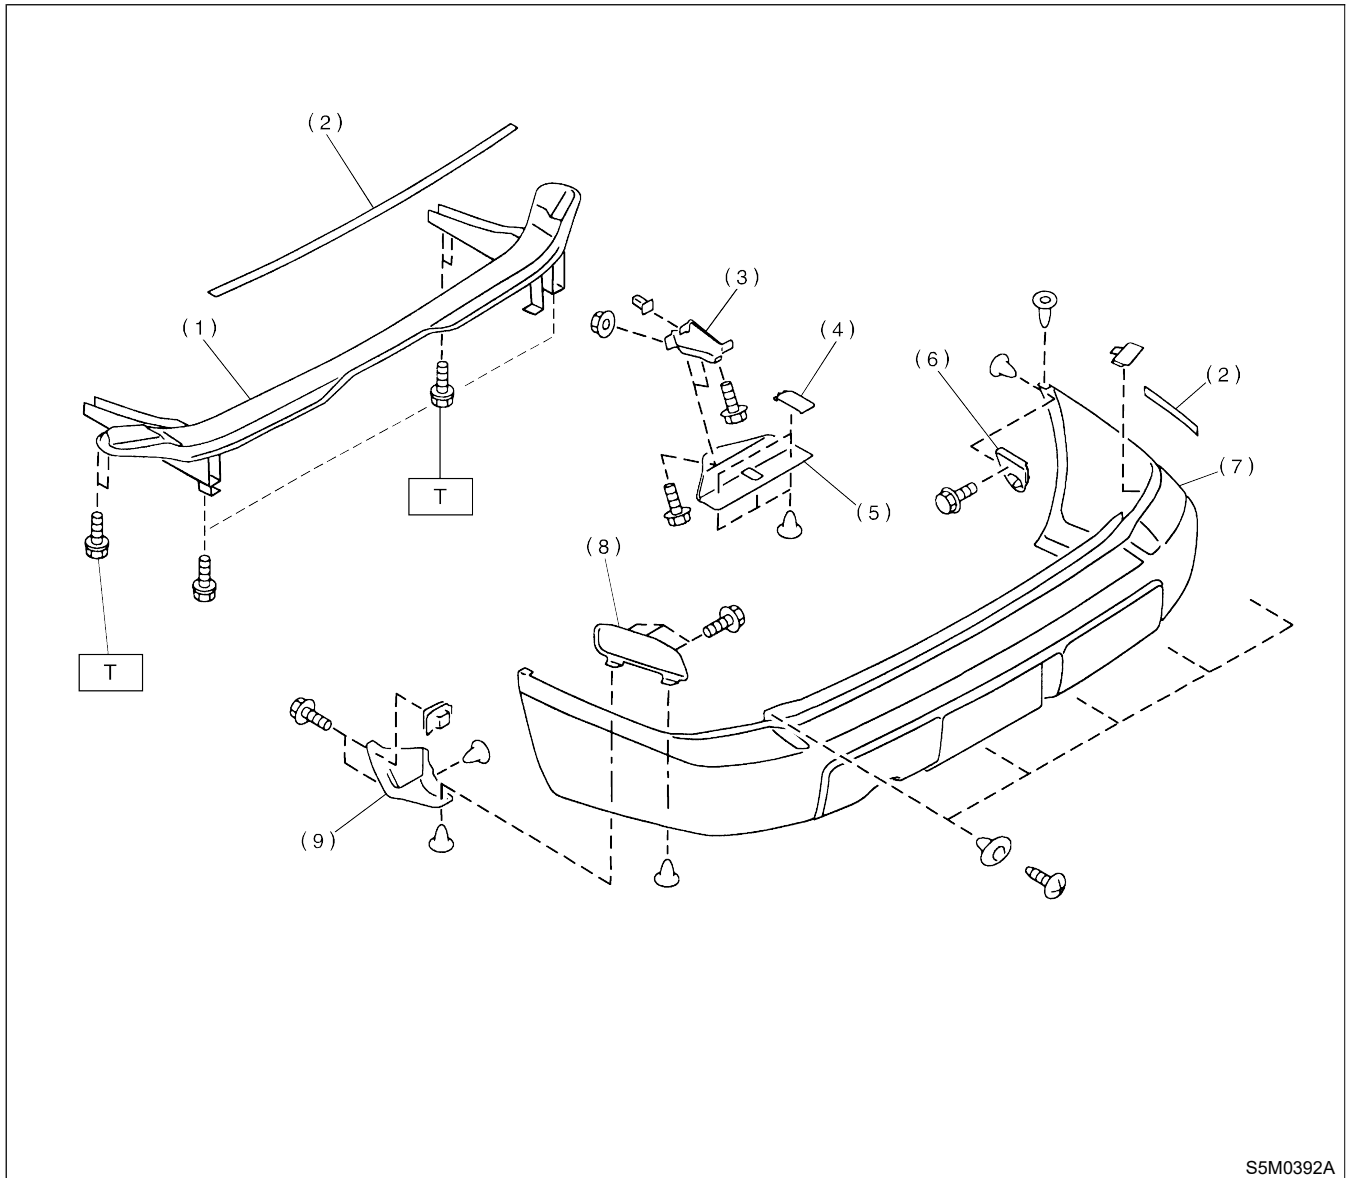

S5M0392A

- | | |
|--------------------------|------------------------|
| (1) Bumper beam | (5) Lower bracket |
| (2) Cushion | (6) Side upper bracket |
| (3) Lower center bracket | (7) Bumper face |
| (4) Rear bumper plate | (8) Bumper side plate |

Tightening torque: N·m (kgf-m, ft-lb)

T: 93 (9.5, 69)

☆: For option code, refer to ID section. <Ref. to ID-3, MODEL NUMBER PLATE, IDENTIFICATION, Identification.>

REAR BUMPER


5. Rear Bumper S911370

A: REMOVAL S911370A18


CAUTION:

- Handle bumper carefully to avoid damage to bumper face.
- Do not damage body during removal or installation of bumper.
- To avoid damage to bumper, lay removed bumper on sheet spread on the floor. Do not lay it directly on the floor.

- 1) Disconnect the ground cable from the battery.
- 2) Open rear gate.
- 3) Remove the five screws and the clip from the rear bumper.

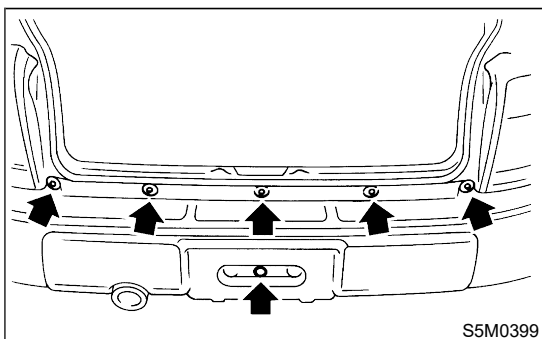


- 4) Disconnect license plate light and rear fog light (if equipped) connectors.
- 5) Remove bolts and clips from under side of bumper.

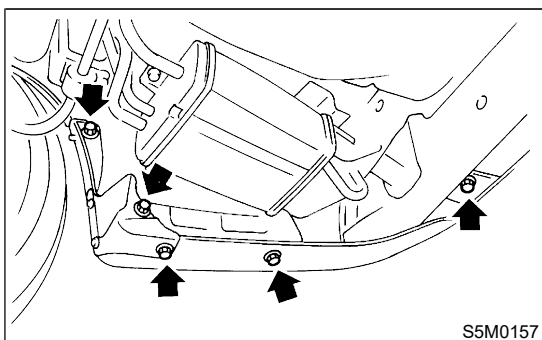

- 6) Remove bumper face and E/A foam.
- 7) Remove the canister. (with OBD model) <Ref. to EC(DOHC TURBO)-6, REMOVAL, Canister.> and <Ref. to EC(SOHC)-7, REMOVAL, Canister.>

- 8) Remove bolts from bumper stay.

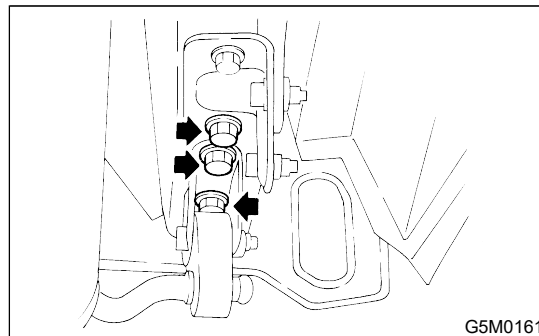

- 9) Remove rear bumper beam.