



Operating Manual

MMI Radio



Foreword

Thank you for choosing the MMI Radio System - we value your trust in us.

With your new Audi, you are receiving a vehicle with a state-of-the art system that allows you to change the vehicle's settings and operate the electronic equipment from a central location using the MMI.

We recommend that you read this guide carefully so that you quickly get to know all of the functions and possibilities that the MMI offers and are able to make full use of them while driving.

Please note that these instructions are a supplement to your vehicle Owner's Manual and should only be used in conjunction with your current vehicle Owner's Manual.

We hope you enjoy driving your Audi.

AUDI AG

Table of contents

About this Operating Manual . . .	3	Dialing a phone number	26
Overview	4	Accessing the directory	29
Controls at a glance	4	Using a contact	30
Traffic safety information	4	Importing/exporting contacts	30
Care information	5	Storing a new contact	31
MMI control panel	6	Storing in favorites	31
Switching the MMI on and off	6	Additional settings	31
Adjusting the volume	6	Troubleshooting	33
Operating	6	Listening to the radio	34
Menus and symbols	7	Using the radio	34
Multifunction steering wheel	8	Radio functions	35
Operating	8	Additional settings	36
Using the telephone	9	Troubleshooting	36
Playing media	10	Playing media	37
Voice recognition system	12	Accessing media	37
Operating	11	Media functions	37
Information about the command overviews	13	Additional settings	38
Global commands	13	Index	40
Telephone	13		
Radio	14		
Media	14		
Media drives/connections	15		
Introduction	15		
Notes	15		
Audi music interface	17		
AUX Input	18		
Supported media and file formats	19		
Troubleshooting	20		
System settings	21		
Setting the clock time/date	21		
Adjusting the sound	21		
Adjusting the system volume	22		
Restarting the MMI (reset)	22		
Additional settings	22		
Using the telephone	24		
Introduction	24		
Connecting a cell phone with Bluetooth . . .	24		
Connecting a cell phone	25		
Selecting the telephone	26		

This manual contains important information, tips, suggestions and warnings for using your vehicle.

Keep this manual in your vehicle at all times. This is especially important if you loan your vehicle to others or sell it.

Some sections in this manual do not apply to all vehicles. When this is the case, the beginning of the section indicates the **validity**, for example “Applies to vehicles: with multifunction steering wheel”. Optional or vehicle-specific equipment is also identified with an asterisk “*”.

The **illustrations** in this manual are a guide. Some of the details in your vehicle may differ from the illustration.

There is a **Table of Contents** at the beginning of this manual that lists all of the topics covered in the order that they appear. There is also an **alphabetical Index** at the end of this book.

All **directions**, such as “left”, “right”, “front” and “rear”, are based on the vehicle's direction of travel.

* Optional or vehicle-specific equipment.

► The section continues on the next page.

⇒ ⚠ Cross reference to a “WARNING” within a section. If a page number is indicated, the WARNING is located outside of the section.



WARNING

Text with this symbol contains information about safety and how to reduce the risk of serious personal injury or death.



Note

Text with this symbol contains information about reducing the risk of damage to your vehicle.



For the sake of the environment

Text with this symbol contains information on protecting the environment.



Tips

Text with this symbol contains additional useful information.

Overview

Controls at a glance

The Multi Media Interface, or MMI for short, combines various systems for communication* and entertainment in your Audi.



Fig. 1 MMI controls

You can operate the MMI using the MMI control panel or the multifunction steering wheel*
⇒ fig. 1:

- ① Multifunction steering wheel 8
- ② Driver information system 8
- ③ MMI Display
- ④ Button for retracting/extending the MMI display
- ⑤ On/Off knob 6
- ⑥ Buttons for opening menus 6
- ⑦ MMI control panel 6

 **Tips**

– Please note that this manual only describes MMI components. You can find additional information on operating your vehicle in your vehicle Owner's Manual.

- This manual describes the **equipment range** specified for this model at the time of printing. Individual equipment options described may only be available at a later date or may only be offered in certain countries.
- On vehicles with right-hand drive steering*, the layout of the system components differs somewhat from what is shown here ⇒ fig. 1. The symbols for the controls are the same.

Traffic safety information

Audi recommends only performing certain functions, such as entering a destination, when the vehicle is stationary. Always be prepared to stop operating the MMI system in the interest of your safety and that of other road users.

**WARNING**

- Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Only use the MMI when traffic conditions permit and always in a way that allows you to maintain complete control over your vehicle.
- Adjust the volume of the audio system so that signals from outside the vehicle, such as police and fire sirens, can be heard easily at all times.
- Obey all applicable laws regarding use of telephones in vehicles.

Care information

For information on cleaning and caring for the Infotainment components, refer to the *Cleaning and Protection* chapter of your vehicle Owner's Manual.

MMI control panel

Switching the MMI on and off

The MMI switches on and off automatically with the ignition. It can also be switched on or off manually.

- **Switching on manually:** Press the On/Off knob ⑤ briefly ⇒ page 4, fig. 1. **Or:** Press the **MENU** button or one of the buttons used to open a menu ⑥.

When the system is switched on, the last menu that was selected is displayed and the last audio source that was selected begins playing.

- **Switching off manually:** Press and hold the On/Off knob until the MMI switches off. If the MMI has been switched off manually, it does *not* switch on again automatically the next time the ignition is switched on.

The MMI can still be operated for approximately ten minutes after switching the ignition off. If you do not press any buttons or the control knob on the MMI control panel within this time, the MMI switches off automatically.

Tips

The MMI switches off automatically if the engine is not running and the battery is low.

Adjusting the volume

You can set the volume of the selected audio source to high, low or mute using the On/Off knob.

You can change the volume of an audio source or a system message when the sound is playing.

- ▶ **Increasing or decreasing the volume:** Turn the On/Off knob ⑤ ⇒ page 4, fig. 1 to the right or left.
- ▶ **Muting or pausing:** Press the On/Off knob briefly. **Or:** Turn the On/Off knob to the left.
- ▶ **Unmuting or resuming:** Press the On/Off knob briefly. **Or:** Turn the On/Off knob to the right.

Tips

Volumes that are too high or too low are automatically adjusted to a set level when the MMI is switched on.

Operating

You can easily access functions in the MMI using an intuitive and standardized operating process.

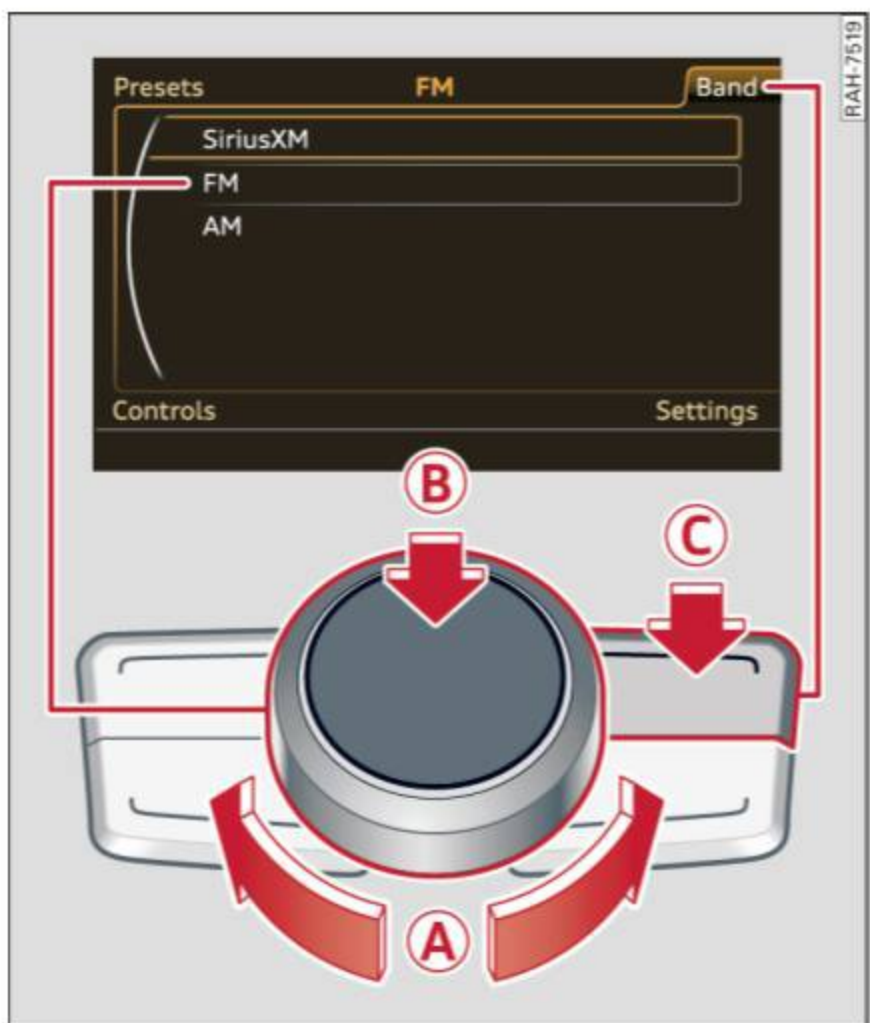


Fig. 2 Operation

Selecting and confirming a function

- ▶ **A Selecting a function:** Turn the control knob to the desired function.
- ▶ **B Confirming a selection:** Press the control knob.

Calling up a function in a corner of the display

- ▶ Press the control button **C** that corresponds to that corner of the display. For example, the upper right control button corresponds to the upper right corner of the display.

Opening the main menu

- ▶ Press the **MENU** button ⑦ ⇒ page 4, fig. 1. The MMI menu (such as **Radio**) is displayed.

Opening a menu directly

- Press the button ⑥ ⇒ *page 4, fig. 1* in the direction of the desired menu (such as **RADIO** or **MEDIA**).

Returning to functions at higher levels

- Press the **BACK** button ⑦.

Menus and symbols

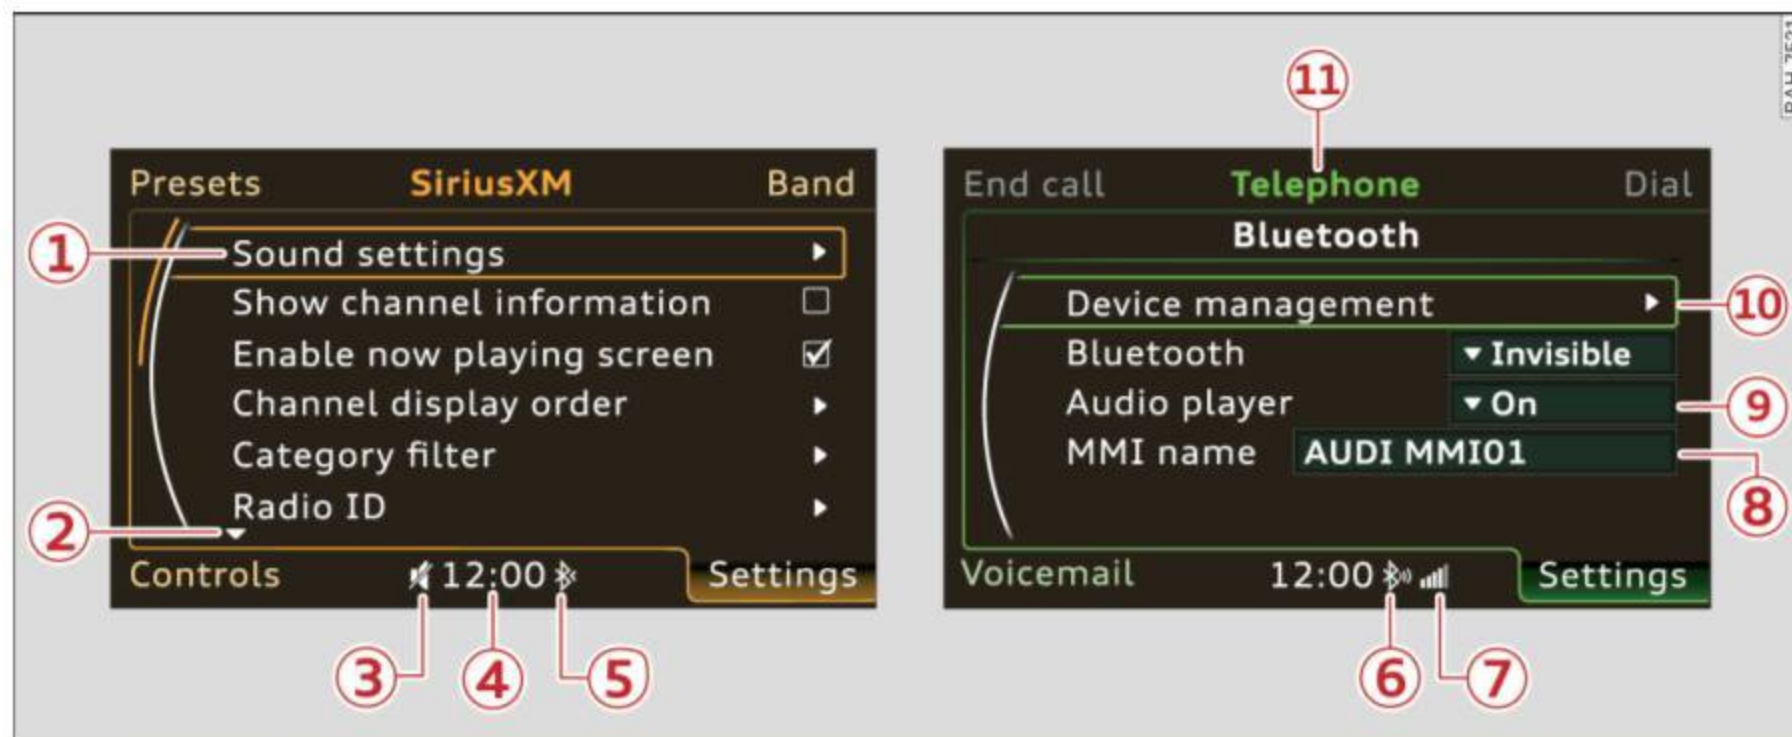


Fig. 3 Menus and symbols

	Symbol/Description	Explanation
①	Selected text	Selected function
②	Arrow down or up	Additional functions when scrolling forward/back
③	Mute	The audio source is muted ⇒ <i>page 6</i>
④	Time	Set time ⇒ <i>page 21</i>
⑤	Bluetooth*	Bluetooth is switched on ⇒ <i>page 32</i>
⑥	Bluetooth*	Bluetooth device connected ⇒ <i>page 16</i> or ⇒ <i>page 25</i>
⑦	Signal strength bars	Cell phone network signal strength for a connected cell phone ⇒ <i>page 25</i>
⑧	Input field	Information that can be changed using the letter/number speller ⇒ <i>page 27</i>
⑨	Selection list	Settings for the selected function that are accessed by pressing the control knob
⑩	Arrow	Submenu with additional functions that are accessed by pressing the control knob
⑪	Title line	Selected menu (such as Telephone)

Multifunction steering wheel

Operating

Applies to vehicles: with multifunction steering wheel

You can operate various MMI functions and the driver information system, change the volume, and turn the voice recognition system on and off with the multifunction steering wheel.



Fig. 4 Driver information system

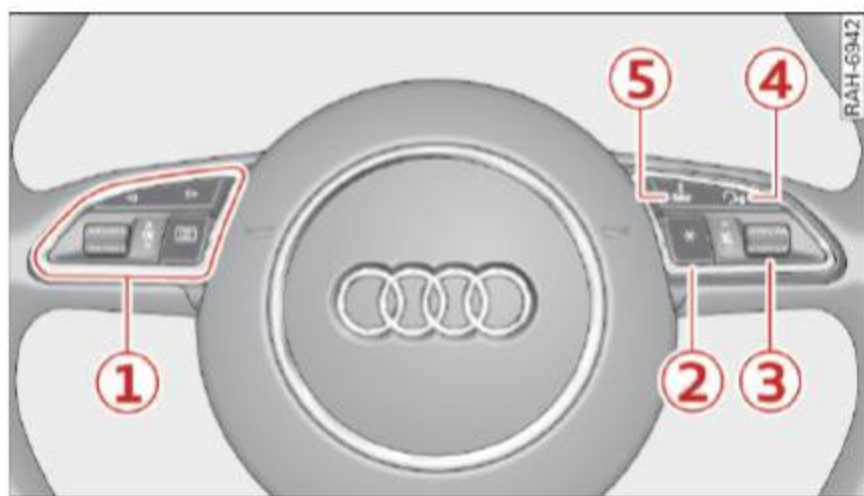


Fig. 5 Controls on the multifunction steering wheel

Requirement: The ignition and the MMI must be switched on ⇒ page 6.

① Operating the driver information system

The driver information system contains several tabs **A** that display various information **B**.

- **Switching tabs:** Press the button to the left/right.
- **Selecting a function:** Turn the left thumbwheel to the desired function.
- **Confirming a selection:** Press the left thumbwheel.

- **Quick scrolling through lists:** Turn the left thumbwheel quickly.
- **Displaying/exiting the submenu:** Press the button .

The following tabs are available, depending on vehicle equipment:

- 1. Tab: Vehicle information, assistance systems
- 2. Tab¹⁾: Indicator lights, driver messages, speed warning system
- 3. Tab: Radio/media ⇒ page 10
- 4. Tab: Telephone* ⇒ page 9

② Programmable steering wheel button

- **Selecting a function:** Press the button.
- **Changing a function:** Select the button > Car > Car systems* control button > Vehicle settings > Steering wheel button program.

③ Adjusting the volume

You can adjust the volume of an audio source or a system message (for example, from the voice recognition system) when the sound is playing.

- **Increasing or decreasing the volume:** Turn the right thumbwheel up or down.
- **Muting or pausing:** Turn the right thumbwheel down. **Or:** Press the right thumbwheel.
- **Unmuting or resuming:** Turn the right thumbwheel up. **Or:** Press the right thumbwheel.

④ Switching the voice recognition system on or off

- **Switching on:** Press the button briefly on the multifunction steering wheel. Say the desired command after the **Beep**.
- **Switching off:** Press and hold the button. **Or:** Say the command **Cancel**.

For more information about the voice recognition system, refer to ⇒ page 12.

The button ⑤ does not have a function assigned to it.

¹⁾ The second tab is only visible if at least one indicator light or message is shown or if that system is switched on.

Using the telephone

Overview

Applies to vehicles: with a multifunction steering wheel and telephone



Fig. 6 Directory

Requirement: A cell phone must be connected to the MMI ⇒ *page 25* and the telephone tab must be displayed ⇒ *page 8*.

► Select: the button.

- **Calling a contact in the directory:** Select **Directory**. Select and confirm a contact.
- **Calling a contact in the call list:** Select **Recent calls**. Select and confirm a contact.

Directory contacts: The driver information system only displays directory contacts that have a phone number stored. If several phone numbers are stored with a contact, the list of stored numbers is displayed first when the entry is selected. For more information about the displayed symbols, refer to ⇒ *page 29*.

Recent calls: The recent calls list contains all incoming, outgoing and missed calls ⇒ *page 26*, *fig. 22*.

Tips

- The telephone functions can only be controlled with the multifunction steering wheel if the telephone equipment was installed *at the factory*.
- The telephone and call options depend on the cell phone service provider and the cell phone. You can obtain more information from your cell phone service provider.

Incoming call

Applies to vehicles: with a multifunction steering wheel and telephone

Caller information: The *name*, *phone number* or **Unknown** appears in the driver information system display depending on if the caller has been stored in the directory and if the phone number has been transmitted.

- **Accepting a call:** Press the left thumbwheel when there is an incoming call.
- **Rejecting a call:** Select and confirm **Reject** when there is an incoming call.
- **Ending a phone call:** Select and confirm **End call**.

During a phone call

Applies to vehicles: with a multifunction steering wheel and telephone

Requirement: The **3-way calling** function must be switched on for some of the options listed ⇒ *page 32* and there must be a call in progress.

- **Making an additional call:** Select **Hold** > button > **Directory** or **Recent calls** > *an entry in the list*.
- **Accepting an incoming call when there is an active call and a call on hold:** Select and confirm **Replace**. The active call is replaced with the incoming call.

Additional functions include:

Mute: If you select and confirm this function, the other person on the phone cannot hear you. You can hear the other person.

Holding or resuming a call: You can put your existing phone call on hold and resume it.

Swap call: You can alternate between two phone calls at the same time. One of the calls will be on hold. **End call** ends the active phone call. A call that was placed on hold stays on hold and can be taken off hold with **Resume**.

Conference: A party on hold and up to five active parties (depending on the network) can be added to a conference call. To make an additional call, put all participants in the current conference call on hold using **Hold**. By pressing the button, ►

you can make an additional call from the directory or the recent calls list. **Resume** takes all parties off hold.

Tips

The **Call waiting** function must be activated in your cell phone and in the MMI to be alerted to an incoming call during an active call. The call options depend on the cell phone and service provider. You can obtain more information from your cell phone service provider.

Listening to the radio

Applies to vehicles: with multifunction steering wheel



Fig. 7 Radio menu

Requirement: The radio/media tab must be displayed ⇨ *fig. 7*.

- ▶ **Selecting a station from the station list:** Select and confirm a radio station.
- ▶ **Updating the station list¹⁾:** Select and confirm **Update station list**

The following functions are available when you press the  button:

- **Selecting the frequency band:** Select and confirm a frequency band.
- **Selecting a station from the presets list:** Select and confirm **Presets** and then select a radio station.
- **Accessing media using the source overview:** Select and confirm an audio source.

Playing media

Applies to vehicles: with multifunction steering wheel

Requirement: A media drive must contain audio files ⇨ *page 15* and the radio/media tab must be displayed.

- ▶ **Playing an audio file:** Select and confirm a file.
- ▶ **Pausing or resuming playback:** Press the right thumbwheel. To resume playback, press the right thumbwheel again.
- ▶ **Restarting playback of an audio file:** Select the track that is currently playing, if necessary. Press the left thumbwheel.
- ▶ **Moving one level up in the folder structure:** Select and confirm **Go up**.

The following functions are also available when you press the  button:

- **Selecting a source:** Select and confirm a source such as Audi music interface*.
- **Selecting a radio station using the source list:** Select and confirm a frequency band and then select a station from the station list.

Tips

The media drives do not play files that are protected by DRM and that are identified with the symbol .

¹⁾ Applies to the AM frequency band.

GLOBAL COMMANDS

- Telephone
- Directory
- Radio
- Media
- Help
- Help Speech Dialogue System
- Help Telephone
- Help Radio
- Help Media

- Call (XY)
- Enter number
- Redial
- Line (XY)
- Previous | next page
- Cancel



RAM-7536

TELEPHONE

- Enter number
- Dial number
- Delete number | correction
- Call (XY)
 - business | private | land line | mobile

- Call list
- Redial
- Call mailbox



RADIO

- FM | AM | SIRIUSXM
- Station "BBC Radio 2"
- Ensemble (XY)
- Frequency (XY)
- Station list | Memory list
- Traffic programme on | off



MEDIA

- CD
- SD card
- Audi music interface
- Bluetooth
- Tracks | Artist | Albums | Playlists | Audiobooks | Videos | Podcasts | Genres | Composers
- Folder up



Fig. 8 Command overview

Voice recognition system

Operating

Applies to vehicles: with voice recognition system

You can operate many Infotainment functions conveniently by speaking.



Fig. 9 Talk button and right thumbwheel

Requirement: The ignition and the MMI must be switched on ⇒ *page 6*, there must be no phone call in progress and the parking system must not be active.

- **Switching on:** Briefly press the  ⇒ *fig. 9* button on the multifunction steering wheel* and say the desired command after the **Beep**.
- **Switching off:** Press and hold the  button.
Or: Press one of the buttons to open a menu on the MMI control panel  ⇒ *page 4, fig. 1*.
- **Canceling:** Press the  button and say a new command. **Or:** Say the command **Cancel**.

Input assistance

The system guides you through the input with visual and audio feedback.

- **Visual input assistance:** After turning on voice recognition, a display with a selection of possible commands appears in the MMI display. The command display can be turned on or off in the main menu using the **Setup MMI** control button.
- **Audio input assistance:** To have the possible commands read, turn the voice recognition system on and say **Help**.

For the system to understand you:

Speak clearly and distinctly at a normal volume. Speak louder when driving faster.

Emphasize the words in the commands evenly and do not leave long pauses.

Do not speak a command when the voice recognition system is making an announcement.

Close the doors, the windows and the sunroof* to reduce background noise. Make sure that passengers are not speaking when you are giving a voice command.

Do not direct the air vents toward the handsfree microphone, which is on the roof headliner near the front interior lights.

Only use the system from the driver's seat because the handsfree microphone is directed toward that seat.

Additional settings

Additional settings, such as **individual voice training** based on your voice, the **Command display** or the **prompt volume**, can be adjusted in the main menu using the **Setup** control button ⇒ *page 22*.



WARNING

- Direct your full attention to driving. As the driver, you have complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over your vehicle in all traffic situations.
- Do not use the voice recognition system in emergencies because your voice may change in stressful situations. It may take longer to dial the number or the system may not be able to dial it at all. Dial the emergency number manually.



Tips

- The dialog pauses when there is an incoming phone call and will continue if you ignore the call. The dialog ends if you answer the call.
- You can select an item in the list using either the voice recognition system or the control knob.

Information about the command overviews

Applies to vehicles: with voice recognition system

The following overviews describe the commands that can be used to operate the MMI using the voice recognition system.

Alternative commands are separated using a “|”, for example say: **Telephone** | (or) **Directory** | (or) **Radio**.

Sequences of commands used to perform an action are identified with a “>”, for example say: **Station (XY)** > (then) **Line (XY)**.

The majority shown are main commands. This system also recognizes synonyms in certain cases. For example, for **Call business**, you can also say **Call office number**, **Call number at work** or **Call work**.

Global commands

Applies to vehicles: with voice recognition system

You can always use the global commands, regardless of the menu selected.

Function	Say:
Opening a menu	Telephone Directory Radio Media
Having the possible commands read aloud	Help Help speech dialog system Help telephone Help radio Help media
Telephone functions	Call (XY) , for example Call John Smith Enter number Redial Directory
Selecting an entry from a list	Line (XY)
Scrolling through a list	Next page Previous page
Switching the voice recognition system off	Cancel

Telephone

Applies to vehicles: with voice recognition system and telephone

Requirement: A cell phone must be connected to the MMI ⇒ *page 25* and the **Telephone** menu must be open ⇒ *page 26*.

Function	Say:
Calling a contact from the directory	Call (XY) , for example Call John Smith
Selecting a specific contact number	Call (XY) business private land line cell , for example, Call John Smith at private number
Selecting a phone number with an address card open	Call call business call private call land line call cell phone
Displaying recent calls	Recent calls
Calling the last number dialed	Redialing
Dialing a phone number	Enter number > <i>After being prompted, say the telephone number in groups of individual numbers, for example 800 555 0100</i> > Dial

Voice recognition system

Function	Say:
Correcting the phone number that was entered	Delete number Correction
Showing contact information	Directory > <i>say the desired contact when prompted</i> , for example John Smith
Listening to messages	Calling voice mail

Tips

- Contacts in the directory can be selected using the full name (“first name last name” and “last name, first name”) as well as with only the first or last name. This applies to cell

phones that transmit names separated into first and last names.

- For more information on the supported cell phones, visit www.audiusa.com/bluetooth or your authorized Audi dealer.

Radio

Applies to vehicles: with voice recognition system

Requirement: The **Radio** menu must be open

⇒ *page 34*.

Function	Say:
Selecting the reception band	FM AM SiriusXM*
Selecting a station from the station list	Station (XY) Station list > Line (XY)
Selecting a station from the presets list	Presets > Line (XY)
Setting the frequency	Frequency (XY)
Switching the traffic reports on/off	Traffic program on Traffic program off

Media

Applies to vehicles: with voice recognition system

Requirement: The **Media** menu must be open

⇒ *page 37*.

Function	Say:
Selecting a source directly	CD SD card Audi music interface Bluetooth
Selecting audio/video files*	Video Playlists Artist Album Song Genres
Selecting audio/video files* on an iPod (Audi music interface source)	Video* Playlists Artist Album Song Podcasts Genres Composers Audio books
Navigating within a folder structure/list	Folder up Line (XY)

Media drives/connections

Introduction

There are various media drives and connections available in the MMI. For example, you can play CDs or connect a mobile device to the Audi music interface* and operate it through the MMI.

Notes

General information

Media and format restrictions: The MMI (including the SD card reader and the USB storage device connection*) was tested with a variety of products and media on the market. However, there may be cases where individual devices and audio/video files* may not be recognized, may play only with restrictions or may not play at all.

Data protection: Note that audio/video* files are subject to copyright laws. The media drives do not play files that are protected by DRM and that are identified with the symbol .

Data security: Never store important data on SD cards, CDs or mobile devices. Audi is not responsible for damaged or lost files.

Loading times: The more files/folders/playlists that are on a storage medium, the longer it will take to load the audio/video files*. Audi recommends using storage media that only contain audio/video files*. To decrease the time it takes to load audio/video files*, create subfolders (for example, for the artist or album).

For information on the properties of supported media and file formats, refer to [⇒ page 19](#).

CD mode

CD and format restrictions: The functionality of individual storage media may be limited due to the variety of blank CDs available and the various capacities. Audio CDs with copy protection, CDs that do not conform to the standard and multi-session CDs may not play or playback may be limited. Audi recommends finalizing the recording process when creating multisession CDs.

Using CDs and the CD drive: To ensure good, high-quality sound reproduction and to prevent damage to the drive or disc reading errors, always store CDs in a protective sleeve and do not expose them to direct sunlight. Do *not* use:

- Damaged, dirty or scratched CDs
- Single CDs (3 inch/8 cm diameter)
- CDs that are not round
- CDs with labels
- Protective rings
- Cleaning CDs

Thermal protection switch: CD playback may be temporarily unavailable if outside temperatures are extremely hot or cold. A thermal protection switch is installed to protect the CD and the laser.

Laser devices: Laser devices are divided into safety classes 1 to 4 in accordance with DIN IEC 76 (CO) 6/VDE 0837. The optical readers that are installed conform to safety class 1. Lasers in this class are very weak and well shielded, so there is no danger if used correctly.

Device cover: Do not remove the cover from the device. The device does not contain any parts that the owner can repair.

CD drive

The CD drive is located in the glove compartment.

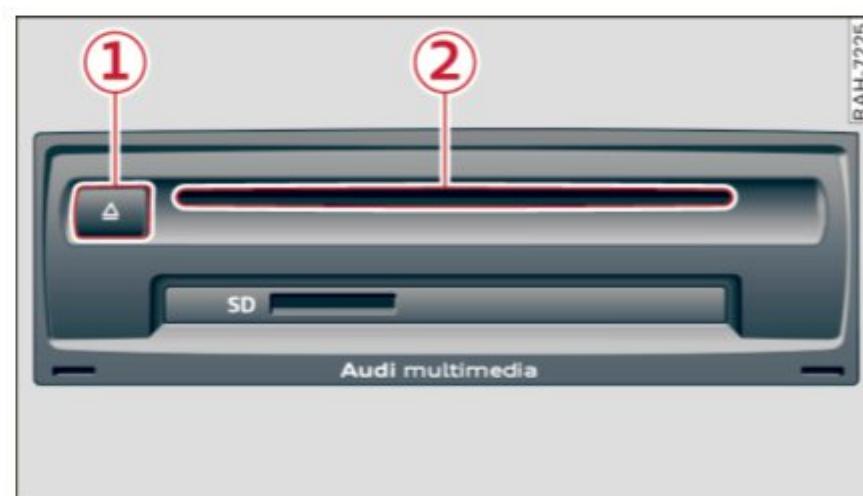


Fig. 10 CD drive

- **Loading a CD:** Slide the CD straight into the slot ② with the label facing up [⇒ fig. 10](#).
- **Ejecting a CD:** Press the button ①.

The CD is pulled in again automatically if it is not removed from the slot within ten seconds of ejecting it.

The CD drive is started and operated through the MMI ⇒ *page 37*.

Note

- Never force a CD into the drive. The CD is pulled in automatically.
- Do not insert CDs with labels into the drive. Labels can come loose from the CD and damage the drive.

Tips

The CD playback can skip with audio files that have a high data rate.

SD card readers

The SD card reader is located in the glove compartment.

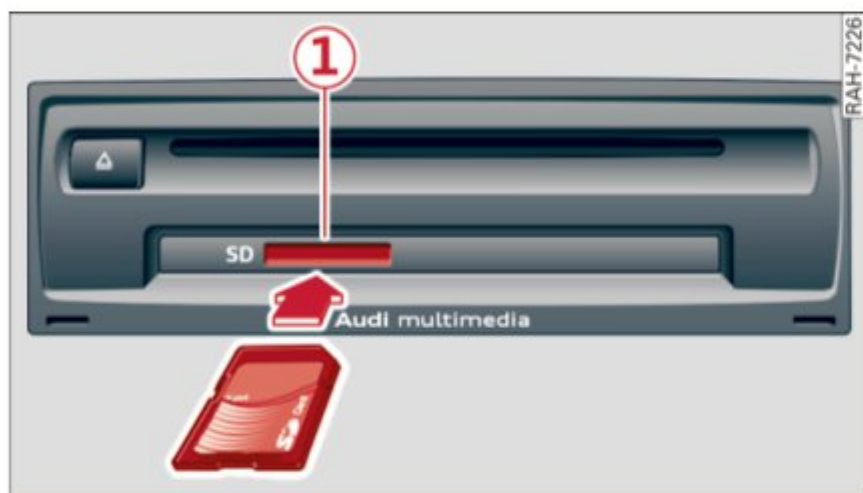


Fig. 11 SD card reader

- **Inserting the SD card:** Slide the SD card into the card reader slot ① with the label facing up (contact surfaces facing down) ⇒ *fig. 11*. The angled corner of the SD card must point toward the right front. Then push the SD card into the slot until it clicks into place.
- **Removing the SD card:** Press briefly on the SD card. The card is released.

The SD card reader is started and operated through the MMI ⇒ *page 37*.

Note

Only use one-piece memory cards. If adapter cards (memory cards with more than one piece) are used, the memory card could fall

out of the adapter when driving because of vibrations. Individual pieces could then become stuck in the drive and impair the functionality.

Tips

Always keep the SD card in a suitable case to protect it from dirt, dust particles and other damage.

Bluetooth audio player

Applies to vehicles: with cell phone preparation

You can play music wirelessly from your cell phone through the MMI using the Bluetooth audio player.

Requirement: The vehicle must be stationary to pair the mobile device. The Bluetooth function on the portable device and on the MMI **Audio player** must be switched on.

Pairing Bluetooth audio player

- ▶ Select: the **MEDIA** button > **Source** control button > **Bluetooth audio player** > **Connect new BT audio player**.

The available Bluetooth audio players are displayed.

- ▶ Select and confirm the desired Bluetooth audio player from the list.
- ▶ Select and confirm **Audio player**. The MMI generates a PIN for the connection.
- ▶ Select and confirm **Yes**.
- ▶ Enter the PIN for connecting on your cell phone. **Or:** If the PIN is already displayed on your cell phone, confirm it in the cell phone and in the MMI. The time allowed for entering the PIN is limited to approximately 30 seconds.

The media are started and operated through the mobile device or the MMI, depending on the device being used ⇒ *page 37*.

Tips

- Be sure to pay attention to any possible connection prompts on your Bluetooth audio player.
- You only have to enter your PIN one time. Bluetooth devices that are already paired

automatically connect to the MMI when they are within range.

- Several Bluetooth audio players can be connected to the MMI, but only one mobile device can be active.
- Bluetooth A2DP and AVRCP (1.0/1.3) are supported.
- The supported media functions depend on the Bluetooth audio player being used.
- For more information on the supported devices, visit www.audi.com/bluetooth.

Audi music interface

Introduction

Applies to vehicles: with Audi music interface

You can connect a mobile device (such as an MP3 player) to the Audi music interface using a special adapter cable* and operate the device through the MMI.

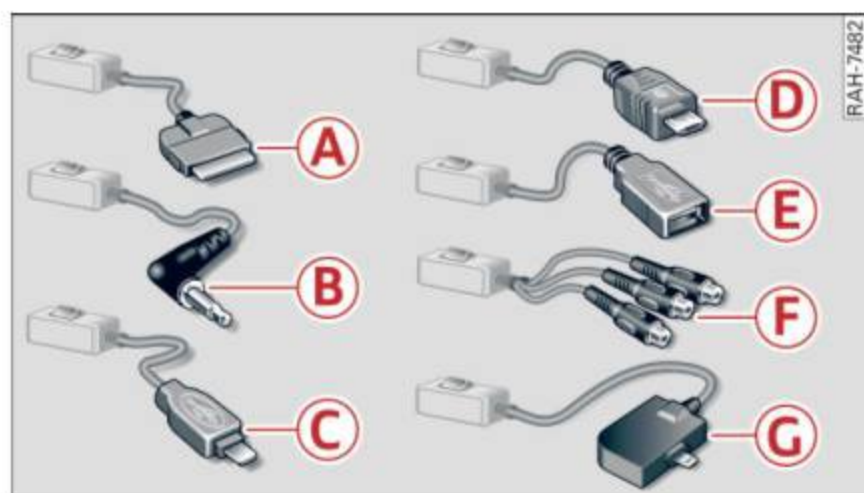


Fig. 12 Adapter cables

- (A) iPod adapter cable*/iPod adapter cable plus*
- (B) 3.5 mm stereo jack adapter cable*
- (C) Mini USB adapter cable*
- (D) Micro USB adapter cable*
- (E) USB adapter cable*
- (F) AV adapter cable*
- (G) Adapter cable for Apple devices with Lightning connector*

You can purchase the adapter cable from an authorized Audi dealer or at specialty stores.

! Note

Handle the adapter cable carefully. Do not allow it to be pinched.

Setup

Applies to vehicles: with Audi music interface

The Audi music interface is located in the center console under the center armrest.

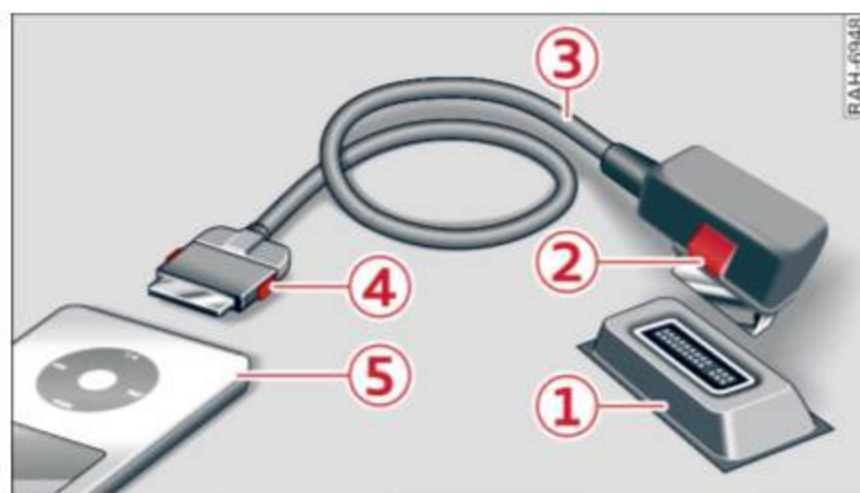


Fig. 13 Connecting a mobile device

- **Connecting the adapter cable:** Connect the adapter cable* (3) ⇨ fig. 13 with the interface on the Audi music interface (1) and then connect with the mobile device (5) (such as an iPod).
- **Disconnecting the adapter cable from the Audi music interface:** Disconnect the connector from the Audi music interface while pressing the release tab (2).
- **Disconnecting the iPod adapter cable (plus)* from the iPod:** Disconnect the iPod connector from the iPod while pressing the release tabs (4).

The Audi music interface is started and operated through the portable device or the MMI, depending on the device being used ⇨ page 37.

! Note

- Remove the connector from the Audi music interface carefully so it is not damaged.
- Extremely high or low temperatures that can occur inside vehicles can damage portable devices and/or impair their performance. Never leave a mobile device in the vehicle in extremely high or low temperatures.

 Tips

- Do not use USB extension cables or adapters. They may impair the functionality.
- Functionality is not guaranteed for portable devices that do not meet the USB 2.0 specification.
- USB hubs are not supported.
- The iPod/iPhone/iPad battery charges through the iPod adapter cable (plus)* once the device is connected to the Audi music interface and the ignition is switched on.
- Only use an iPod adapter cable (plus)* with a red or blue marking to connect an iPod/iPhone/iPad.
- Other iPod versions such as the iPod shuffle cannot be connected with the iPod adapter cable (plus)*. Connect these devices using the optional 3.5 mm stereo jack adapter cable*.
- Some iPod functions, such as rating music tracks, Cover Flow or adding tracks to the “On-the-go” playlist, are not supported. Cover display and video playback are only supported by the iPod adapter cable plus* (red marking).
- The video image is only displayed when the vehicle is stationary for safety reasons. Only the sound from the video plays while driving.
- Video playback through an iPod/iPhone/iPad does *not* continue after turning the vehicle off and restarting it.
- For video playback, you can also connect your Apple devices using the AV adapter cable*. You also need an Apple AV cable to do this. For more information on the Apple AV cable, refer to your iPod user guide.
- The Apple Lightning connection does not support video playback.
- For more information about the Audi music interface and supported devices, visit www.audiusa.com/bluetooth or contact an authorized Audi dealer.
- iPod/iPhone/iPad malfunctions also affect the operation of the MMI. Reset your iPod/iPhone/iPad if this happens.

- For important information on operating your iPod/iPhone/iPad, refer to the user guide for that device. Audi recommends updating the iPod/iPhone/iPad software to the latest version.

AUX Input

Setup

Applies to vehicles: with AUX input

The AUX input is located in the center console under the center armrest.

- **Connecting the adapter cable:** Connect the mobile device (such as an MP3 player) to a 3.5 mm stereo jack* and then to the AUX input.
- **Playing an audio file:** Select: **MEDIA** button > **Source** control button > **External audio player**.

The media are started and operated through the mobile device at the AUX input.

The volume can be adjusted using the On/Off knob, the **Input level** ⇌ *page 38* function, the multifunction steering wheel* or directly on the mobile device.



WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate a mobile device while driving, because this increases the risk of an accident.



Note

Extremely high or low temperatures that can occur inside vehicles can damage portable devices and/or impair their performance. Never leave a mobile device in the vehicle in extremely high or low temperatures.



Tips

- For important information on operating your portable device, refer to the user guide from the manufacturer.
- Correct function of all portable devices cannot be guaranteed.

Supported media and file formats

The CD drive, SD card reader and the USB storage device* connection support the following audio file properties:

	Audio files			
Supported Media	SD cards: SD/SDHC/SDXC*/MMC memory cards, SDXC* memory cards with a capacity up to 64 GB CD drive: Audio CDs (up to 80 minutes), CD-ROMS with a capacity up to 700 MB Audi music interface*: Mobile devices (such as iPods ⇒ <i>page 17</i> , MTP players, USB storage devices in “USB Device Subclass 1 and 6”: USB sticks, USB MP3 players that do not require any special driver software, external USB flash drives, external USB hard drives (HDD) - 1", 1.8", 2.5" - drives with a starting/continuous current of maximum 500 mA			
File system	SD cards: exFAT file system USB storage device*: FAT or FAT32 file system, maximum 4 partitions CD drive: Joliet (single session and multisession CDs); UDF 1.5 - 2.01			
Metadata	Album, song, artist and genre for MP3/WMA/AAC* files Embedded album cover* up to 500x500 px. and maximum size of 200 kB (GIF, JPEG, PNG, BMP)			
Format	MPEG-1/-2 Layer 3	Windows Media Audio 8 and 9	MPEG-2/-4	PCM*
File extension	.mp3	.wma	.m4a*; .m4b*; .mp4*; .aac*	.wav*
Playlists	.M3U; .PLS; .WPL			
Characteristics	up to maximum 320 kbit/s and 48 kHz sampling frequencies			8 and 16 bit, 44.1 kHz sampling frequency
Number of files	Maximum 1,000 files per directory			

Tips

- The media drives do not support Windows Media Audio 9 Voice, Windows Media Audio 9 Lossless and Windows Media 9 and 10 Professional.
- For compressing MP3 files, Audi recommends a bit rate of at least 160 kbit/s. The display showing the remaining play time may differ for MP3 files with variable bit rate.

- Special characters (such as those in ID3 tag information) display differently depending on the system language and cannot always be guaranteed.
- The manufacturer of the storage device can provide information about its “USB Device Subclass”.
- Some MTP player functions, such as rating music tracks and video playback, are not supported.

Troubleshooting

Problem	Solution
Audi music interface*/Bluetooth audio player*: Mobile devices/Bluetooth audio players are not supported.	Refer to the information on the Audi music interface* ⇒ <i>page 17</i> /Bluetooth audio player* ⇒ <i>page 16</i> . You can learn about supported devices in the Audi database for mobile devices at www.audi.com/bluetooth (www.audi.de/bluetooth).
Audi music interface*/Aux-in connection*: The volume is too high when starting the playback through the 3.5 mm stereo jack*/AV adapter cable*.	Adjust the volume of the mobile device to approximately 70 % of the maximum output (Input level) ⇒ <i>page 38</i> .
Audi music interface: The portable device is not recognized as a source.	For many cell phones or audio players, playback is not possible when the battery level is too low (less than 5% of its capacity). The portable device will only be recognized as a source in the MMI after connecting if the battery charge is sufficient.
Audi music interface*: Malfunctions during audio playback through an iPod/iPhone/iPad.	The Audio player function is switched On . Switch this function off ⇒ <i>page 31</i> when you are not using the Bluetooth audio player*.
Audi music interface*/Aux-in connection*: There is static when connecting or disconnecting the 3.5 mm stereo jack*/AV adapter cable* or when connecting or disconnecting the portable device to the 3.5 mm stereo jack*/AV adapter cable*.	The Audi music interface*/external audio player* source is already selected when connecting or disconnecting. Either mute the portable device or switch to another audio source (such as the radio ⇒ <i>page 34</i>) before connecting or disconnecting the portable device.

System settings

Setting the clock time/date



Fig. 14 Setting a time zone

- Select: the **MENU** button > the **Time** control button in the upper left ① ⇒ fig. 14.

Time

The **Time** can be set manually. The **Time source*** must be set to **Manual** to do this.

Date

The **Date** can be set manually. The **Time source** must be set to **Manual** to do this.

Man. daylt. sav.

When this function is switched **On**, an hour is added to the set **Time**.

Time zone

When selecting the appropriate time zone, a sampling of countries in this zone will be listed.

Time format

If you select **24h**, the clock will display **13:00**, for example. If you select **AM/PM**, the clock will display **1:00 PM**, for example.

Date format

If you select **dd.mm.yyyy**, the date will display, for example, **31.12.2013**. If you select **mm/dd/yyyy**, the date will display, for example, **12/31/2013**. If you select **yyyy-mm-dd**, the date display will show, for example, **2013-12-31**.

Adjusting the sound

The sound distribution and volume of the MMI can be adjusted individually. The settings depend on vehicle equipment.

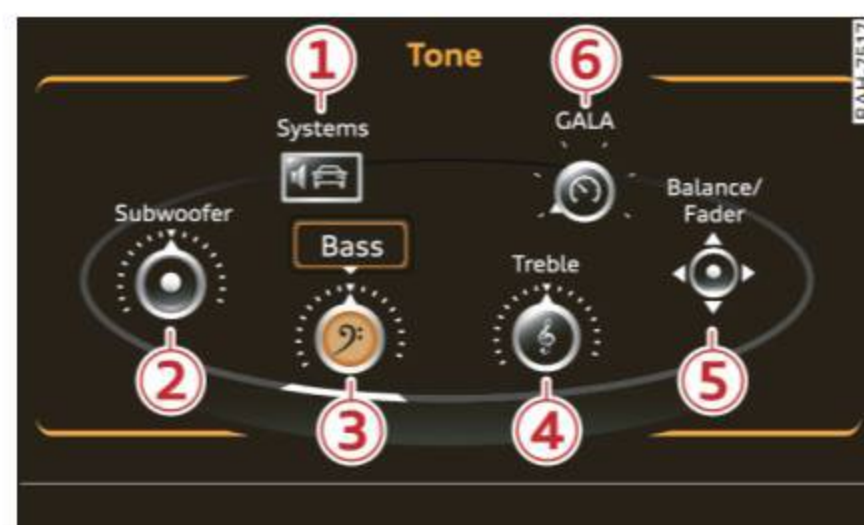


Fig. 15 Sound settings

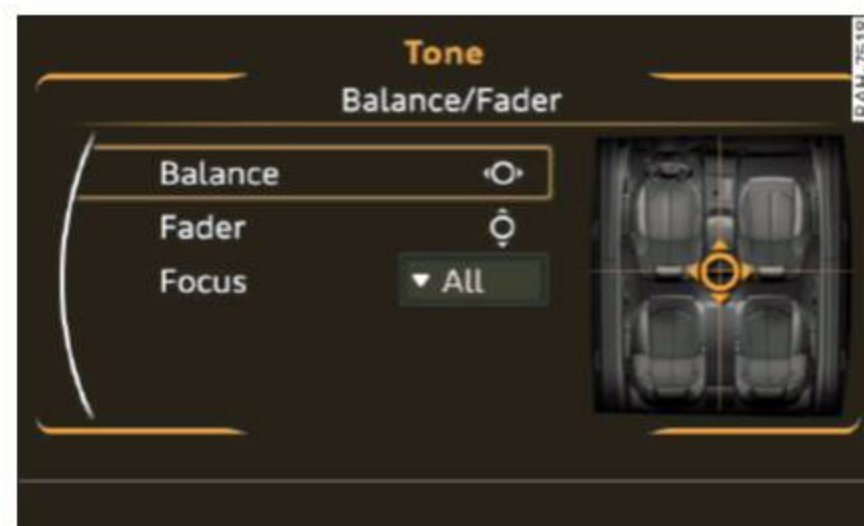


Fig. 16 Adjusting the balance/fader

- Select: the **MENU** button > **Tone**.

① Systems

The volume of the **Telephone**functions* and the **Parking aid*** can be adjusted individually ⇒ page 22.

② Subwoofer* / ③ Bass / ④ Treble

You can adjust the **Subwoofer***, **Bass** and **Treble** settings by turning the control knob. The changed settings only apply for the audio source that is active at the time. This allows you to adjust the sound settings for each audio source separately.

⑤ Balance/Fader (sound focus)

- **Adjusting the sound distribution to the left or right:** Select and confirm **Balance**. Turn the control knob to the left or right to the desired position.

- **Adjusting the sound distribution to the front or rear:** Select and confirm **Fader**. Turn the control knob to the left or right to the desired position.
- **Adjusting the sound distribution*:** Select and confirm **Focus** > **All** (symmetrical sound distribution)/**Front/Rear** (sound oriented to the front/rear of the vehicle interior).

⑥ SDV (speed dependent volume control)

You can adjust how much the volume changes to compensate for noise inside the vehicle by turning the control knob.

Surround*

You can adjust the volume of the surround effect by turning the control knob.

Adjusting the system volume

- ▶ Select: **MENU** button > **Tone** > **Systems**.

Telephone*

Ringtone: see ⇒ page 32

Ringtone volume/Call volume: You can adjust the selected ring tone volume or call volume by turning the control knob.

Voice recognition*

You can adjust the volume of the announcements by turning the control knob.

Parking aid*

You can adjust the signal tone volume by turning the control knob.

Restarting the MMI (reset)

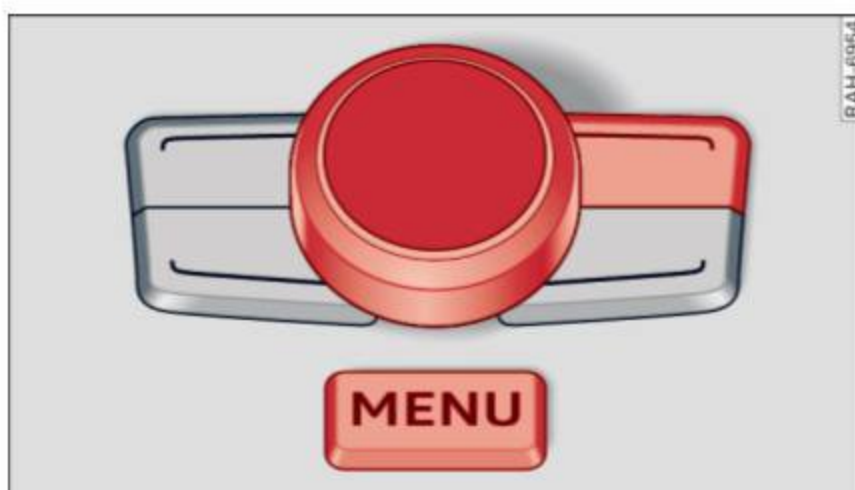


Fig. 17 Button combination to restart the system

- ▶ Press and hold the **MENU** button, the control knob and the upper right control button ⇒ *fig. 17 at the same time* briefly and then release the buttons.

Additional settings

- ▶ Select: **MENU** button > **Setup** control button.

Language

You can change the language of the text on the MMI display and driver information system.

English, French and Spanish are available.

Units of measurement

The following measurement units can be set in the MMI display and driver information system.

- **Speed** (mph or km/h)
- **Distance** (kilometers or miles)
- **Temperature** (°F or °C)
- **Pressure** (psi or bar)
- **Fuel consumption** (l/100km, mpg (US), mpg (UK) or km/l)
- **Volume** (liter, gallon (UK) or gallon (US))

Display brightness

You can adjust the MMI display brightness by turning the control knob.

Factory default settings

The following functions can be reset to the factory default settings:

- **Sound settings**

- Radio
- Media
- Directory*
- Telephone*
- Bluetooth*

You can select the desired functions individually or all at once with the option **Select all entries**. Select and confirm **Restore factory default settings**.

Reset media driver

The selected media driver package is reset to the settings at time of delivery.

System update

The MMI software can be updated by USB or SD card using the system update feature.

For more information about the **System update**, visit www.audiusa.com/bluetooth or contact an authorized Audi dealer.

Version information

This function displays the MMI software version.

Using the telephone

Introduction

Applies to vehicles: with telephone

To make calls through the MMI system, you must connect your phone to the MMI with Bluetooth. After connecting your phone to the MM with Bluetooth, you can use the telephone functions conveniently through the MMI.

WARNING

- Medical experts warn that cell phones can interfere with the function of pacemakers. Always maintain a minimum distance of 20 centimeters between the cell phone antenna and the pacemaker.
- Do not carry the cell phone in a pocket directly over the pacemaker when the phone is switched on.
- Switch the cell phone off immediately if you suspect it may be interfering with the pacemaker.
- Do not use the voice recognition system ⇒ *page 12* in emergencies because your voice may change in stressful situations. It may take longer to dial the number or the system may not be able to dial it at all. Dial the emergency number manually.
- Switch your cell phone off in areas where there is a risk of an explosion. These locations are not always clearly marked. This may include gas stations, fuel and chemical storage facilities or transport vehicles, or locations where fuel vapors (such as propane or gasoline vapor in vehicles or buildings), chemicals or large quantities of dust particles (such as flour, sawdust or metal) may be present in the air. This also applies to all other locations where you would normally turn your vehicle engine off.
- The demands of traffic require your full attention. Refer to and follow the guidelines provided in ⇒ *page 4, Traffic safety information*.

Note

- Obey all applicable laws regarding use of telephones in vehicles.
- Switch off the telephone where use of cell phones is prohibited. Obey all applicable notices and regulations.

Tips

The Bluetooth connection range is limited to inside the vehicle. It can also be affected by local conditions and interference with other devices.

Connecting a cell phone with Bluetooth

Before starting

Applies to vehicles: with telephone



Fig. 18 This QR code takes you directly to the database for mobile devices (connection charges apply based on your mobile plan).

To learn which of the functions in your cell phone are supported, check with your cell phone service provider or the database for mobile devices at www.audiusa.com/bluetooth.

Connecting a cell phone

Applies to vehicles: with telephone



Fig. 19 Bluetooth profile

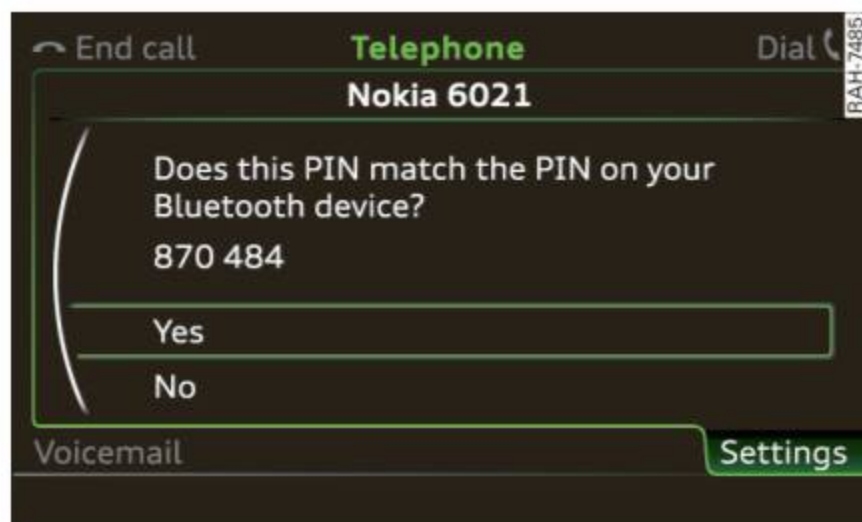


Fig. 20 Displaying the PIN for entering in the cell phone

Requirements

The vehicle must be stationary and the ignition must be switched on.

The Bluetooth function and visibility of the MMI ⇒ *page 32* and cell phone must be switched on.

The MMI and the cell phone to be paired must not be actively connected with any other Bluetooth devices.

Pairing a cell phone

- ▶ Select: **TEL** button > **Connect cell phone** > **Find new devices**. The available Bluetooth devices are shown in the MMI display. **Or:** Search for the MMI using the Bluetooth device search on your cell phone.
- ▶ Select and confirm the desired cell phone from the list of displayed Bluetooth devices.
- ▶ Select and confirm **Handsfree**. The MMI generates a PIN for the connection ⇒ *fig. 20*.
- ▶ Select and confirm **Yes**.
- ▶ Enter the PIN for connecting on your cell phone. **Or:** If the PIN is already displayed on

your cell phone, confirm it in the cell phone and in the MMI. The time allowed for entering the PIN is limited to approximately 30 seconds.

Pay attention to any additional system prompts displayed on your cell phone, for example if the system should connect automatically in the future. Depending on the cell phone, you may have to confirm downloading the directory separately.

After connecting successfully

After connecting successfully, the symbol for the signal strength ⑦ ⇒ *page 7* and the Bluetooth symbol ⑤ are displayed in the status line of the MMI display. In addition, the cell phone contacts are automatically loaded in the MMI directory. This process can take several minutes, depending on the number of contacts.

If all four of the memory capacity is filled, you will be asked to replace the contacts from one cell phone when connecting another cell phone. With the option **Restricted use of telephone**, the cell phone contacts are not loaded into the MMI.



Tips

- Using the telephone through the MMI is only possible using the Bluetooth connection (**Handsfree**).
- You only have to pair your device one time. Bluetooth devices that are already paired automatically connect to the MMI when they are within range and the ignition is switched on.
- Authorizing the MMI pairing in your cell phone will speed up the automatic connection.
- Several cell phones can be paired to the MMI, but only one cell phone can be actively connected.
- A Bluetooth device that is actively connected to the MMI is disconnected if another device is connected.
- When leaving the vehicle, the Bluetooth connection to the cell phone ends automatically.
- You can obtain more information from your cell phone service provider or from your cell phone user guide. For information on using

the telephone, visit www.audiusa.com/bluetooth or your authorized Audi dealer.

Selecting the telephone

Applies to vehicles: with telephone

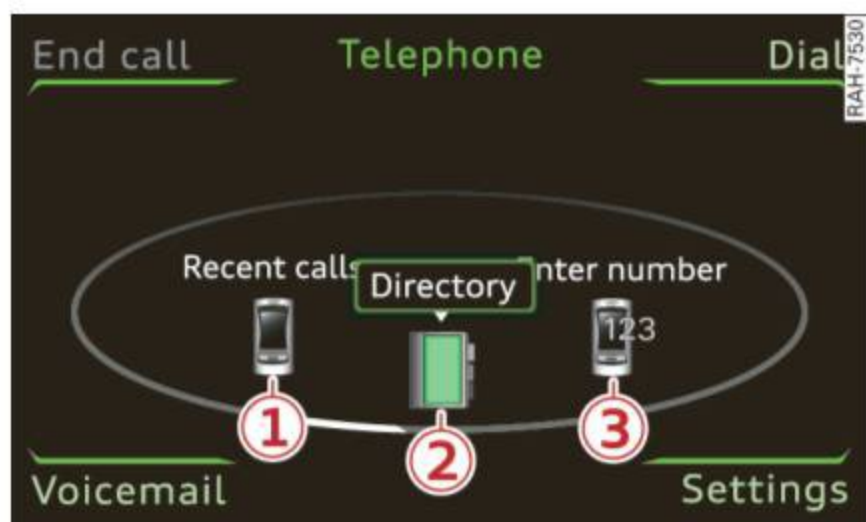


Fig. 21 Telephone functions

Requirement: A cell phone must be connected to the MMI ⇒ *page 25*.

► Select: the **TEL** button.

The last active telephone menu is shown in the MMI display. Press the **TEL** button in the **Telephone** menu to access the telephone functions.

The following telephone functions are available ⇒ *fig. 21*:

- ① Recent calls ⇒ *page 26*
- ② Directory ⇒ *page 29*
- ③ Favorites ⇒ *page 31*
- ④ Enter number ⇒ *page 27*

Dialing a phone number

From the directory

Applies to vehicles: with telephone

You can dial a phone number directly from the directory ⇒ *page 29*.

From a call list

Applies to vehicles: with telephone



Fig. 22 Dialing a phone number from the call list

Requirement: A phone number must be stored in the call list, or in the directory.

► Select: the **TEL** button.

Recent calls

– **Dialing a phone number**: Select and confirm the desired phone number from the recent calls list. Select and confirm **Call**.

Call list symbols ⇒ *fig. 22*:

- ① Dialed numbers
- ② Accepted calls
- ③ Missed calls

Dial control button

– **Dialing a phone number**: Select and confirm the desired phone number from the **Recent calls** list. Select and confirm **Call**.

Directory

– **Dialing a phone number**: Select and confirm the desired contact in the directory. The address card is displayed in the MMI display. Select and confirm the desired telephone number.

Favorites

– **Dialing a phone number**: Select and confirm a favorite. Select and confirm **Call**.

Using the speller

Applies to vehicles: with telephone



Fig. 23 Entering phone numbers using the number speller



Fig. 24 Entering phone numbers using the letter speller

- Select: the **TEL** button > **Enter number**.
- **Entering a phone number as a sequence of numbers:** Enter the number using the number speller ⇒ *fig. 23*.
- **Entering the phone number as a sequence of letters:** Press the **A-Z** control button. Enter a letter sequence using the letter speller such as *AUDISERVICE*.
- **Dialing a phone number:** Select and confirm **OK**. Or: Press the **Dial** control button. The active audio source is muted when making a call.
- **Deleting individual characters:** Select and confirm **←**.
- **Deleting all characters entered at once:** Turn the speller to **←** and press and hold the control knob.

Tone sequences (**DTMF**) can be entered directly into the speller during a phone call.

Accepting/ending a call

Applies to vehicles: with telephone

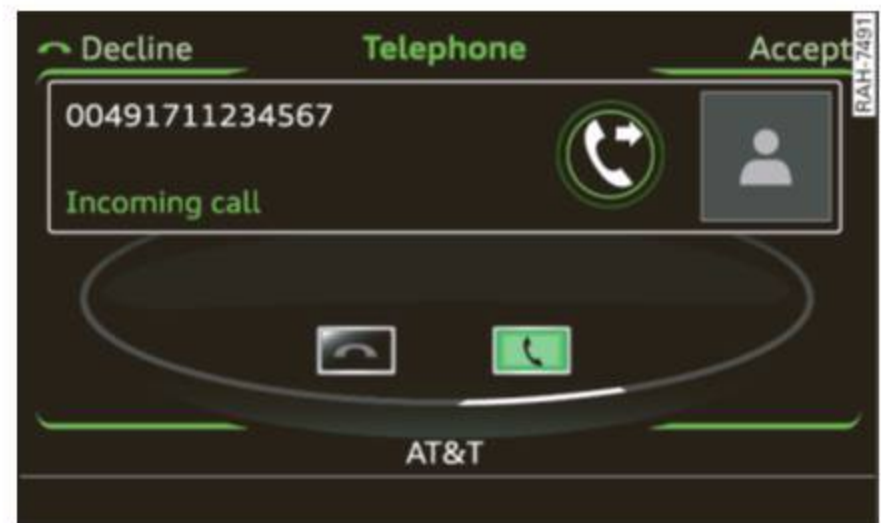


Fig. 25 Incoming call

- **Accepting an incoming call:** Press the **Accept** control button.
- **Rejecting an incoming call:** Press the **Reject** control button.
- **Ending a call or canceling dialing:** Press the **End call** control button.

Accepting another call: If there is an incoming call during a call, you can select **Accept** to put the existing phone call on hold and answer the incoming call. If you select **Reject**, the incoming call will be ignored.

Caller information: The *name*, *phone number* or **Unknown** appears in the MMI display and driver information system display, depending on if the caller has been stored in the directory and if the phone number has been transmitted.

Tips

- The audio source is muted during an incoming or outgoing call.
- If you have switched off the MMI display and an incoming call is received, the MMI display will automatically switch back on.

During a phone call

Applies to vehicles: with telephone

Requirement: The **3-way calling** function must be switched on for some of the options listed ⇒ *page 32* and there must be a call in progress. ►

- **Making an additional call:** Select **Additional call** > **Directory** or **Recent calls** > *an entry in the list*.
- **Accepting an incoming call when there is an active call and a call on hold:** Select **Replace**. The active call is replaced with the incoming call.

Select: the **Options** control button:

Mute/Unmute: If you select and confirm this function, the other person on the phone cannot hear you. You can hear the other person.

Hold call/Resume held call: You can put an active phone call on hold and resume it. **On hold** and the duration of the phone call is shown in the MMI display.

Swap call: You can alternate between two phone calls at the same time. One of the calls will be on hold. **End call** ends the active phone call. A phone call that is on hold stays on hold and can be resumed using the **Options** control button and **Resume held call**.

Join conference: A party on hold and up to five active parties (depending on the network) can be added to a conference call. To make an additional call, put all participants in the current conference call on hold using **Hold conference**. Press the **Options** control button. Select and confirm **Additional call** and select a phone number from the **Recent calls** or the **Directory**, or select **Enter number**. To add this party to the conference call, select **Join conference**. With **Resume held conference**, all participants are taken off hold. **Conference participants** shows all participants.

Privacy mode/Retrieve call: You can switch your current phone call from the MMI to your cell phone with **Privacy mode**. With **Retrieve call**, you can transfer your call from your cell phone to the MMI.

Telephone menu: The telephone menu opens.

Tips

- The *Call waiting* function must be activated in your cell phone to be alerted to an incoming call during an active call.

- The display of an incoming phone call in the MMI may still be visible for a few seconds, depending on the cell phone in use. If you use the **Replace** or **Reject** functions in the MMI while the display is still visible, the active phone call may end.

Emergency call

Applies to vehicles: with telephone

Requirement: A cell phone must be connected to the MMI ⇒ *page 25*.

- ▶ Select:  button > **Enter number** > *enter the emergency call number (such as 911)* > **OK**.

WARNING

- Because your phone works with radio signals, a connection cannot be guaranteed under all circumstances. Do not rely on only your phone when it comes to essential communication (such as a medical emergency).
- Always follow the instructions given by the emergency personnel during an emergency call and only end the call when they instruct you to do so.

Tips

Emergency numbers are not the same everywhere. Find out which emergency number is used in your current location.

Listening to voicemail

Applies to vehicles: with telephone

- ▶ Select:  button > **Voice mail** control button.
- **Entering the voicemail number:** Select and confirm **List** and dial and confirm the desired number. **Or:** Enter the voice mail number using the speller. Select and confirm **OK**.
- **Dialing the voicemail number:** Press the **Voice mail** control button.

Tips

- This service must be set up and activated in advance in the cell phone network. You can

obtain more information from your cell phone service provider.

- The voicemail number depends on the cell phone service provider.

Accessing the directory

Applies to vehicles: with telephone

After pairing the cell phone, the contacts in it are automatically imported into the MMI.

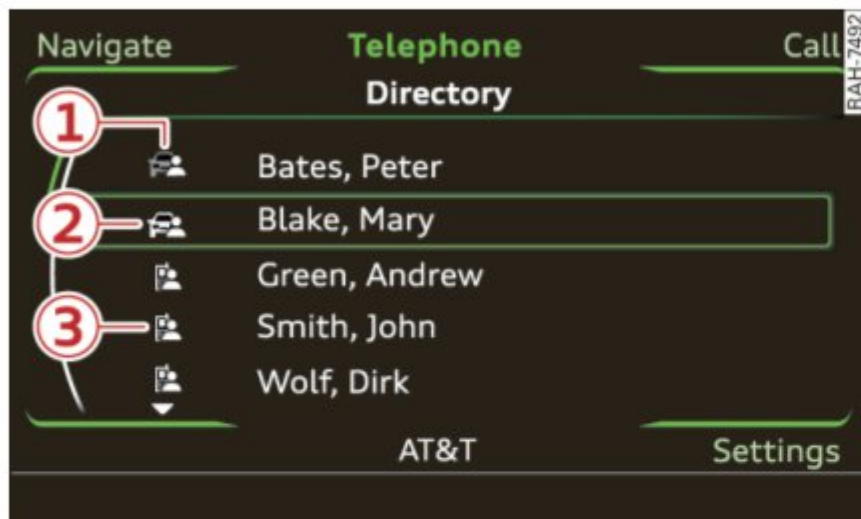


Fig. 26 Contact list

- Select: the **TEL** button > **Directory**.
- **Selecting a contact:** Select and confirm a contact from the directory. The address card is displayed.

Contacts are displayed in alphabetical order, can be sorted according to first or last name

⇒ *page 32* and are identified with a symbol to tell the location where they are stored ⇒ *fig. 26*:

① **Public MMI directory:** These contacts are visible to all users and can be used by all users regardless of the cell phone that is connected.

No cell phone paired: Each new contact will be stored in the public directory.

Cell phone paired: To store a contact in the public directory so that all users can access it, the contact must be marked as **Visible to all** ⇒ *page 30*.

② **Private MMI directory:** These contacts are only visible when the cell phone is connected.

③ **Cell phone:** These contacts are stored in the cell phone and are only visible when the corresponding cell phone is connected.

If all of the memory capacity is filled, you will be asked to replace the contacts from one cell phone when pairing another cell phone. With the option **Restricted use of telephone**, the cell phone contacts are not loaded into the MMI.

Tips

- Check for a possible request to synchronize on your cell phone. Requests to synchronize the directory must be confirmed so that your cell phone contacts can be loaded into the MMI.
- The contact display in the MMI depends on the cell phone used. For more information on the supported cell phones, visit www.audiusa.com/bluetooth or your authorized Audi dealer.
- The contacts from the cell phone may not be transferred in alphabetical order. If there are too many entries, contacts with different first letters may be missing in the MMI.
- The public contacts in the local MMI memory are always visible and can be accessed by other users.

Using a contact

Applies to vehicles: with telephone



Fig. 27 Calling a contact



Fig. 28 Selecting a destination

► Select: the **TEL** button > **Directory** > a contact from the directory.

– **Call:** Select and confirm the desired telephone number. **Or:** Select the desired phone number and press the **Call** control button.

Visible to all

You can mark a contact as **Visible to all** ☒. The contact is then stored in the local MMI memory (public) ① ⇒ page 29 and is available to all MMI users. If a contact is not marked as **Visible to all**, it is stored in the private local MMI memory ② and is only visible when the cell phone in which it is stored is connected.

Read contact

The MMI automatically creates a name tag for each entry in the directory that can be read by the MMI.

Copy contact

A copy of the contact is stored in the private local MMI memory.

You can change the information in the input fields ⇒ page 31 using the speller ⇒ page 27.

Delete contact

Only the contacts in the MMI memory (private/public) can be deleted.

i Tips

- Contacts edited in the MMI directory cannot be automatically updated in the connected cell phone. Audi recommends editing cell phone contacts directly in the cell phone.
- Only the contacts in the MMI memory (private/public) can be edited or deleted.

Importing/exporting contacts

Applies to vehicles: with telephone

Contacts in vCard format (.vcf) can be imported into the directory or exported.

Requirement: An SD card must be in the SD card reader ⇒ page 16 or a USB storage device must be connected to the Audi music interface ⇒ page 17.

► Select: the **TEL** button > **Directory** > **Settings** control button.

- **Importing contacts from a storage device:** Select and confirm **Import contacts** > **SD card** or **USB storage device** > *desired contacts* > **Import**.
- **Exporting contacts to a storage device:** Select and confirm **Export contacts** > **SD card** or **USB storage device** > *desired contacts* > **Export**.
- **Selecting all contacts at once for import or export:** Select and confirm **Import contacts/Export contacts** > **SD card** or **USB storage device** > **All** control button > **Import/Export**.

i Tips

- The imported contacts are stored in the local memory of the directory.
- A maximum of 500 contacts can be imported. You can check the directory memory capacity at any time ⇒ page 32.

- Never save important data on memory cards or USB storage devices. Audi is not responsible for damaged or lost files and media.

Storing a new contact

Applies to vehicles: with telephone

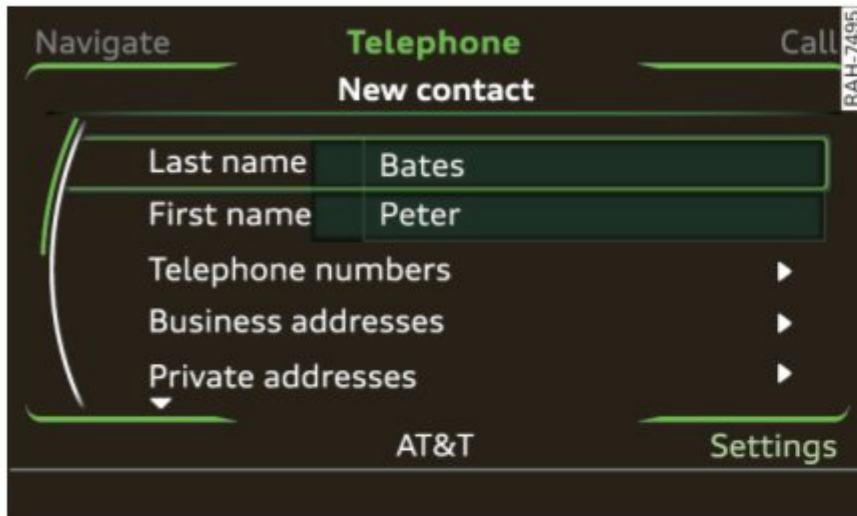


Fig. 29 Storing a new contact

- Select: the **TEL** button > **Directory** > **New contact**.

Last name/First name

Enter the last name and first name using the speller ⇨ *page 27*.

Telephone numbers

You can store up to five phone numbers in an address card. You can also assign a **Type** (**Business** or **Private**) and a **Category** (**Land line**, **Cell** or **Fax**) for each phone number. You can also set a frequently used phone number **As standard number**. That number is then displayed first in the open address card.

Using the **New number** function and the **List** control button, you can import a phone number from **Recent calls** into the address card.

Business addresses/Private addresses

You can specify a business and private address in an address card. With the **Delete mailing address** function, you can delete the business or private address.

Structured addresses from a cell phone that have information regarding country, state, ZIP code,

city and street name can be imported directly into the directory.

Tips

- The public contacts in the local MMI memory are always visible and can be accessed by other users.
- The new contact will be stored in the memory in the directory that is currently being used.
- The importing of new addresses depends on the cell phone.
- Up to 500 contacts can be stored in memory in a private or public directory.
- Contacts edited in the MMI directory cannot be automatically updated in the connected cell phone. Audi recommends editing cell phone contacts directly in the cell phone.

Storing in favorites

Applies to vehicles: with cell phone preparation

Up to nine contacts can be stored in the favorites list, in addition to the voicemail number.

- Select: the **TEL** button > **Favorites**.

- **Storing a new phone number as a favorite:** Select and confirm **Create favorite** > **New contact**. Enter a **Name** and additional data, if necessary. Enter a **Telephone number**. Select and confirm **Save contact**.
- **Storing an existing phone number as a favorite:** Select and confirm **Create favorite** > *a contact in the list*. Select and confirm the desired telephone number, if necessary.
- **Deleting a stored favorite:** Select and confirm *the desired favorite* > **Delete**.

Additional settings

Telephone settings

Applies to vehicles: with telephone

- Select: the **TEL** button > **Settings** control button. ►

Telephone settings

Ringtone settings¹⁾: The ringtones are played using the **Ringtone** function. Press the control knob to save the selected ringtone. For the **Ringtone volume/Call volume** settings, see ⇒ *page 22*.

Voice mail number: The voice mail number can be entered in the **Number** field or edited using the speller. The **Delete voicemail number** function deletes the stored voice mail number.

Call options

3-way calling: Can be switched **On** or **Off**.

Bluetooth

Device management: Bluetooth devices that have been paired with the MMI are listed. The active connected device is identified with the Bluetooth symbol. To switch between **Handsfree** and **Audio player** when cell phones are connected, select the Bluetooth device when the vehicle is stationary and change the profile using the **Connect** function. Use **disconnect** to disconnect the connected profile. To delete paired Bluetooth devices individually, select the device and delete it with the **Delete Bluetooth device** function. The **Find new devices** function searches for Bluetooth devices in range and lists them.

Bluetooth: When the function is switched on, the Bluetooth symbol  ⇒ *page 7* appears in the MMI display. The visibility of the MMI for Bluetooth devices can be turned on or off using the **Visible/Invisible** settings. However, it is still possible to establish a Bluetooth connection with paired devices when the visibility is switched off. **Bluetooth** should be switched to Invisible when the pairing process is complete so that the cell phone preparation is **Invisible** to others. **Bluetooth** can be switched **off**. A Bluetooth connection is not possible then.

Audio player: To select the Bluetooth audio player as a source in the **Media** menu ⇒ *page 37*,

the function must be switched **On**. Switch the **Audio player** function **off** if you are not using the Bluetooth audio player to prevent malfunctions in the **Telephone** or **Media** menus.

MMI name: The Bluetooth name of the MMI (for example, "AUDI MMI 2613") is shown and can be changed.



Tips

- Several cell phones can be paired to the MMI, but only one cell phone can be actively connected.
- To delete all paired Bluetooth devices, the Bluetooth function can be reset to the default factory settings ⇒ *page 22*.

Directory settings

Applies to vehicles: with telephone

- Select: the  button > **Directory** > **Settings** control button.

Memory capacity

The **Memory capacity** of the directory is displayed.

You can load up to 2,000 contacts from your cell phone into each of the four private directories.

Sort order

You can sort the contacts in your directory alphabetically according to **Last name/First name**.

Refresh directory

To update the contacts in the MMI, you can manually download your cell phone contacts. Depending on the cell phone, the Bluetooth connection may need to be disconnected and reconnected to update the contacts.

¹⁾ Depends on the connected cell phone.

Troubleshooting

Applies to vehicles: with telephone

Problem	Solution
Connecting the cell phone to the MMI failed.	Check if the visibility on the cell phone and MMI is switched on. For some cell phones, the visibility turns off automatically after a short period. Or: Restart your cell phone. For more information on this, refer to the user guide for your cell phone.
After pairing, not all contacts/no contacts are loaded in the MMI.	Avoid using special characters in names. Avoid using contact groups.
Certain telephone functions are grayed out or not available.	The telephone functions depend on the cell phone service provider and the cell phone you are using. You can obtain more information from your cell phone service provider, in your cell phone user guide or in the database for mobile devices at www.audiusa.com/bluetooth .
Some telephone functions are grayed out or not available, even though the cell phone is supported.	On corporate phones, some Bluetooth settings may not be compatible or the cell phone Bluetooth function may be deactivated. You can obtain more information from your system administrator.

Listening to the radio

Using the radio

The radio supports the FM, AM and SiriusXM* (satellite radio) bands. By means of an HD Radio receiver, you also receive radio stations on the FM and AM band in digital format.



Fig. 30 FM station list (HD radio)

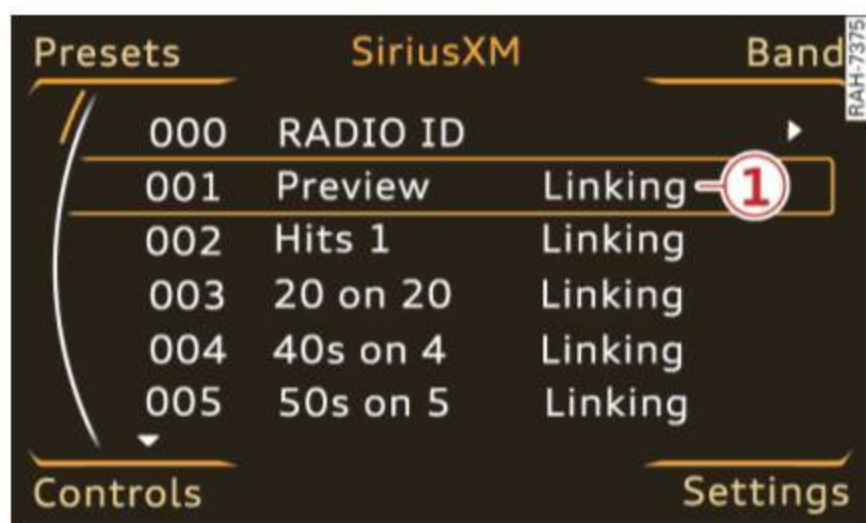


Fig. 31 SiriusXM station list

► Select: the **RADIO** button.

After selecting the radio, the last menu that was open is displayed.

- **Showing the station list:** Press the **RADIO** button again. The receivable stations are shown in the station list and can be selected directly.
- **Selecting a station:** Select and confirm a station from the station list. FM/AM stations that can be received by digital radio are marked with the HD symbol **(A)** ⇒ fig. 30. If reception quality declines, the radio automatically switches to the analog FM/AM station. Digital FM HD Radio stations may contain multiple additional stations*. The available additional stations* are listed under the radio station. When you leave the reception area, additional stations* that are

no longer received are marked with a symbol **(B)** ⇒ fig. 30.

- **Quick storing from the station list:** Select and confirm a station from the station list. Press and hold the control knob until **Store station name/frequency here** appears in the presets list. Select and confirm the desired presets location.
- **Selecting a stored station:** Press the **Presets** control button. Select and confirm a station from the presets list.
- **Tagging a song for iTunes* (SiriusXM*/HD Radio*):** Connect your Apple device to the Audi music interface in your MMI. Press the control in the station list. Select and confirm **Tag this song for iTunes**. The track that is currently playing is stored on your Apple device. Synchronize your Apple device with iTunes. The tagged track will display the next time you open your iTunes media center. If there is no Apple device connected, the tagged track are stored temporarily in the MMI (maximum of 50 tracks). Once you connect your Apple device to the Audi music interface, the tags are stored on the device.
- **Updating the station list:** Select and confirm **Update station list** in the AM frequency band. Station lists in other frequency bands are updated automatically. If the last station that was playing in the SiriusXM* band is no longer available after updating, station 001 (Preview) is automatically selected.
- **Selecting the frequency band:** Press the **Band** control button. Select and confirm the desired band. **Or:** Press the **RADIO** button repeatedly until the desired frequency band is displayed. The current band is shown in the title line.

If there is a loss of radio signal (SiriusXM*), the following system information may be shown:

LINKING: The tuner is currently not receiving a satellite signal **(1)** ⇒ fig. 31.

ANTENNA: The antenna is not ready. Contact your authorized Audi dealer for more information.

The system information turns off when the radio stations are received again. ►

Tips

- HD Radio reception is not available in Canada.
- That stations in the AM station list are still displayed after you leave the reception area. There is no longer any reception.
- Contact the SiriusXM* provider if you would like to receive satellite programming.
- Buildings, tunnels, bridges, open areas, other vehicles or objects on the vehicle roof can affect reception.
- Satellite radio is not available in Alaska and Hawaii.
- iTunes tagging* is not supported by all radio stations.

Radio functions

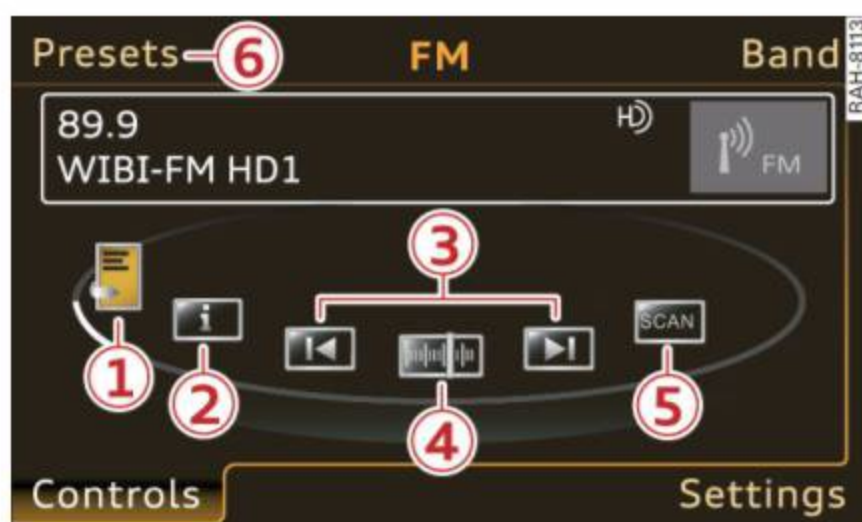


Fig. 32 FM band functions

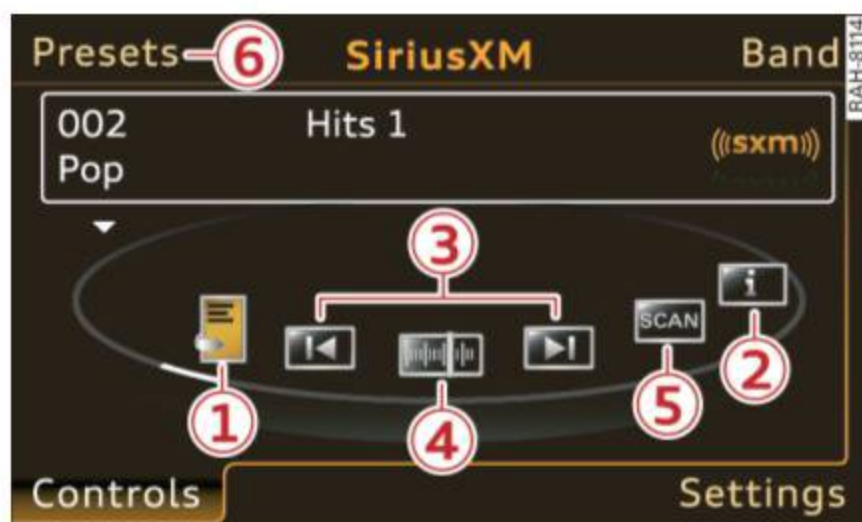


Fig. 33 SiriusXM band functions

- Select: the **RADIO** button > **Controls** control button.

The following functions can be selected, depending on the band that is selected:

① Store station / Store channel

The selected station/channel is stored in the next empty position in the presets list ⑥ ⇒ fig. 32. Select and confirm the desired presets location.

② Information (FM/AM/SiriusXM*)

Information that accompanies the programs is displayed.

③ Seek down/Seek up (FM, AM)

The previous ◀ or next ▶ receivable station is selected. **Or:** Move the On/Off knob slightly to the left or right (◀◀ / ▶▶).

Previous/Next (SiriusXM*)

The previous ◀ or next ▶ channel is selected. **Or:** Move the On/Off knob slightly to the left or right (◀◀ / ▶▶).

④ Manual search (FM, AM)

The frequency bars are displayed. Select and confirm the desired frequency.

Manual search (SiriusXM*)

Select and confirm the desired channel from the SiriusXM frequency band*.

⑤ SCAN

All stations are played for several seconds each.

⑥ Presets

The presets list can contain up to 50 stations/channels from all frequency bands.

- **Storing stations:** Select the **Presets** control button > **store station name/frequency**. The selected station is stored in the next empty position in the presets list. Select and confirm the desired presets location.
- **Selecting a stored station:** Press the **Presets** control button. Select and confirm a station from the presets list.
- **Moving stored stations:** Press the **Presets** control button. Select and confirm the station from the presets list. Turn the control knob to the top of the list and select **Move station name or frequency**. Select and confirm the desired presets location.

Additional settings

► Select: the **RADIO** button > **Settings** control button.

Depending on the selected band (FM, AM SiriusXM*, HD Radio*), the following settings can be adjusted:

Sound settings

Refer to ⇨ *page 21, Adjusting the sound*.

HD Radio* (FM/AM)

You can switch the HD Radio reception on or off.

Show channel information (SiriusXM)

When this function is switched on ☒ and the station list is open, various information for the current station (such as the station name, the artist, the song, the station logo and the cover art) is displayed in a pop-up after several seconds.

Additional station information

When this function is switched on ☒ and the station or presets list is open, various information for the current station (such as the station name, artist, song, station logo and cover art) is displayed after about ten seconds.

Station names (FM)

- **Variable:** Scrolling text transmitted by the FM stations is shown in the MMI display.
- **Fixed:** Scrolling text transmitted by the FM stations is not shown in the MMI display. Only the current section of the scrolling text is displayed.

Troubleshooting

Problem	Solution
A station with poor reception is no longer displayed in the station list once you switch to a different station.	Store the station ahead of time and then select it from the presets list later ⑥ ⇨ <i>page 35, fig. 32</i> .

Station sorting (SiriusXM*)

- **Channel number:** The stations are sorted in ascending order according to their station number.
- **Channel name:** The stations are listed in alphabetical order.
- **Category and channel number:** The channels are sorted according to their category and then according to their channel number.
- **Category and channel name:** The channels are sorted according to their category and then according to their channel name.

Category filter (SiriusXM*)

The stations shown in the station list can be filtered by your personal preferences and by program type. The program categories that you can select depend on what is offered by your provider. Select the **Disable category filter** option to deactivate all filter options and display all available stations in the satellite station list.

Radio ID* (SiriusXM*)

The electronic serial number (ESN) is displayed. The number is required to log in to SiriusXM.

Delete presets

Requirement: A station must be stored in the presets list ⇨ *page 35*.

Stored stations can be deleted **Individually** or **All** at once.

Playing media

Accessing media

You can start and operate various media drives through the MMI control panel.

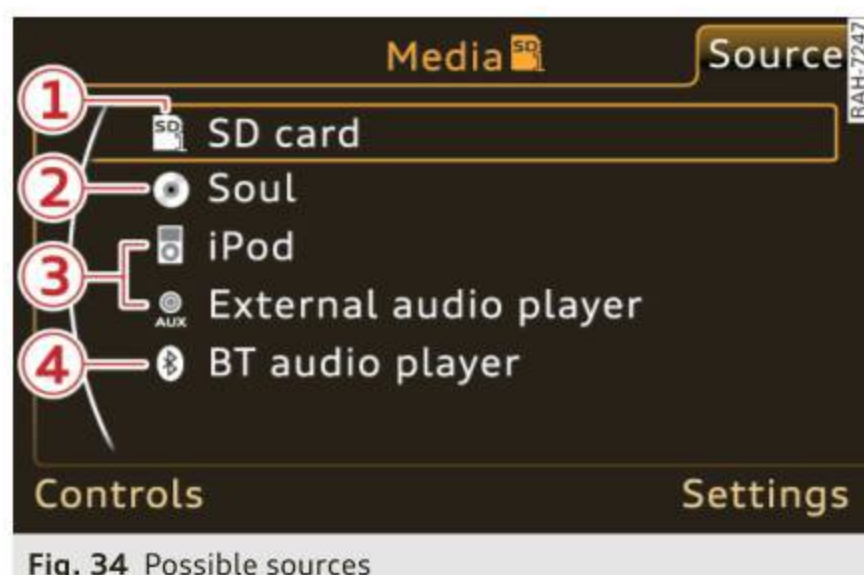


Fig. 34 Possible sources

Requirement: A media drive must contain audio files ⇒ page 15.

► Select: the **MEDIA** button.

The source overview or the last file that was playing is displayed after selecting Media.

- **Selecting a source:** Press the **Source** control button. Select and confirm a source from the list. **Or:** Press the **MEDIA** button repeatedly until the desired source is displayed.
- **Playing an audio file:** Select a folder, if necessary. Select and confirm a track.
- **Moving one level up in the folder structure :** Press the **BACK** button. **Or:** Select and confirm **Go up**.
- **Moving to the highest level in the folder structure:** Press the **MEDIA** button.

Possible sources ⇒ fig. 34:

- ① SD card reader ⇒ page 16
- ② CD drive ⇒ page 15
- ③ Depending on equipment:
 - Audi music interface* (for example, an iPod, USB or an external audio/video input*) ⇒ page 17
 - External audio player* ⇒ page 18
- ④ Bluetooth audio player* ⇒ page 16

Tips

You can scroll through long lists of folders or tracks quickly by turning the control knob quickly. The scrolling speed depends on the number of folders or tracks.

Media functions

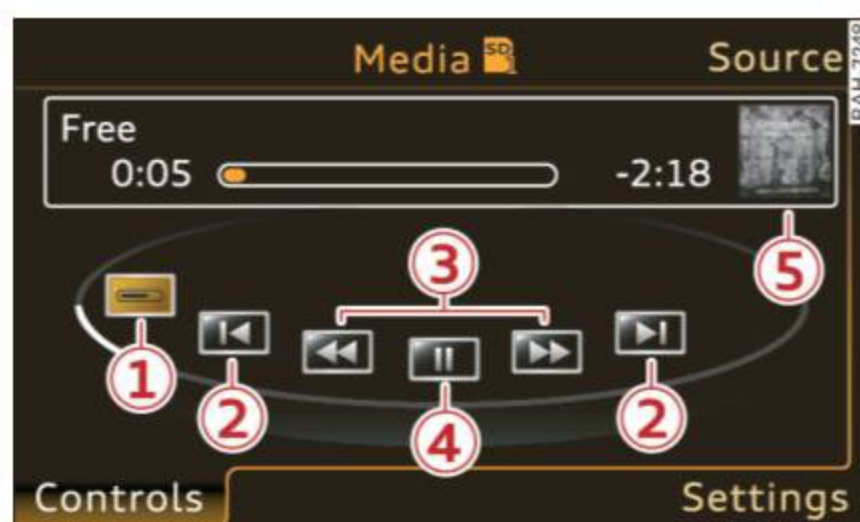


Fig. 35 SD card functions

► Select: the **MEDIA** button > **Controls** control button.

① Changing current playback position*

You can activate the play bar in the information window ⑤ ⇒ fig. 35. Select and confirm the desired playback position.

② Previous/next track

The previous ◀ or next ▶ track plays. If you select ◀ and confirm within the first ten seconds of playback, the previous track will play. If you press it after approximately ten seconds, the current track will begin playing again from the beginning. **Or:** Move the On/Off knob to the left or right (◀◀ / ▶▶).

③ Fast forwarding/rewinding

Press and hold the control button to rewind ◀◀ or fast forward ▶▶ an audio file. **Or:** Move the On/Off knob to the left or right (◀◀ / ▶▶) and press and hold it.

④ Pause

The mute symbol ③ ⇒ page 7 appears in the status line in the MMI display. To resume playback, select and confirm **II (Pause)** again. **Or:** Press the On/Off knob briefly.

⑤ Information window

Various information about the current track (such as the embedded album cover*), the playing time and remaining playing time may be displayed, depending on availability.

Additional settings

Requirement: A source must be selected.

- Select: the MEDIA button > **Settings** control button.

The following settings can be selected, depending on the active source and the storage medium:

Sound settings

Refer to ⇨ *page 21*.

Repeating*

Off: The repeat options are switched off.

Folder: The tracks in the folder that is currently selected are repeated.

Track: The track currently being played will be repeated. Shuffle is not possible.

Playlist: The playlist currently being played will be repeated.

Shuffle*

When this function is switched on ☒, all files in the active source or in the selected repeat option (**Repeat**) are played in random order.

Video picture settings*

Requirement: A portable audio device must be connected using the iPod adapter cable plus*/AV adapter cable* ⇨ *page 17*.

The **Auto** setting is recommended for the picture format.

Picture for- mat	Information
Auto	The MMI detects the picture format of the source and displays the image in the optimum ratio. Black bars may appear on the sides of the display, depending on the source format and the MMI display that is installed.
Zoom	The image is enlarged to fill the entire MMI display. Switch the function off if the image is distorted.
Original	The image is displayed in the ratio of the source format. Select this option if the image is distorted or a section of the image is cut off when Auto is selected.
4:3	The image is fixed in the 4:3 picture format. Black bars are shown on the sides of the MMI display.
16:9	The image is fixed in the 16:9 picture format. Black bars are shown in the upper and lower edges of the MMI display.

AV standard: You can select **PAL**, **NTSC** or **Auto** for an externally connected device. The same standard must be selected on the device. Selecting the incorrect AV Standard can cause a poor-quality image, no image or no color at all.

Brightness: Reduce or increase the brightness.

Contrast: Reduce or increase the contrast.

Color: Reduce or increase the intensity of the color.

Input level*

Requirement: A portable device must be connected through the 3.5 mm stereo jack*/AV*/iPod adapter cable (plus)* ⇨ *page 17*, ⇨ *page 18*.

The volume of the portable device is adapted to the MMI. Audi recommends adjusting the volume of the portable audio device to 70% of the maximum output.

Additional song information*

When the function is switched on  and a playlist is open, various information about the current track (such as artist, album and embedded album cover*) as well as the playing time and the remaining playing time are displayed. By pressing the control knob in this view, you can also select and confirm a new track or select the desired location in the play bar of the current track.

Tips

- The video image is only displayed when the vehicle is stationary for safety reasons. Only the sound from the video plays while driving.
- The **Repeat*** and **Shuffle*** functions switch off automatically when the source changes in the **Media** menu.
- When synchronizing a portable device with "Cloud" services, playlists may display incorrectly in the MMI. Use the media center in the device.

A

Adapter cable (Audi music interface)	17
Additional information (radio)	35
Additional song information	38
Adjusting the sound (tone)	21
Adjusting the volume	
MMI control panel	6
Multifunction steering wheel	8, 12
Audi music interface	17
Adapter cable	17
Connecting/disconnecting	17
Audio file	
Fast forwarding/rewinding	37
Next/previous	37
Playing	37
Audio player	
<i>refer to</i> Bluetooth	16
AUX input	18

B

Balance (sound)	21
Bass (sound)	21
Bluetooth	
Audio player	16
Connecting a cell phone	25
Device search	31
Settings	31
Buttons	
MMI control panel	6
Multifunction steering wheel	8

C

Cable (Audi music interface)	17
Call	
Accepting/rejecting	27
Answering/ignoring	9
Holding/resuming	9
Calling a contact	9
Call list	
Voice recognition system	13
Care	5
CD	
Drive	15
Ejecting	15

Loading	15
Multifunction steering wheel	10
Notes	15
Player	15
<i>also refer to</i> Media	15, 37
Cell phone	
Connecting	25
Playing music	16
<i>also refer to</i> Telephone	24
Cell phone preparation	
<i>refer to</i> Telephone	24
Characters	7
Clock	21
Cockpit overview	4
Command (voice recognition system)	12
Connecting/disconnecting an MP3 player	16, 18
Connecting/removing a device	18
Connections	
<i>refer to</i> Media drives	15
Contact	
Calling	30
Deleting	30, 32
Editing	30
Importing/exporting	30
Reading	30
Selecting	29
Storing	31
Control buttons	6
Control knob	6
Controls	
MMI control panel	4, 6
Multifunction steering wheel	8
Overview	4

D

Data encryption	22
Data protection (media drives)	15
Data protection (storing a contact)	31
Date	21
Daylight saving time	21
Deleting	
Bluetooth device	31
Contact	30, 32
Favorites	31
Recent calls	31

Stations	36	G	
Voice mail number	31	Global commands (voice recognition system)	13
Directory	29	H	
Memory capacity	32	HD Radio (digital radio)	36
Multifunction steering wheel	9	Help	
Settings	32	Emergency call	28
Sort order	32	Media drives	20
Stored locations	29	Radio	36
Storing a contact	31	Telephone	33
Directory entry		Voice recognition system	13
<i>refer to</i> Contact	30	I	
Display		Importing/exporting (contacts)	30
Brightness	22	In-car entertainment fader	22
MMI control panel	7	Incoming call	
Multifunction steering wheel	8	Options during a call	27
Settings	22	<i>also refer to</i> Telephone	24
Settings (video)	38	Input	
Driver information system	8	Using the MMI control panel	31
Drives		Using the voice recognition system	12
<i>refer to</i> Media drives	15	Input level	38
Driving noise compensation (SDV)	21	iPod	
DTMF tones	27	Input level	38
Dynamic volume		Video image settings	38
<i>refer to</i> In-car entertainment fader	22	<i>also refer to</i> Audi music interface	17
E		iTunes tagging	34
Emergency		J	
<i>refer to</i> Emergency call	28	Join conference	9, 27
Emergency call		L	
Automatic emergency call	28	Listening to music	
MMI control panel	28	<i>refer to</i> Playing media	37
End call	9	Listening to the radio	
Ending a phone call	9	MMI control panel	34
Entering a phone number	27	Multifunction steering wheel	10
Exporting/importing (contacts)	30	Voice recognition system	14
F		Loss of reception	
Factory default settings	22	Radio	36
Fader (sound)	21	M	
Fast forwarding (audio file)	37	Managing contacts (directory)	
Favorites		Favorites	31
Deleting	31		
Storing	31		
File formats (media drives)	19		

Media	
Accessing	37
Formats	19
Info window	37
Next/previous track	37
Pause	37
Selecting a source	37
Media drives	
Audi music interface	17
AUX input	18
Bluetooth audio player	16
CD drive	15
Restrictions	15
SD card readers	16
Supported formats	19
Troubleshooting	20
Memory	
Directory	32
Menu language	22
Microphone on/off	9
MMI components	4
MMI control panel	4
Controls	4
Operating	6
Restarting	22
Switching on/off	6
Symbols/menus	7
System update	22
Multifunction steering wheel	
Button	8
Call	9
Directory	9
Listening to the radio	10
Operating	8
Pause	8
Playing media	10
Recent calls	9
Switching tabs	8
Using the telephone	9
Voice recognition system	8
Mute	6, 8
myAudi contacts	30

N

Network selection (telephone mode)	31
Network settings	31
Next/previous track	37

Notes

Audi music interface	17
Care	5
CD	15
Data protection (media drives)	15
Data protection (storing a contact)	31
Media drives	15
Operating Manual	3
Traffic safety	4
Using the telephone	24
Voice recognition system	12, 13

O

On/Off knob	6
On hold (hold call)	27
Opening a menu (operation)	6
Operating	
MMI control panel	6
Multifunction steering wheel	8
Voice recognition system	12
Overview	
Controls	4
Menus and symbols	7
Voice recognition system	12

P

Pause	8, 37
Pausing/continuing playback	10
Phone book	
<i>refer to</i> Directory	29
Picture format	38
Playing media	37
Additional settings	38
MMI control panel	37
Multifunction steering wheel	10
Voice recognition system	14
Presets list	35
Programming a button (multifunction steering wheel)	8
Prompts	22
Prompt (voice recognition system)	12

R

Radio

Announcements	36
Deleting stations	36
Moving a station	35
Next/previous station	35
Presets list	35
Station tracking	36
Storing a station	35
Troubleshooting	36

Reading aloud

Contact	30
Possible commands	13

Recent calls

MMI control panel	26
Multifunction steering wheel	9

Redialing

Repeating (audio file)

Requirements

Connecting a cell phone	25
Phone calls	26

Reset (restart)

Restart (reset)

Restricted use of telephone

Rewinding (audio file)

Ringtone settings

S

Safety

Using the telephone	24
Voice recognition system	12

Screen

<i>refer to Display</i>	8
-------------------------------	---

SD card readers

SDV (speed dependent volume control)

Security

Data protection (media drives)	15
Data protection (storing a contact)	31

Seek (radio)

Selecting a frequency

Selecting a source

MMI control panel	37
Multifunction steering wheel	10
Voice recognition system	14

Sending a tone sequence

Settings

Directory	32
Media	38
Radio	36
System	22
Telephone	31
Voice recognition system	12

Setting the frequency band

Setting the language

Setup MMI (system settings)

Short dialog

Shuffle

SiriusXM (satellite radio)

Software version

Station assignment (radio)

Station list

Station name (radio)

Station sorting (radio)

Station tracking (radio)

Steering wheel

<i>refer to Multifunction steering wheel</i>	8
--	---

Stereo jack (AUX connection)

Stored location (directory)

Storing

Favorites	31
-----------------	----

Subwoofer (sound)

Swap call

Switch

Switching tabs

<i>refer to Multifunction steering wheel</i>	8
--	---

Switching the microphone on/off

Symbols

System settings

Systems (sound)

System update

T

Telephone

Main functions	26
----------------------	----

Options during a phone call	9
-----------------------------------	---

Settings	31
----------------	----

Switching the microphone on/off	9
---------------------------------------	---

Troubleshooting	33
-----------------------	----

<i>also refer to Cell phone</i>	25
---------------------------------------	----

Time

Tone (sound)	21
Traffic safety	4
Treble (sound)	21
Troubleshooting	
Media drives	20
Radio	36
Telephone	33

U

Units of measurement	22
Update software	22
Using the telephone	
MMI control pane	24
Multifunction steering wheel	9
Options during a call	27
Voice recognition system	13

V

Version information	22
Video image settings	38
Voice mail	28
Deleting the voice mail number	31
Entering the voice mail number	31
Voice recognition system	12
Command	12
Help commands	13
Input assistance	12
Listening to the radio	14
Multifunction steering wheel	8
Operating	12
Overview	12
Playing media	14
Settings	12
Switching on/off	12
Using the telephone	13
Volume	8, 12
Volume	6
In-car entertainment fader	22
Input level	38
Parking aid	22
System volume	22
Voice recognition system	12

© 2014 AUDI AG

It has always been Audi's policy to continuously improve its products. Audi, therefore, reserves the right to make changes in design and specifications, and to make additions or improvements in its products without incurring any obligation to install them on products previously manufactured. Text, illustrations and specifications in this book are based on the most up-to-date information available at the time of printing.

May not be reproduced or translated in whole or in part without the written consent of AUDI AG. All rights reserved by AUDI AG. Subject to alteration or amendment. Printed in Germany.

Editorial deadline: 08/25/2014



For the sake of the environment

Printed on environmentally friendly paper
(bleached without chlorine, recyclable)

Operating Manual
MMI Radio
Englisch Nordamerika 11.2014
152.566.3MS.21



1525663MS21

www.audi.com