

## Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

### 50. Bulkhead Wiring Harness (In Engine Compartment)

#### A: LOCATION

#### 1. LHD NON-TURBO MODEL

##### • Bulkhead Wiring Harness


| Connector      |      |       |      | Connecting to |                                      |
|----------------|------|-------|------|---------------|--------------------------------------|
| No.            | Pole | Color | Area | No.           | Name                                 |
| B8             | 5    | Gray  | B-4  |               | Front wiper motor                    |
| B11            | 20   | Black | B-3  | T4            | Transmission cord (AT)               |
| B12            | 12   | ★     | B-3  | T3            |                                      |
| B14            | 1    | Black | B-4  |               | Starter (Magnet)                     |
| B15            | 2    | Gray  | B-2  |               | ABS front sensor RH                  |
| B16            | 2    | Gray  | B-4  |               | Brake fluid level switch             |
| B17            | 3    | ★     | B-3  |               | Vehicle speed sensor (MT)            |
| B18            | 4    | ★     | C-3  |               | Front oxygen (A/F) sensor (With OBD) |
| B19            | 4    | ★     | B-3  | T5            | Rear oxygen sensor (With OBD)        |
| B21            | 20   | Gray  | C-2  | E2            | Engine wiring harness                |
| B22            | 16   | Brown | B-2  | E3            |                                      |
| B24            | 2    | Gray  | B-3  | T1            | Back-up light switch (MT)            |
| B25            | 2    | Brown | B-3  | T2            | Neutral position switch (MT)         |
| B28            | 3    | ★     | B-2  |               | CO resistor                          |
| B29            | 2    | ★     | B-3  | T8            | Dual range LO switch (MT)            |
| B301           | 26   | Black | B-2  |               | ABS control module                   |
| B302           | 1    | ★     | B-2  |               | ABS motor ground                     |
| B305           | 2    | ★     | B-2  |               | Side turn signal light RH            |
| B306           | 2    | Black | C-1  |               | Front fog light RH                   |
| B328           | 6    | Black | B-2  | E-58          | Engine wiring harness                |
| ★: Non-colored |      |       |      |               |                                      |

##### • Airbag Wiring Harness

| Connector |      |        |      | Connecting to |                     |
|-----------|------|--------|------|---------------|---------------------|
| No.       | Pole | Color  | Area | No.           | Name                |
| AB15      | 2    | Yellow | C-1  |               | Front sub sensor RH |

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

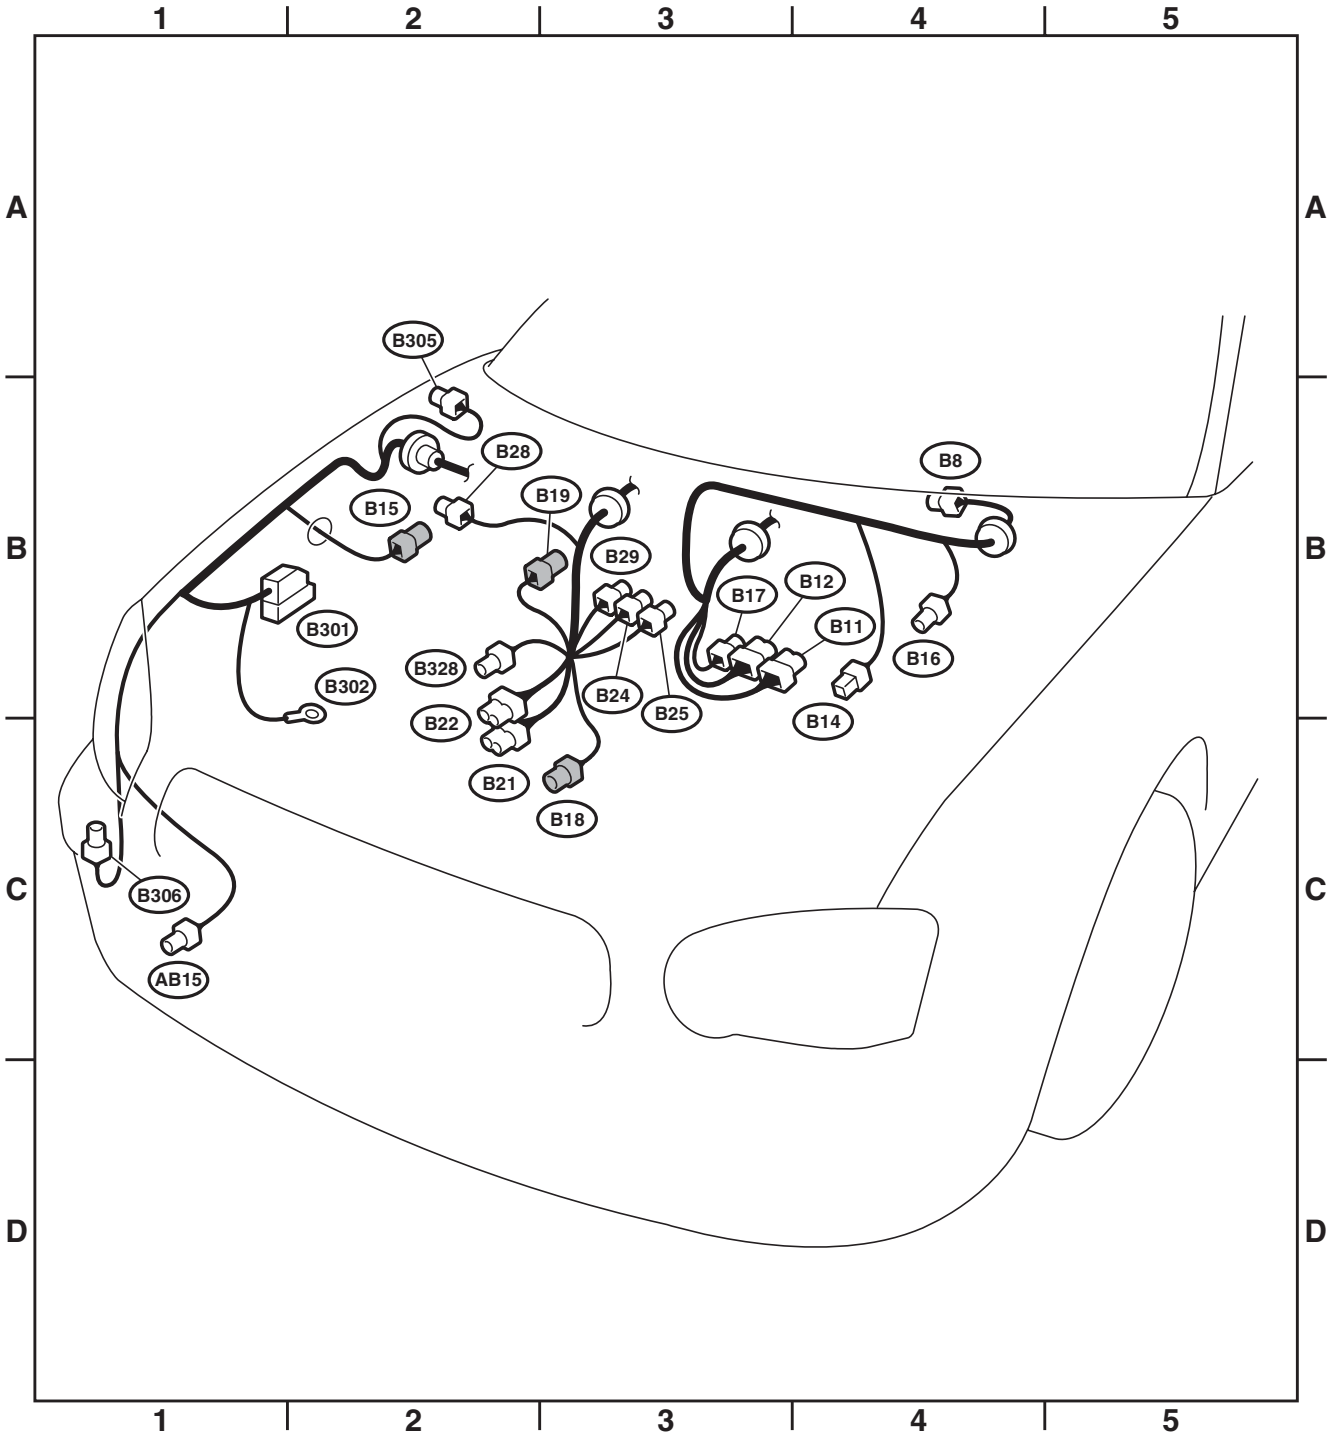

WI-07252

## Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

### 2. LHD TURBO MODEL

#### • Bulkhead Wiring Harness


| Connector      |      |       |      | Connecting to |                                                                   |
|----------------|------|-------|------|---------------|-------------------------------------------------------------------|
| No.            | Pole | Color | Area | No.           | Name                                                              |
| B3             | 5    | Gray  | B-2  |               | Mass air flow sensor                                              |
| B8             | 5    | ★     | B-4  |               | Front wiper motor                                                 |
| B14            | 1    | Black | B-4  |               | Starter (Magnet)                                                  |
| B15            | 2    | Gray  | B-2  |               | ABS front sensor RH                                               |
| B16            | 2    | Gray  | B-4  |               | Brake fluid level switch                                          |
| B17            | 4    | ★     | B-3  |               | Vehicle speed sensor (Except STi model)                           |
|                | 3    | ★     | B-3  |               | Vehicle speed sensor (STi model)                                  |
| B18            | 4    | ★     | B-2  |               | Front oxygen (A/F) sensor                                         |
| B19            | 4    | ★     | B-3  |               | Rear oxygen sensor                                                |
| B20            | 10   | ★     | B-2  | E1            | Engine wiring harness                                             |
| B127           | 2    | Blue  | B-2  |               | Wastegate control solenoid valve                                  |
| B128           | 6    | ★     | B-3  | T9            | Transmission (Model with Driver's control center differential)    |
|                | 4    | ★     | B-3  | T9            | Transmission (Model without Driver's control center differential) |
| B279           | 2    | ★     | B-2  |               | Exhaust temperature sensor                                        |
| B301           | 31   | Black | B-2  |               | ABS control module (ABS 5.3 i)                                    |
|                | 26   | Black | B-2  |               | ABS control module (ABS 8)                                        |
| B302           | 1    | ★     | B-2  |               | ABS motor ground                                                  |
| B303           | 8    | Gray  | B-1  |               | Shield joint connector (ABS)                                      |
| B305           | 2    | ★     | B-2  |               | Side turn signal light RH                                         |
| B306           | 2    | Black | C-1  |               | Front fog light RH                                                |
| ★: Non-colored |      |       |      |               |                                                                   |

#### • Airbag Wiring Harness

| Connector |      |        |      | Connecting to |                     |
|-----------|------|--------|------|---------------|---------------------|
| No.       | Pole | Color  | Area | No.           | Name                |
| AB15      | 2    | Yellow | C-1  |               | Front sub sensor RH |

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

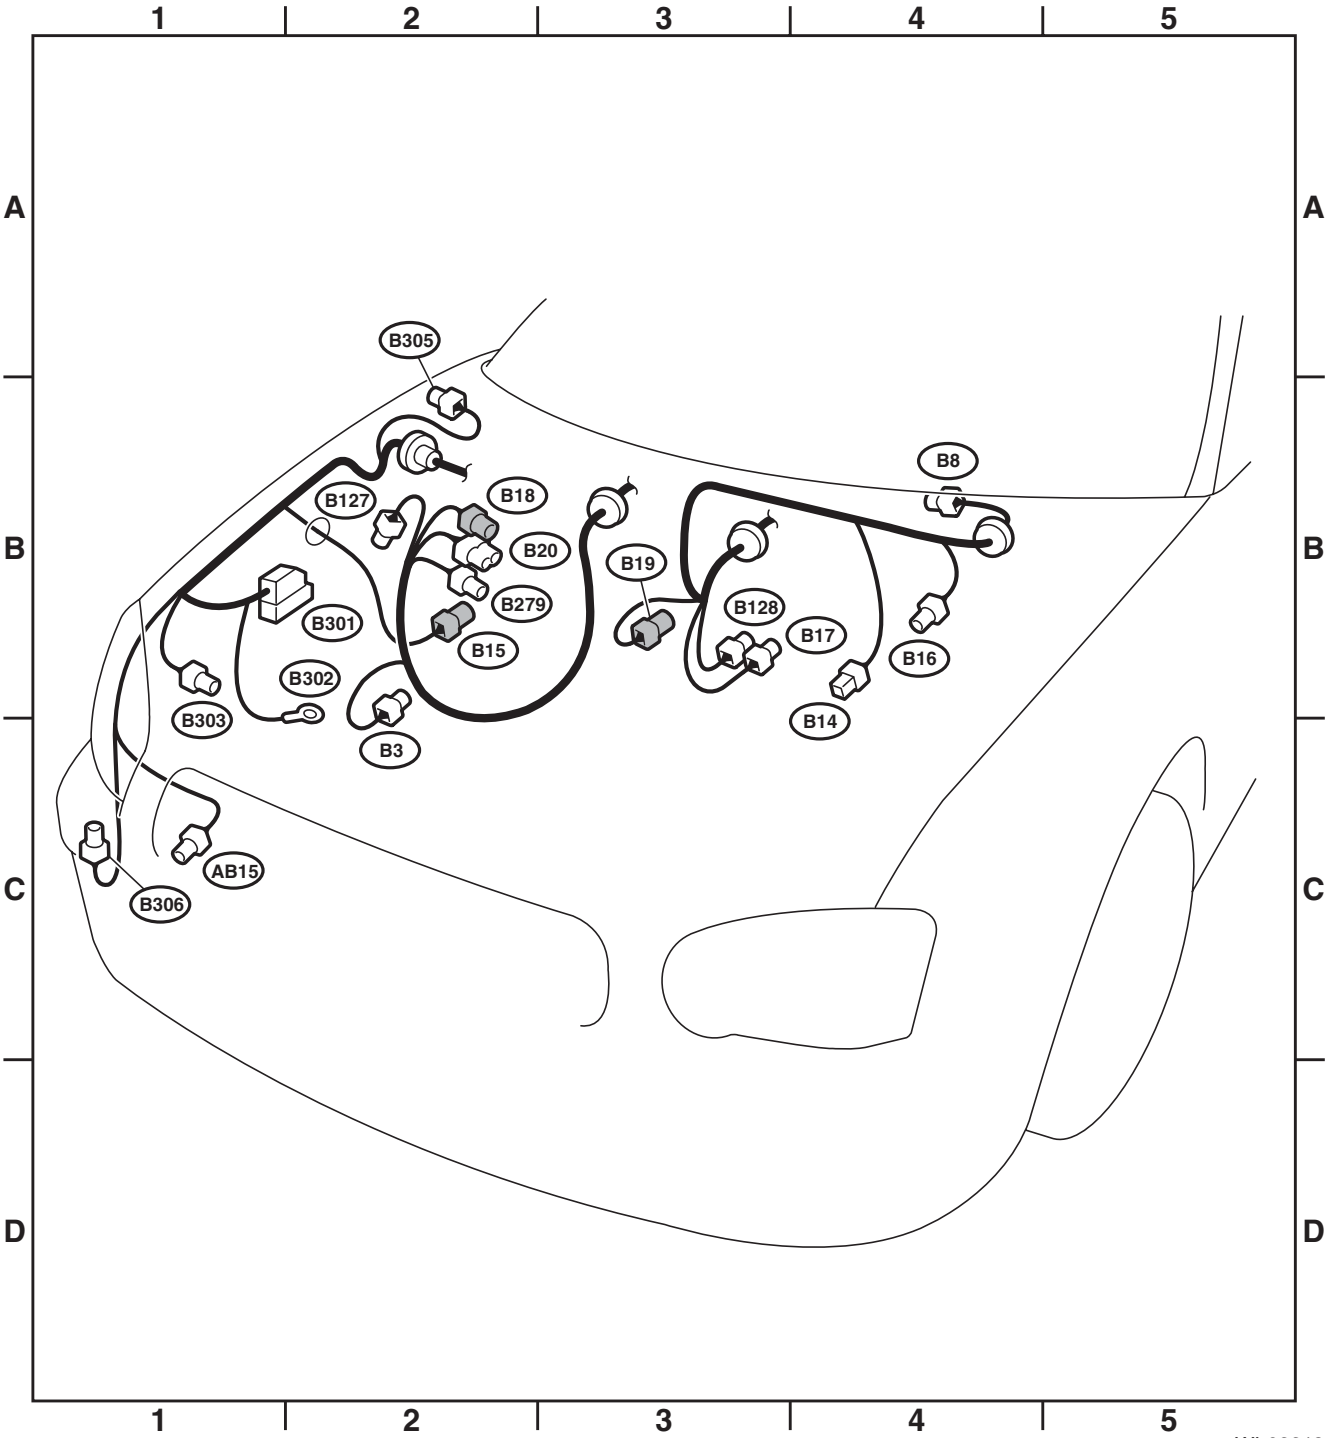

WI-02218

## Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

### 3. RHD NON-TURBO MODEL

#### • Bulkhead Wiring Harness

| Connector |      |            |      | Connecting to |                                                                  |
|-----------|------|------------|------|---------------|------------------------------------------------------------------|
| No.       | Pole | Color      | Area | No.           | Name                                                             |
| B7        | 6    | Black      | B-4  |               | Cruise control actuator                                          |
| B8        | 5    | Black      | B-3  |               | Front wiper motor                                                |
| B11       | 20   | Black      | B-3  | T4            | Transmission cord (AT)                                           |
| B12       | 12   | ★          | B-3  | T3            |                                                                  |
| B14       | 1    | Black      | B-3  |               | Starter (Magnet)                                                 |
| B16       | 2    | Gray       | B-2  |               | Brake fluid level switch                                         |
| B17       | 3    | Black      | B-3  |               | Vehicle speed sensor (MT)                                        |
| B18       | 4    | ★          | B-2  |               | Oxygen sensor (Catalytic converter equipped vehicle without OBD) |
|           | 4    | ★          | C-2  |               | Front oxygen (A/F) sensor (With OBD)                             |
| B19       | 4    | ★          | B-3  | T5            | Rear oxygen sensor (With OBD)                                    |
| B21       | 20   | Light gray | C-2  | E2            | Engine wiring harness                                            |
| B22       | 16   | Brown      | B-2  | E3            |                                                                  |
| B24       | 2    | Gray       | B-3  | T1            | Back-up light switch (MT)                                        |
| B25       | 2    | Brown      | B-3  | T2            | Neutral position switch (MT)                                     |
| B28       | 3    | ★          | B-2  |               | CO resistor (Without catalytic converter)                        |
| B29       | 2    | ★          | B-3  | T8            | Dual range LO switch (MT)                                        |
| B143      | 3    | ★          | B-4  |               | Main fuse box (M/B)                                              |
| B144      | 6    | Black      | B-4  |               |                                                                  |
| B145      | 1    | ★          | B-4  |               |                                                                  |
| B146      | 2    | Green      | B-4  |               | Front washer motor                                               |
| B147      | 2    | ★          | C-4  |               | Rear washer motor                                                |
| B148      | 2    | ★          | B-5  |               | Side turn signal light LH                                        |
| B186      | 4    | Black      | B-4  |               | Main fuse box (M/B)                                              |
| B255      | 4    | Gray       | C-4  | F96           | Front wiring harness                                             |
| B328      | 6    | Black      | B-2  | E58           | Engine wiring harness                                            |


★: Non-colored

#### • Airbag Wiring Harness

| Connector |      |        |      | Connecting to |                     |
|-----------|------|--------|------|---------------|---------------------|
| No.       | Pole | Color  | Area | No.           | Name                |
| AB18      | 2    | Yellow | D-4  |               | Front sub sensor LH |

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

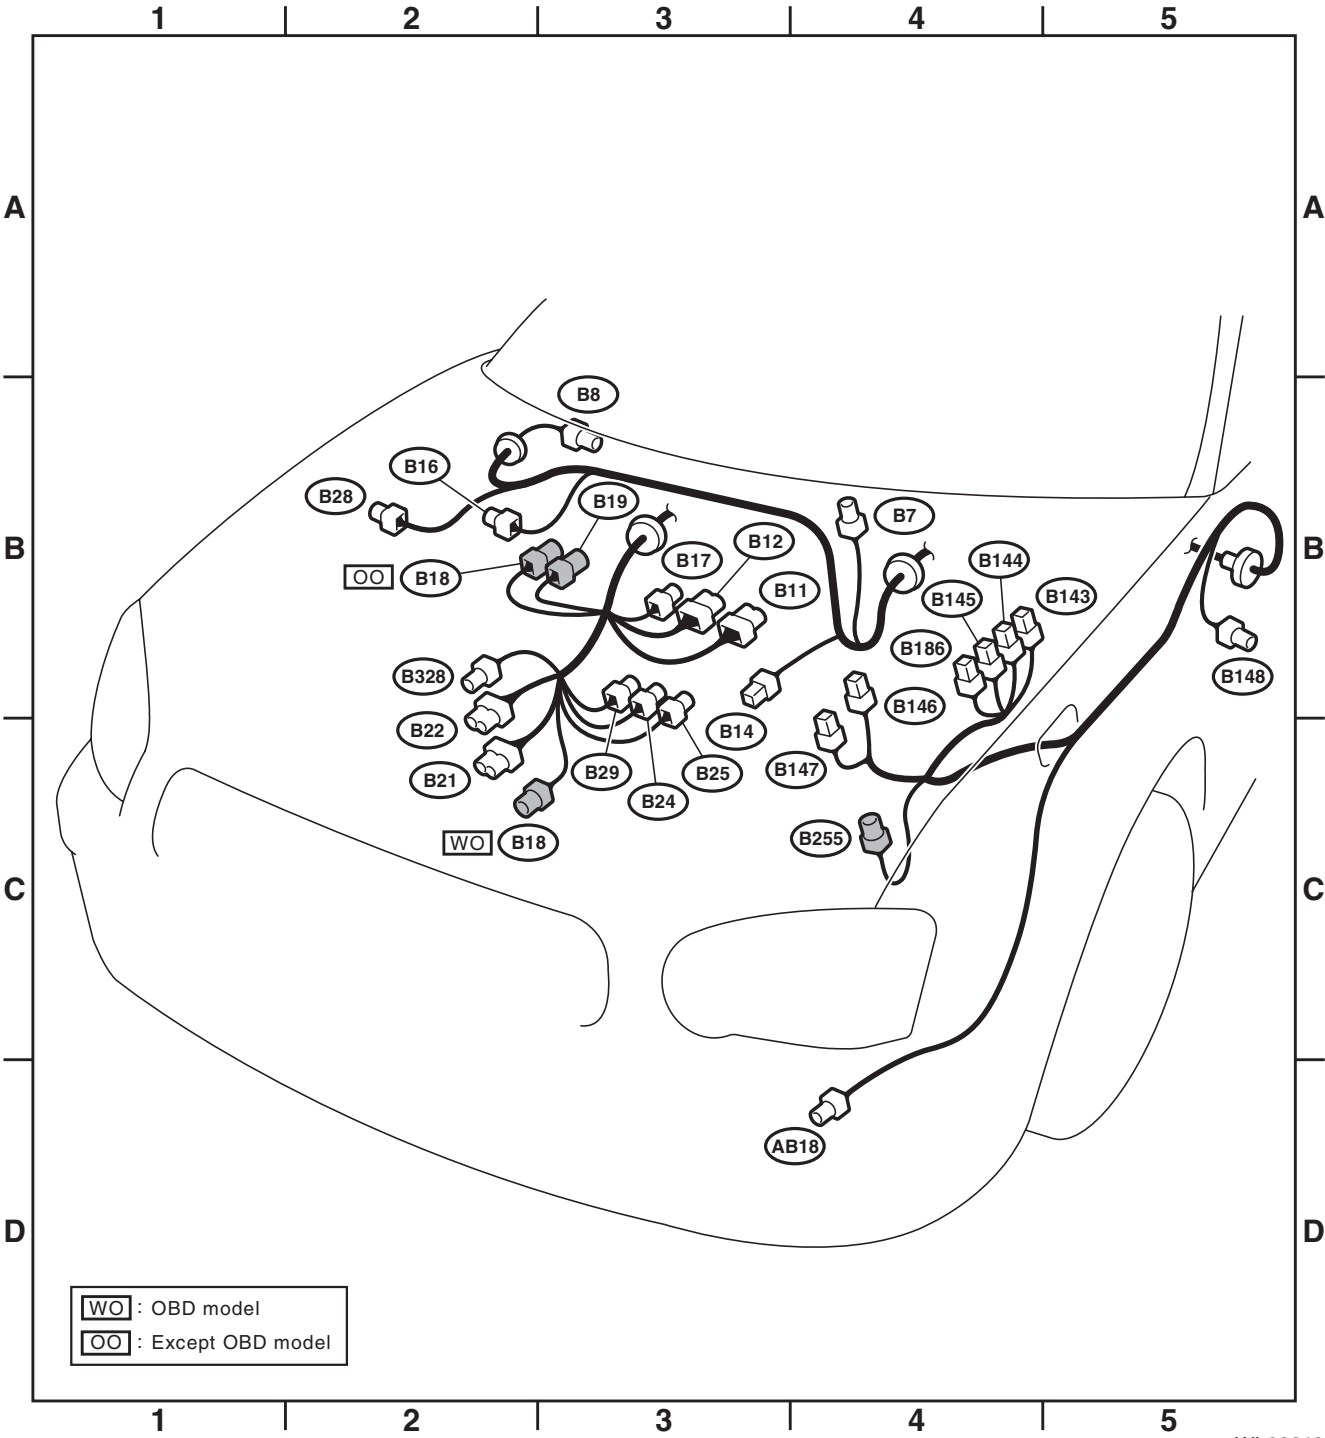

WI-02219

## Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

### 4. RHD TURBO MODEL

#### • Bulkhead Wiring Harness

| Connector |      |       |      | Connecting to |                                                                           |
|-----------|------|-------|------|---------------|---------------------------------------------------------------------------|
| No.       | Pole | Color | Area | No.           | Name                                                                      |
| B3        | 5    | Black | B-1  |               | Mass air flow sensor                                                      |
| B7        | 6    | Black | B-4  |               | Cruise control actuator                                                   |
| B8        | 5    | Gray  | B-3  |               | Front wiper motor                                                         |
| B11       | 20   | Black | B-3  | T4            | Transmission cord (AT)                                                    |
| B12       | 12   | ★     | B-3  | T3            |                                                                           |
| B14       | 1    | Black | B-3  |               | Starter (Magnet)                                                          |
| B16       | 2    | Gray  | B-2  |               | Brake fluid level switch                                                  |
| B17       | 3    | Black | B-3  |               | Vehicle speed sensor (MT-STi model)                                       |
|           | 4    | Black | B-3  |               | Vehicle speed sensor (Except for MT-STi model)                            |
| B18       | 4    | ★     | B-2  |               | Front oxygen (A/F) sensor                                                 |
| B19       | 4    | ★     | B-3  |               | Rear oxygen sensor                                                        |
| B20       | 10   | ★     | B-2  | E1            | Engine wiring harness                                                     |
| B21       | 20   | Black | C-3  | E2            | Engine wiring harness                                                     |
| B22       | 16   | Brown | C-3  | E3            |                                                                           |
| B127      | 2    | ★     | B-1  |               | Wastegate control solenoid valve                                          |
| B128      | 6    | Gray  | B-3  | T9            | Transmission cord (MT model with Driver's control center differential)    |
|           | 4    | Gray  | B-3  | T9            | Transmission cord (MT model without Driver's control center differential) |
| B143      | 3    | ★     | B-4  |               | Main fuse box (M/B)                                                       |
| B144      | 6    | Black | B-4  |               |                                                                           |
| B145      | 1    | ★     | B-4  |               |                                                                           |
| B146      | 2    | Green | B-4  |               | Front washer motor                                                        |
| B147      | 2    | ★     | C-4  |               | Rear washer motor                                                         |
| B148      | 2    | ★     | B-5  |               | Side turn signal light LH                                                 |
| B186      | 4    | Black | B-4  |               | Main fuse box (M/B)                                                       |
| B255      | 4    | Gray  | C-4  | F96           | Front wiring harness (With ABS)                                           |
| B279      | 2    | ★     | B-2  |               | Exhaust gas temperature sensor                                            |


★: Non-colored

#### • Airbag Wiring Harness

| Connector |      |        |      | Connecting to |                     |
|-----------|------|--------|------|---------------|---------------------|
| No.       | Pole | Color  | Area | No.           | Name                |
| AB18      | 2    | Yellow | D-4  |               | Front sub sensor LH |

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

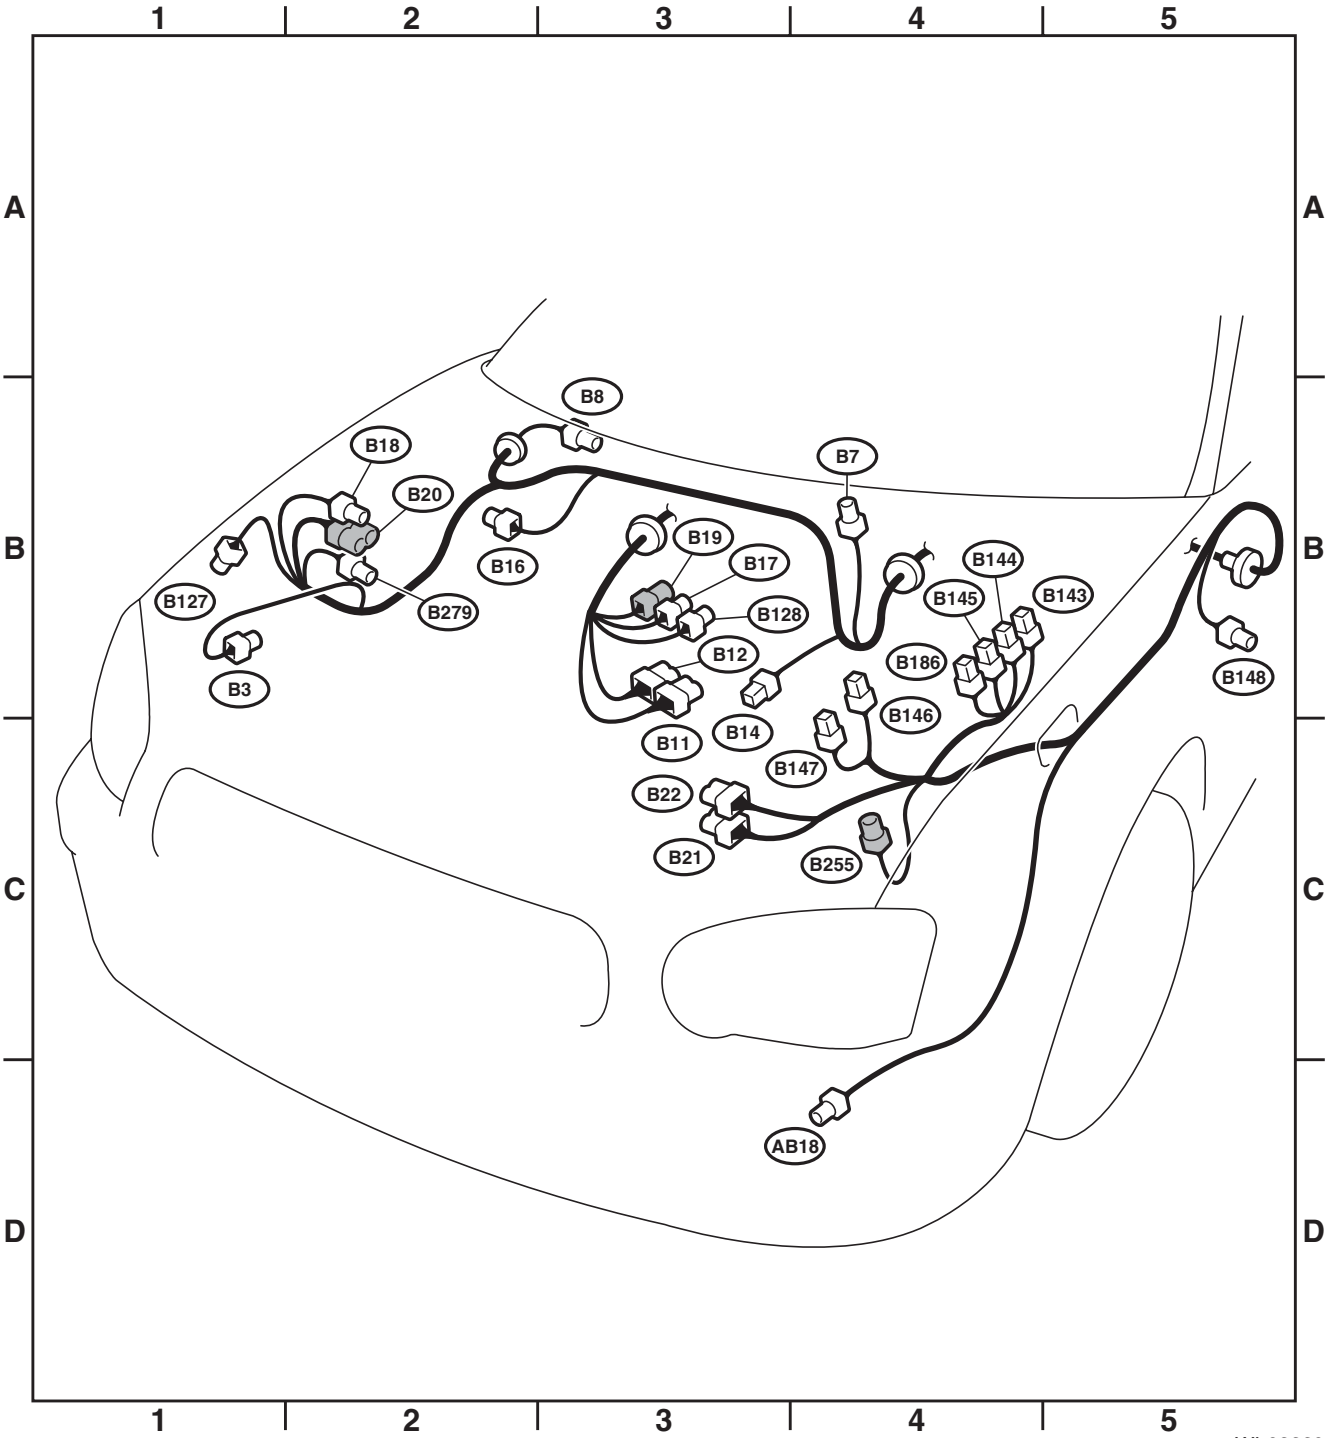

WI-02220

## Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

### 51. Bulkhead Wiring Harness (In Compartment)

#### A: LOCATION

##### 1. LHD MODEL

##### • Bulkhead Wiring Harness

| Connector |      |        |      | Connecting to |                                                            |
|-----------|------|--------|------|---------------|------------------------------------------------------------|
| No.       | Pole | Color  | Area | No.           | Name                                                       |
| B30       | 25   | ★      | D-1  | D1            | Front door cord LH                                         |
| B31       | 6    | Yellow | D-1  | AB1           | SRS (Airbag) harness                                       |
| B32       | 3    | Black  | B-2  |               | Turn signal and hazard module                              |
| B36       | 28   | Blue   | B-3  | i1            | Instrument panel wiring harness                            |
| B37       | 25   | ★      | B-3  | i2            |                                                            |
| B40       | 16   | Black  | C-2  |               | Data link connector                                        |
| B41       | 2    | ★      | C-1  |               | Power window circuit breaker                               |
| B44       | 10   | ★      | C-1  |               | Seat belt timer module                                     |
| B46       | 4    | Green  | B-5  |               | Fuel pump relay                                            |
| B47       | 6    | Brown  | B-5  |               | Main relay                                                 |
| B50       | 4    | ★      | C-1  |               | Blower fan motor relay                                     |
| B51       | 8    | Blue   | C-1  |               | Fuse & relay box (F/B)                                     |
| B52       | 7    | ★      | C-1  |               |                                                            |
| B53       | 12   | Black  | B-2  |               | Shield joint connector (AT)                                |
| B54       | 24   | ★      | B-3  |               | TCM                                                        |
| B55       | 24   | Gray   | B-3  |               |                                                            |
| B56       | 24   | Green  | B-2  |               |                                                            |
| B61       | 8    | ★      | B-1  | F44           |                                                            |
| B62       | 24   | ★      | B-1  | F45           | Front wiring harness                                       |
| B64       | 2    | Black  | B-2  |               | Stop light switch                                          |
| B68       | 5    | Black  | C-3  |               | Steering roll connector                                    |
| B69       | 4    | ★      | C-3  |               | Parking switch                                             |
| B70       | 18   | ★      | C-3  |               | Combination switch                                         |
| B71       | 17   | ★      | C-3  |               |                                                            |
| B72       | 4    | Blue   | C-3  |               | Ignition switch                                            |
| B75       | 2    | Green  | C-2  |               | Test mode connector                                        |
| B76       | 2    | Green  | C-2  |               |                                                            |
| B77       | 3    | ★      | B-4  |               | Mode actuator                                              |
| B79       | 14   | Gray   | C-2  |               | Check connector                                            |
| B81       | 1×2  | ★      | C-2  |               | Diagnosis terminal (Ground)                                |
| B82       | 6    | Black  | C-2  |               | Diagnosis connector                                        |
| B83       | 6    | ★      | C-4  |               | Shield & sensor ground joint connector (E/G) (With OBD)    |
|           | 8    | ★      | C-4  |               | Shield & sensor ground joint connector (E/G) (Without OBD) |
| B84       | 31   | ★      | C-4  |               | ECM                                                        |
| B85       | 4    | Brown  | B-3  |               | Diode (Rear fog light)                                     |

| Connector |      |       |      | Connecting to |                                       |
|-----------|------|-------|------|---------------|---------------------------------------|
| No.       | Pole | Color | Area | No.           | Name                                  |
| B86       | 4    | Brown | B-4  |               | Blower fan resistor (Manual A/C)      |
| B87       | 2    | ★     | B-5  |               | Blower fan motor                      |
| B88       | 4    | Brown | B-4  |               | Evaporator thermo switch (Manual A/C) |
| B90       | 4    | ★     | B-5  | R50           | Roof cord                             |
| B91       | 6    | Black | B-4  |               | FRESH/RECIRC actuator                 |
| B100      | 24   | Black | B-1  | F2            | Front wiring harness                  |
| B101      | 25   | ★     | B-4  | D11           | Front door cord RH                    |
| B108      | 2    | Black | B-1  | F46           | Front wiring harness                  |
| B116      | 6    | ★     | C-4  |               | Select lever illumination light       |
| B119      | 4    | ★     | C-4  |               | Front accessory power supply socket   |
| B120      | 14   | ★     | C-4  |               | Radio                                 |
| B121      | 1    | Black | C-4  |               | Audio ground                          |
| B125      | 1    | Green | C-5  | B126          | Line end connector                    |
|           | 1    | Black | C-2  | B126          | Read memory connector                 |
| B126      | 1    | Green | C-5  | B125          | Line end connector                    |
|           | 1    | Black | C-2  | B125          | Read memory connector                 |
| B129      | 2    | Black | B-3  |               | Kick down switch (AT)                 |
| B131      | 4    | Blue  | C-1  |               | Rear fog light relay                  |
| B132      | 8    | ★     | C-2  |               | Head light leveler switch             |
| B134      | 22   | ★     | C-5  |               | ECM (Turbo model)                     |
|           | 35   | ★     | C-5  |               | ECM (Non-turbo model)                 |
| B135      | 28   | ★     | C-4  |               | ECM                                   |
| B136      | 17   | ★     | B-4  |               | ECM (Turbo model)                     |
|           | 26   | ★     | B-4  |               | ECM (Non-turbo model)                 |
|           | 30   | ★     | B-4  |               | ECM (Non-turbo model)                 |
| B137      | 20   | ★     | B-4  |               | ECM (Non-turbo model)                 |
|           | 24   | ★     | B-4  |               | ECM (Turbo model)                     |
| B141      | 12   | ★     | B-2  |               | IMM ECM                               |
| B152      | 12   | ★     | C-1  |               | Fuse & relay box (F/B)                |
| B158      | 10   | Gray  | D-1  |               | Fuse & relay box (F/B)                |
| B160      | 6    | Gray  | C-1  |               | Front fog light switch                |
| B168      | 10   | ★     | C-4  |               | Mode control switch (Manual A/C)      |
| B169      | 6    | ★     | C-4  |               | Blower fan motor switch (Manual A/C)  |

## Bulkhead Wiring Harness (In Compartment)

### WIRING SYSTEM

| Connector |      |       |      | Connecting to |                                                     |
|-----------|------|-------|------|---------------|-----------------------------------------------------|
| No.       | Pole | Color | Area | No.           | Name                                                |
| B176      | 18   | ★     | C-1  |               | Keyless entry control module                        |
| B183      | 1    | ★     | D-1  | B184          | Keyless entry connector                             |
| B184      | 1    | ★     | D-1  | B183          |                                                     |
| B195      | 6    | ★     | C-1  |               | Rear fog light switch                               |
| B198      | 5    | ★     | C-5  | GB-9          | Ground joint connector                              |
| B200      | 16   | Blue  | B-1  | F74           | Front wiring harness                                |
| B208      | 2    | Black | B-5  |               | Glove box light                                     |
| B225      | 38   | Black | C-2  |               | Relay block                                         |
| B230      | 6    | ★     | D-5  |               | Yawlate sensor                                      |
| B256      | 2    | ★     | B-3  |               | Evaporator sensor                                   |
| B257      | 3    | ★     | D-5  |               | ABS lateral G sensor (STi model)                    |
| B258      | 3    | ★     | D-5  |               | Driver's control center differential switch         |
| B261      | 6    | ★     | D-5  |               | Joint connector (ABS STi model)                     |
| B264      | 4    | Red   | C-1  |               | ABS relay                                           |
| B271      | 12   | Blue  | C-1  |               | Fuse & relay box (F/B)                              |
| B275      | 4    | ★     | B-4  |               | Fan control amp.                                    |
| B282      | 16   | Gray  | C-4  |               | Auto A/C control module                             |
| B283      | 20   | Gray  | C-4  |               |                                                     |
| B286      | 4    | ★     | B-5  |               | Intercooler water spray timer                       |
| B292      | 3    | ★     | D-5  |               | ABS G sensor                                        |
| B293      | 3    | ★     | B-4  |               | Air mix actuator (Auto A/C)                         |
| B294      | 6    | ★     | C-2  |               | Intercooler water spray switch                      |
| B296      | 4    | ★     | B-2  |               | Rear defogger timer                                 |
| B300      | 6    | ★     | C-2  |               | Line end check connector                            |
| B304      | 2    | Black | B-5  |               | ABS condenser                                       |
| B339      | 6    | ★     | D-5  |               | Manual mode switch                                  |
| B370      | 6    | ★     | C-3  |               | Ignition starter and steering lock assembly         |
| B380      | 24   | Gray  | B-4  |               | Driver's control center differential control module |
| B381      | 24   | ★     | B-5  |               | Driver's control center differential control module |
| B382      | 6    | ★     | B-5  |               | Yawlate earth joint connector                       |
| B415      | 12   | ★     | B-5  |               | AT Shift lock module                                |
| B416      | 2    | ★     | C-4  |               | OP connector (Navigation)                           |
| B418      | 2    | ★     | C-1  |               | Joint connector (Key lock)                          |
| B419      | 2    | ★     | C-1  |               | Joint connector (Key lock)                          |


| Connector      |      |       |      | Connecting to |      |
|----------------|------|-------|------|---------------|------|
| No.            | Pole | Color | Area | No.           | Name |
| ★: Non-colored |      |       |      |               |      |

# Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

## • Airbag Wiring Harness

| Connector |      |        |      | Connecting to |                                  |
|-----------|------|--------|------|---------------|----------------------------------|
| No.       | Pole | Color  | Area | No.           | Name                             |
| AB1       | 6    | Yellow | D-1  | B31           | Bulkhead wiring harness          |
| AB3       | 28   | Yellow | C-4  |               | Airbag control module            |
| AB4       | 2    | Yellow | B-4  |               | Airbag module (Passenger's seat) |
| AB13      | 2    | Yellow | B-1  | AB14          | Front sub sensor harness LH      |
| AB21      | 2    | Yellow | C-3  | AB26          | Airbag module (Driver's seat)    |

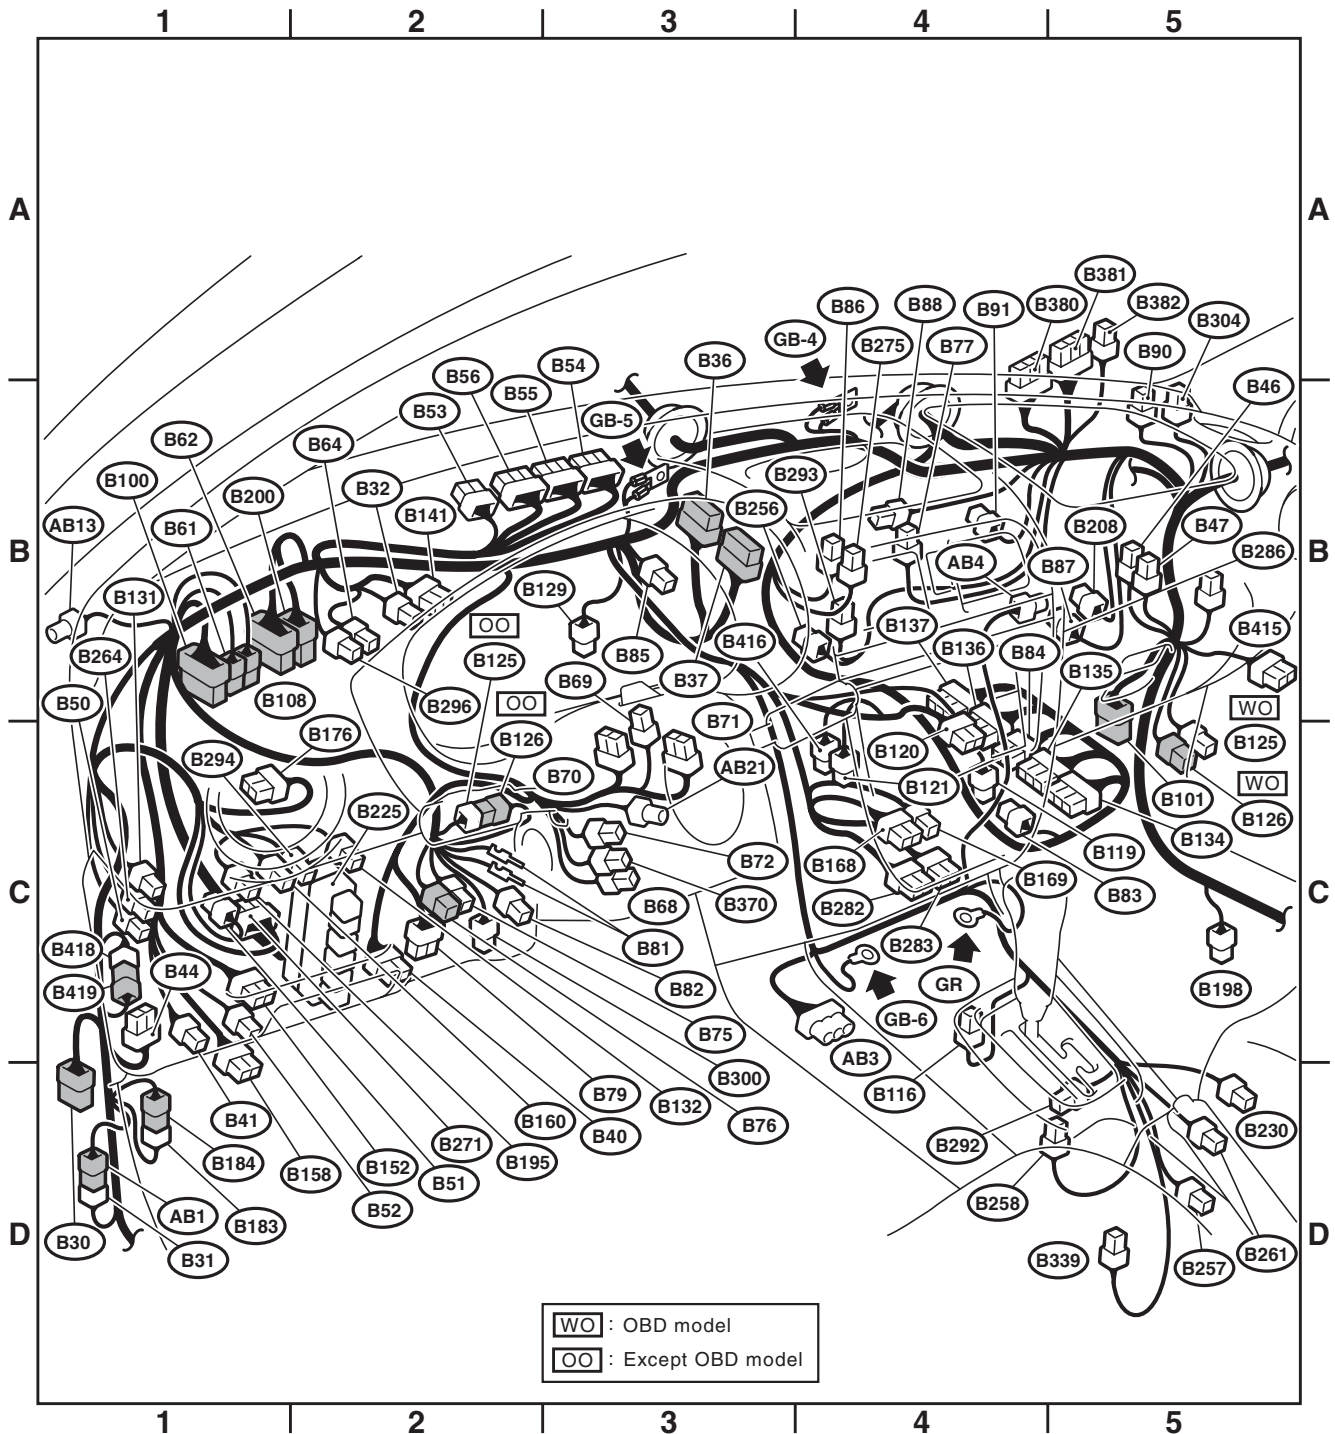

WI-07253

## Bulkhead Wiring Harness (In Compartment)

### WIRING SYSTEM

## 2. RHD MODEL

### • Bulkhead Wiring Harness

| Connector |      |        |      | Connecting to |                                           |
|-----------|------|--------|------|---------------|-------------------------------------------|
| No.       | Pole | Color  | Area | No.           | Name                                      |
| B30       | 25   | ★      | C-5  | D1            | Front door cord RH                        |
| B31       | 6    | Yellow | D-5  | AB1           | SRS (Airbag) harness                      |
| B32       | 3    | Black  | B-4  |               | Turn signal and hazard module             |
| B36       | 22   | ★      | B-3  | i1            | Instrument panel wiring harness           |
| B38       | 32   | Black  | B-3  | i3            | Instrument panel wiring harness           |
| B40       | 16   | Black  | C-4  |               | Data link connector                       |
| B41       | 2    | ★      | C-5  |               | Power window circuit breaker              |
| B43       | 6    | Black  | C-2  |               | Illumination control module               |
| B44       | 10   | ★      | D-5  |               | Seat belt timer module                    |
| B46       | 4    | Green  | B-1  |               | Fuel pump relay                           |
| B47       | 6    | ★      | B-1  |               | Main relay                                |
| B50       | 4    | ★      | C-5  |               | Blower fan motor relay                    |
| B51       | 8    | Blue   | C-5  |               | Fuse & relay box (F/B)                    |
| B52       | 7    | ★      | C-5  |               |                                           |
| B53       | 12   | Black  | B-4  |               | Shield joint connector (AT)               |
| B54       | 24   | ★      | B-3  |               | TCM                                       |
| B55       | 24   | Gray   | B-3  |               |                                           |
| B56       | 24   | Green  | B-4  |               |                                           |
| B61       | 8    | Black  | B-5  | F44           | Front wiring harness                      |
| B62       | 18   | ★      | B-5  | F45           |                                           |
| B64       | 2    | Black  | C-4  |               | Stop light switch                         |
| B65       | 4    | Black  | C-4  |               | Stop & brake switch (With cruise control) |
| B68       | 5    | Black  | C-3  |               | Cruise control sub switch                 |
| B69       | 4    | ★      | B-3  |               | Parking switch                            |
| B70       | 18   | ★      | C-3  |               | Combination switch                        |
| B71       | 17   | ★      | B-3  |               |                                           |
| B72       | 4    | Blue   | C-3  |               | Ignition switch                           |
| B75       | 2    | Green  | C-4  | B76           | Test mode connector                       |
| B76       | 2    | Green  | C-4  | B75           |                                           |
| B77       | 3    | ★      | B-2  |               | Mode actuator                             |
| B79       | 14   | Gray   | C-4  |               | Check connector                           |
| B81       | 1×2  | ★      | C-4  |               | Diagnosis terminal (Ground)               |
| B82       | 6    | Black  | C-4  |               | Diagnosis connector                       |

| Connector |      |       |      | Connecting to |                                                                                    |
|-----------|------|-------|------|---------------|------------------------------------------------------------------------------------|
| No.       | Pole | Color | Area | No.           | Name                                                                               |
| B83       | 4    | ★     | C-2  |               | Shield & sensor ground joint connector (E/G) (Non-turbo model with immobilizer)    |
|           | 6    | ★     | C-2  |               | Shield & sensor ground joint connector (E/G) (Non-turbo model without immobilizer) |
|           | 6    | Gray  | C-2  |               | Shield & sensor ground joint connector (E/G) (Turbo model)                         |
| B84       | 31   | ★     | B-2  |               | ECM                                                                                |
| B85       | 4    | Black | B-4  |               | Diode (Lighting)                                                                   |
| B86       | 4    | Brown | B-2  |               | Blower fan motor resistor (Manual A/C)                                             |
| B87       | 2    | ★     | B-1  |               | Blower fan motor                                                                   |
| B88       | 4    | Brown | B-2  |               | Evaporator thermo switch (Manual A/C)                                              |
| B90       | 4    | ★     | B-5  | R50           | Roof cord                                                                          |
| B91       | 6    | Black | B-2  |               | FRESH/RECIRC actuator                                                              |
| B93       | 20   | ★     | B-1  |               | Security control module                                                            |
| B94       | 20   | Black | D-5  |               | Cruise control module                                                              |
| B101      | 25   | ★     | B-1  | D11           | Front door cord LH                                                                 |
| B107      | 2    | ★     | B-3  |               | Clutch switch (Cruise control)                                                     |
| B116      | 6    | ★     | C-2  |               | Select lever illumination light (AT)                                               |
| B119      | 4    | ★     | C-2  |               | Front accessory power supply socket                                                |
| B120      | 14   | ★     | B-2  |               | Radio                                                                              |
| B121      | 1    | ★     | B-2  |               | Audio ground                                                                       |
| B125      | 1    | Green | B-1  | B126          | Line end connector                                                                 |
|           | 1    | Black | C-4  | B126          | Read memory connector                                                              |
| B126      | 1    | Green | B-1  | B125          | Line end connector                                                                 |
|           | 1    | Black | C-4  | B125          | Read memory connector                                                              |
| B129      | 2    | Black | B-5  |               | Kick down switch (AT)                                                              |
| B131      | 4    | Blue  | C-5  |               | Rear fog light relay                                                               |
| B132      | 8    | ★     | C-4  |               | Head light leveler switch                                                          |
| B133      | 6    | Blue  | D-1  |               | AT power mode & hold mode switch                                                   |
| B134      | 22   | ★     | C-1  |               | ECM (Turbo model)                                                                  |
|           | 35   | ★     | C-1  |               | ECM (Non-turbo model)                                                              |

# Bulkhead Wiring Harness (In Compartment)

## WIRING SYSTEM

| Connector |      |       |      | Connecting to |                                             |
|-----------|------|-------|------|---------------|---------------------------------------------|
| No.       | Pole | Color | Area | No.           | Name                                        |
| B135      | 28   | ★     | C-2  |               | ECM (Turbo model)                           |
|           | 28   | ★     | C-2  |               | ECM (Non-turbo model)                       |
| B136      | 17   | ★     | B-2  |               | ECM (Turbo model)                           |
|           | 26   | ★     | B-2  |               | ECM (Non-turbo with OBD model)              |
|           | 30   | ★     | B-2  |               | ECM (Non-turbo without OBD model)           |
| B137      | 20   | ★     | B-2  |               | ECM (Non-turbo model)                       |
|           | 24   | ★     | B-2  |               | ECM (Turbo model)                           |
| B141      | 12   | ★     | B-3  |               | IMM ECM                                     |
| B152      | 12   | ★     | C-5  |               | Fuse & relay box (F/B)                      |
| B158      | 10   | Gray  | C-5  |               | Fuse & relay box (F/B)                      |
| B159      | 9    | Brown | C-5  |               | Fuse & relay box (F/B)                      |
| B160      | 6    | Gray  | C-5  |               | Front fog light switch                      |
| B161      | 6    | Brown | C-4  |               | Cruise control main switch                  |
| B168      | 10   | ★     | C-2  |               | Mode control panel (Manual A/C)             |
| B169      | 6    | ★     | C-2  |               | Blower fan motor switch (Manual A/C)        |
| B176      | 18   | ★     | C-5  |               | Keyless entry control module                |
| B183      | 1    | ★     | D-5  | B184          | Keyless entry connector                     |
| B184      | 1    | ★     | D-5  | B183          |                                             |
| B195      | 6    | ★     | C-5  |               | Rear fog light switch                       |
| B198      | 1    | ★     | B-3  | B199          | Joint connector (Ground)                    |
| B199      | 1    | ★     | B-3  | B198          |                                             |
| B200      | 22   | Black | B-5  | F74           | Front wiring harness                        |
| B208      | 2    | ★     | B-1  |               | Glove box light                             |
| B225      | 38   | Black | C-4  |               | Relay block                                 |
| B230      | 6    | ★     | C-1  |               | Yawlate sensor                              |
| B237      | 6    | Black | C-2  |               | Sports shift switch                         |
| B256      | 2    | ★     | B-2  |               | Evaporator sensor                           |
| B257      | 3    | Black | D-1  |               | ABS lateral G sensor                        |
| B258      | 3    | ★     | D-1  |               | Driver's control center differential switch |
| B261      | 6    | ★     | B-5  |               | Joint connector (ABS-STi model)             |
| B264      | 4    | Pink  | C-5  |               | ABS relay                                   |
| B271      | 12   | Blue  | C-5  |               | Fuse & relay box (F/B)                      |
| B275      | 4    | ★     | B-2  |               | Fan control amp                             |
| B282      | 16   | Gray  | C-2  |               | Auto A/C control module                     |
| B283      | 20   | Gray  | C-2  |               |                                             |
| B286      | 4    | ★     | B-1  |               | Intercooler water spray timer               |
| B292      | 3    | Black | D-2  |               | ABS G sensor                                |
| B293      | 3    | ★     | B-2  |               | Air mix actuator (Auto A/C)                 |
| B294      | 6    | ★     | C-4  |               | Intercooler water spray switch              |


| Connector      |      |       |      | Connecting to |                                                     |
|----------------|------|-------|------|---------------|-----------------------------------------------------|
| No.            | Pole | Color | Area | No.           | Name                                                |
| B296           | 4    | ★     | B-4  |               | Rear defogger timer                                 |
| B300           | 6    | ★     | C-4  |               | Line end check connector                            |
| B323           | 4    | Blue  | B-5  |               | Security relay                                      |
| B324           | 16   | Gray  | B-4  |               | Double lock module                                  |
| B325           | 20   | Gray  | B-4  |               |                                                     |
| B339           | 6    | ★     | D-1  |               | Manual mode switch                                  |
| B370           | 6    | ★     | C-3  |               | Ignition starter and steering lock assembly         |
| B380           | 24   | Gray  | B-4  |               | Driver's control center differential control module |
| B381           | 24   | ★     | B-4  |               | Driver's control center differential control module |
| B415           | 12   | ★     | B-1  |               | AT shift lock module                                |
| B416           | 2    | ★     | B-2  |               | OP connector (Navigation)                           |
| B417           | 4    | ★     | B-4  |               | Yaw joint connector                                 |
| B418           | 2    | ★     | C-5  |               | Joint connector (Key lock)                          |
| B419           | 2    | ★     | C-5  |               | Joint connector (Key lock)                          |
| ★: Non-colored |      |       |      |               |                                                     |

# Bulkhead Wiring Harness (In Compartment)

## WIRING SYSTEM

### • Airbag Wiring Harness

| Connector |      |        |      | Connecting to |                                  |
|-----------|------|--------|------|---------------|----------------------------------|
| No.       | Pole | Color  | Area | No.           | Name                             |
| AB1       | 6    | Yellow | D-5  | B31           | Bulkhead wiring harness          |
| AB3       | 28   | Yellow | C-1  |               | Airbag control module            |
| AB4       | 2    | Yellow | B-2  |               | Airbag module (Passenger's seat) |
| AB13      | 2    | Yellow | C-5  | AB14          | Front sub sensor harness RH      |
| AB21      | 2    | Yellow | C-3  | AB26          | Airbag module (Driver's seat)    |

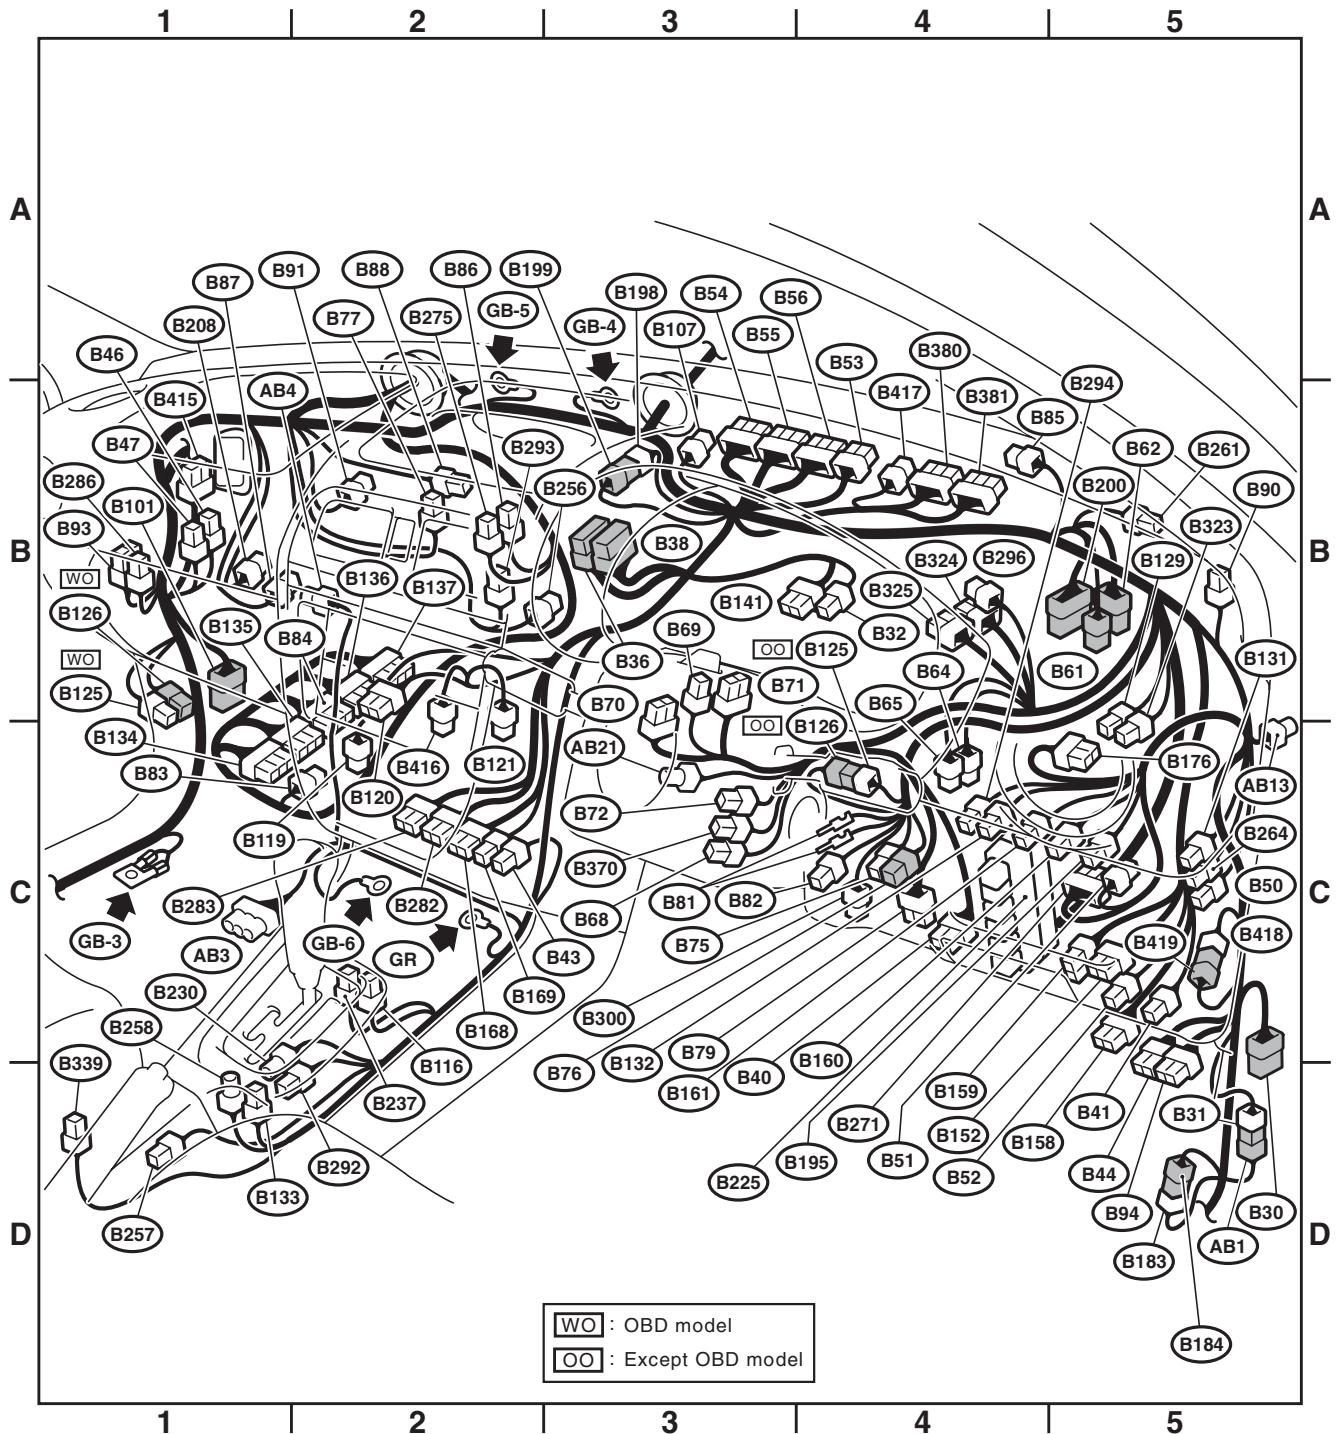

WI-07254