


Isuzu Trooper 1998 – 1999 fuse box diagram


Diode list

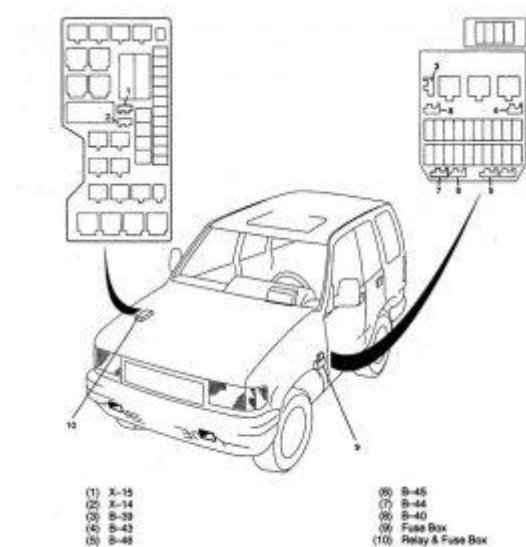

Isuzu Trooper – fuse box diagram – diode list

Connector No.		X-1 4	X-15	B-3 9	B-4 0	B-4 3	B-44	B-4 5	B-4 6
Usage		—	EHCUC	—	—	—	Headlight Cornering light	—	—
Transmissio n	A/T	—	—	—	—	—	++	—	—
	M/T	—	++	—	—	—	++	—	—

Relay & Fuse Box

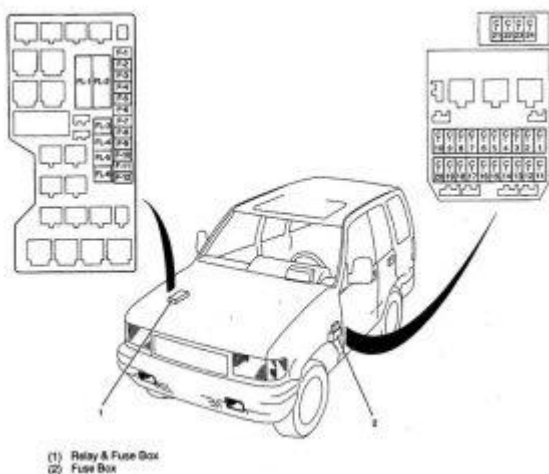

Isuzu Trooper – fuse box diagram

Fuse		
No	A	Indication on label
F-1	—	—
F-2	20	02 SENSOR HEATER
F-3	15	HORN HAZARD
F-4	15	H/LAMP- LH
F-5	15	H/LAMP-RH
F-6	—	—
F-7	—	—
F-8	15	(FRT.FOG)

F-9	20	ABS
F-10	15	FUEL PUMP
F-11	—	—
F-12	15	TAIL
FUSIBLE LINK		
FL-1	80	MAIN
FL-2	50	KEY SW
FL-3	30	PCM
FL-6	40	(ABS 4/WHEEL ONL Y)

Fuse Box

Fuse		
No	A	Indication on label
C-1	10	STARTER RELAY
C-2	15	(SEAT HEATER)

C-3	15	TURN BACK
C-4	10	ELEC. IGN.
C-5	15	FRT WIPER & WASHER
C-6	10	RR WIPER & WASHER
C-7	—	—
C-8	15	ENGINE
C-9	15	IG COIL
C-10	10	METER GAUGE
C-11	10	(AUDIO [ACC]) MIRROR
C-12	20	CIGAR
C-13	10	(ANTI THEFT)
C-14	15	STOPLIGHT A/T CONT
C-15	20	(AUDIO [B])
C-16	10	CLOCK [B] DOME LIGHT
C-17	25	RR DEFOG

C-18	20	(DOOR LOCK)
C-19	25	BLOWER MTR
C-20	10	(AIR CON)
C-21	10	SRS-1
C-22	—	—
C-23	—	—
C-24	—	—
CIRCUIT BREAKER		
C/B-1	—	—
C/B-2	30	(P/W, P/S, SIR)

Fuse (Relay and Fuse Box)

No	A	Indication on label	Parts (Load)
F-2	20	O2 SENSOR HEATER	Oxygen sensor

F-3	15	HORN HAZARD	Hazard warning light, Horn relay, Horn, Anti-theft hom
F-4	15	H/LAMP-L H	Headlight-LH, High beam indicator light, Fog light relay, Cornering light
F-5	15	H/LAMP-R H	Headlight-RH
F-8	15	(FRT FOG)	Fog light
F-9	20	ABS	Hydraulic unit
F-10	15	FUEL PUMP	Fuel pump
F-12	15	TAIL	Tail relay, Parking light, Side marker light, Taillight, License plate light, Illumination controller, Illumination light, A/T shift/indicator control unit

Fuse (Fuse Box)

No	A	Indication on label	Parts (Load)
C-1	10	STARTER RELAY	Starter relay, Anti-theft controller
C-2	15	(SEAT HEATER)	Seal heater SW, Seat heater
C-3	15	TURN BACK	Mode Sw, PCM, Cornering relay, Turn signal light, Backup light, Cruise control unit, A/T shift

			indicator control unit
C-4	10	ELEC. IGN.	Rear defogger relay, Rear defogger SW, Power window relay, Cruise control unit, EHCUC. G sensor, Upshift relay- 2, Shift lock controller, Door mirror defogger, Upshift indicator light, Shift on the fly relay, VSV, FRT axle (C), VSV; FRT axle (d)
C-5	15	FRT WIPER & WASHER	Windshield wiper motor, Windshield washer motor, Windshield wiper intermittent relay
C-6	10	RR WIPER & WASHER	Rear wiper motor, Rear washer motor, Rear wiper intermittent relay
C-8	15	ENGINE	Generator, PCM relay, VSV; purge solenoid, Coil drive, PCM, EGR valve
C-9	15	IG COIL	Ignition coil, Mass air flow sensor
C-10	10	METER GAUGE	Indicator and warning lights (Meter), Meter gauges, Vehicle speed sensor
C-11	10	(AUDIO [ACC]) MIRROR	Audio, Digital clock, Power door mirror, Multi meier
C-12	20	CIGAR	Cigarette lighter
C-13	10	(ANTI THEFT)	Anli-theft controller
C-14	15	STOPLIGHT Aft CONT	PCM, Stoplight, High mount stoplight, Cruise control unit, EHCUC. Shift lock controller

C-15	20	(AUDIO [B])	Audio
C-16	10	CLOCK [B] DOME LIGHT	Luggage room light, FRT courtesy light RR courtesy light, Dome light, Map light, Seat belt-key & light remind buzzer, Auto antenna motor, Digital clock, Anti-theft controller
C-17	25	RR DEFOG	Rear defogger
C-18	20	(DOOR LOCK)	FRT door lock & power window SW, Door lock actuator, Anti-theft indicator light
C-19	25	BLOWER MTR	Blower motor, Blower resistor
C-20	10	(AIR CON)	A/C thermostat relay, Electronic thermostat, A/C compressor relay, Magnetic clutch
C-21	10	SRS-1	SDM
ECM: Engine control module, VSV: Vacuum switching valve			

Fusible link (Relay and Fuse Box)

Fusible Link No.	A	Parts (Load)
FL-1	80	MAIN
FL-2	50	KEY SW
FL-3	30	PCM

FL-4	—	—
FL-5	—	—
FL-6	40	(ABS 4-WHEEL ONLY)

Circuit breaker No.	A	Indication on label	Parts (Load)
C/B-1	—	—	—
C/B-2	30	(P/W, P/S, S/R)	Power window relay, Power window SW, Power window motor, Sun roof motor, Sun roof control unit, Sun roof SW, Safety stop SW, Limit SW, Power seat switch, Front tilt motor & SW, Rear tilt motor & SW, Stide motor, Recliner motor & SW