


16.Front Side Marker Light Bulb

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Turn socket (A) and remove the bulb.

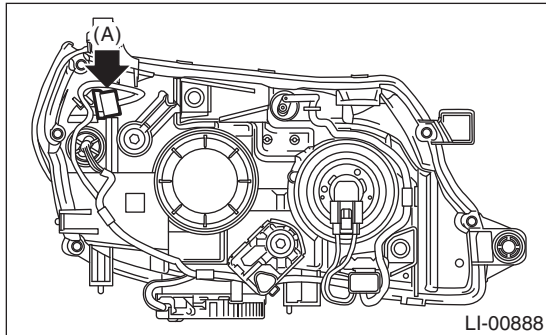

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace with a new bulb.