



17. Front Fog Light Assembly

A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Remove the fog light cover.

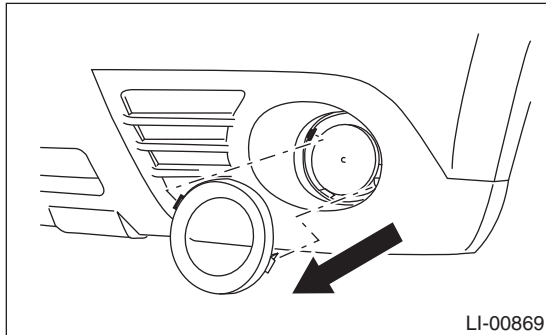

- 3) Disengage the three clips, then peel the mud guard.

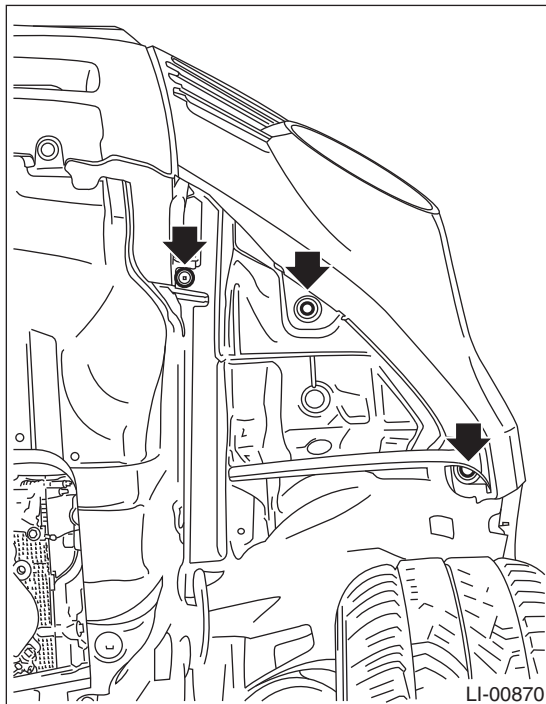

- 4) Disconnect the harness connector.
- 5) Remove the plastic nut and bolt, and remove the fog light assembly.

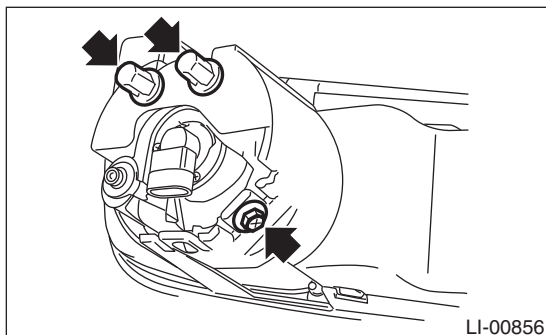

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: ADJUSTMENT


1. FOG LIGHT AIMING

NOTE:

Before checking the fog light beam level, make sure the following:

- The area around the fog light has not sustained any accident, damage or other type of deformation.
- Make sure that the vehicle is parked on a level surface.
- Make sure that the inflation pressure of tires are correct.
- Make sure that the vehicle fuel tank is full.


- 1) Bounce the vehicle two to three times to normalize the suspension.
- 2) Make certain that someone is seated in the driver's seat.
- 3) Disengage the three clips, and then turn over the mud guard.

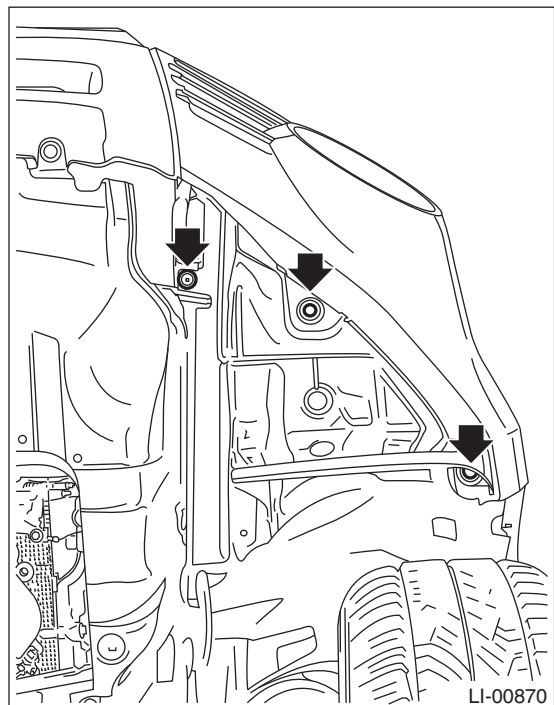


Front Fog Light Assembly

LIGHTING SYSTEM

4) Adjust the front fog light pattern by inserting a Philips screwdriver to the adjusting hole.

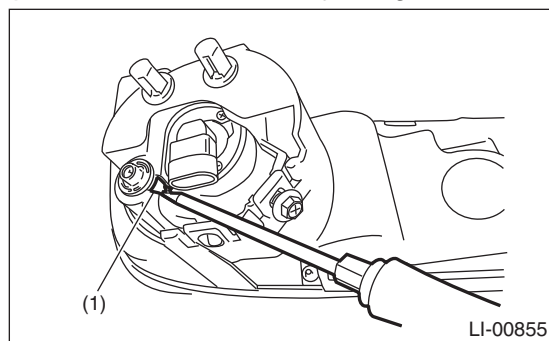

(1) Adjusting hole

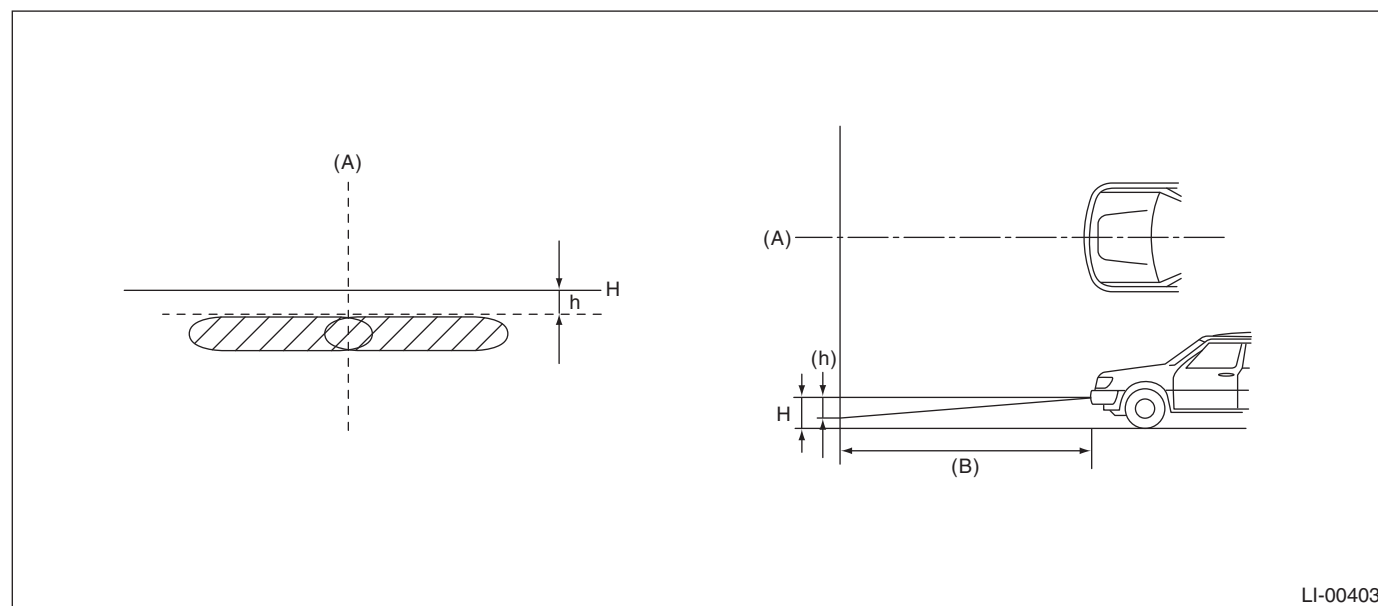

(A) Vehicle center

(B) 3 m (10 ft)

(H) Height of fog light center

h mm (in) at 3 m (10 ft)
60 (2.38)