


19. Rear Combination Light Assembly

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the two bolts, and then detach the rear combination light by pulling it to the rear side of vehicle.

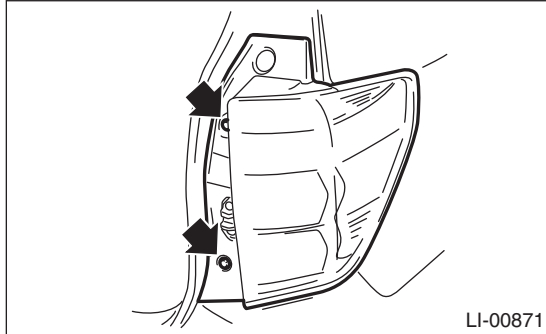

- 3) Disconnect the harness connector and rear combination light.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If defective, replace with a new bulb.