


23. License Plate Light

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the screws and remove the license plate light.

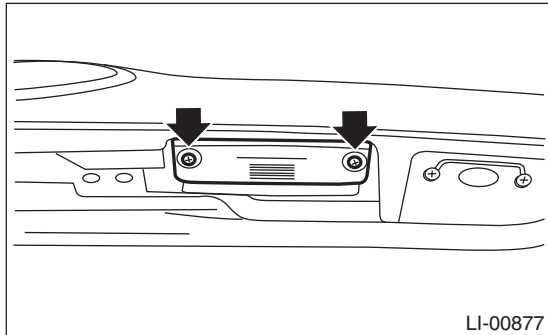

- 3) Remove the bulb.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

1.5 N·m (0.15 kgf-m, 1.1 ft-lb)

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace with a new bulb.