



24.High-mounted Stop Light

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the caps and screws, then detach the high-mounted stop light cover.

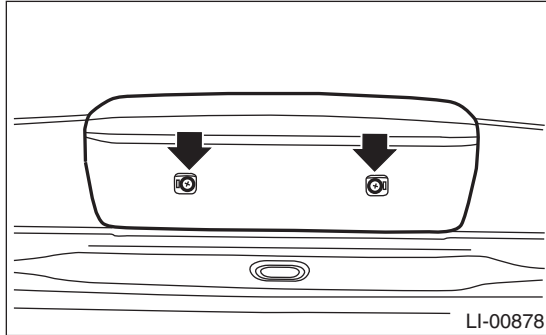

- 3) Remove the screws, then detach the high-mounted stop light.

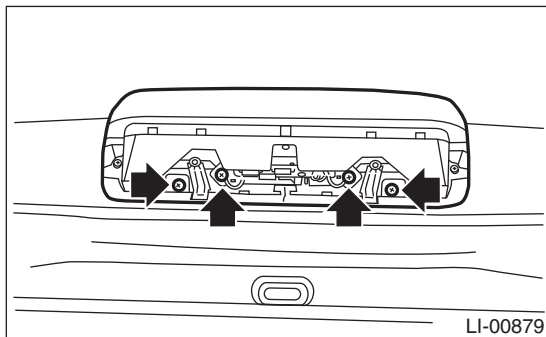

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

1.5 N·m (0.15 kgf-m, 1.1 ft-lb)

C: INSPECTION

- 1) Install the high-mounted stop light to test if it illuminates normally.
- 2) If the high-mounted stop light does not illuminate, replace it with a new part.

NOTE:

Since LEDs (Light Emitting Diode) are used for the high-mounted stop light, replace the high-mounted stop light assembly if the LED burns out.