


25. Spot Map Light

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Push open the rear end of the overhead console lid, and remove the screws.

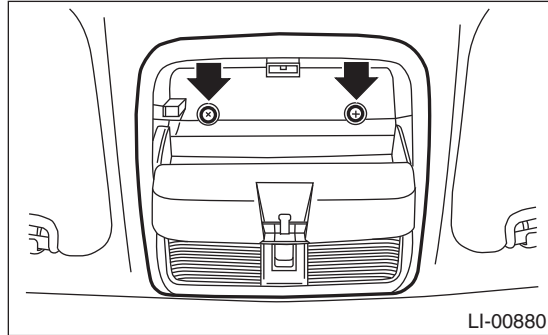

- 3) Disconnect the harness connectors and remove the spot map light.

NOTE:

The spot map light is a single unit with the overhead console.

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

1. SPOT MAP LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

2. SPOT MAP LIGHT SWITCH

Measure the spot map light resistance.

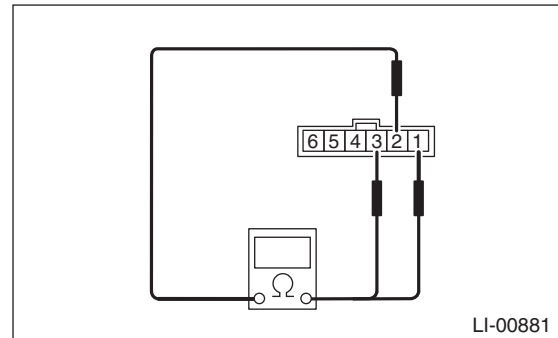

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
ON	1 and 2	1.5±0.5 Ω
DOOR	2 and 3	1.5±0.5 Ω

3. OVERHEAD CONSOLE ILLUMINATION LIGHT BULB

NOTE:

Since LEDs (Light Emitting Diode) are used for the overhead console illumination light bulb, replace the overhead console assembly if the LED burns out.