


28. Door Step Light

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Insert a flat tip screwdriver into the edge of the door step light body to remove the door step light.

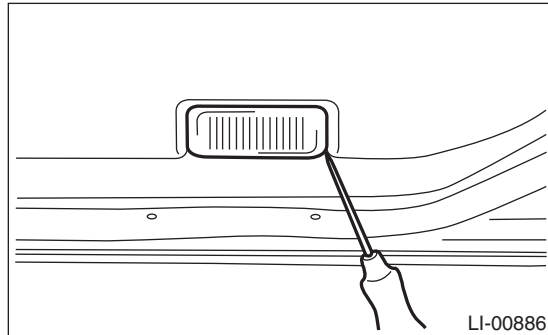

- 3) Disconnect the harness connector.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification.
<Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace with a new bulb.