


Ignition Switch Illumination

LIGHTING SYSTEM


29. Ignition Switch Illumination

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the screw and steering lower cover.

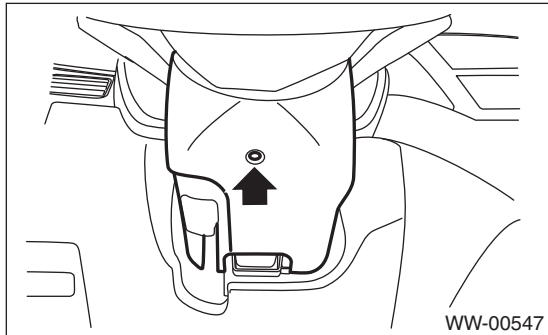


- 3) Remove the screws and steering upper cover.

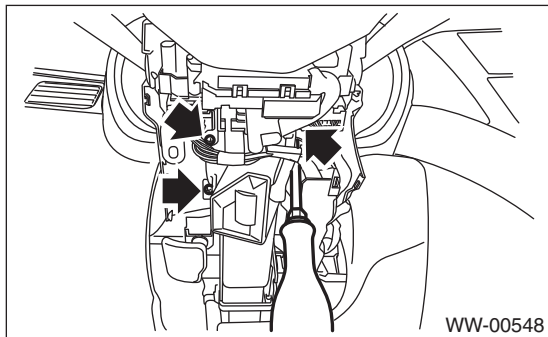

- 4) Remove the instrument panel lower cover. <Ref. to EI-44, REMOVAL, Instrument Panel Lower Cover.>

- 5) Disconnect the ignition switch illumination connector (A).

- 6) Turn the ignition switch illumination connector to the left and disconnect it.

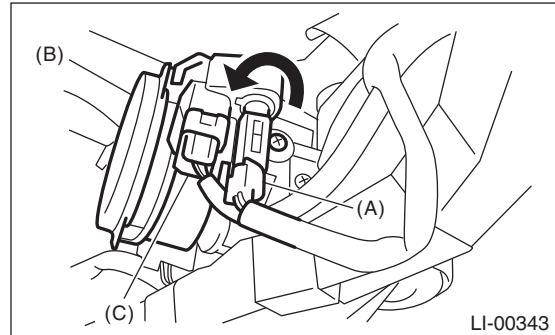

(A) Ignition switch illumination connector

(B) Ignition switch illumination

(C) Immobilizer antenna connector

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Step	Check	Yes	No
1 CHECK IGNITION SWITCH ILLUMINATION. Make sure the ignition switch illumination illuminates when driver's side door is open.	Does the ignition switch illumination illuminate?	Ignition switch illumination is normal.	Go to step 2.
2 CHECK IGNITION SWITCH ILLUMINATION. Make sure the ignition switch illumination blinks when the ignition switch is turned to ON.	Does the ignition switch illumination blink?	Check the function setting of the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Check the ignition switch illumination circuit. <Ref. to SL-21, CHECK IGNITION SWITCH ILLUMINATION, INSPECTION, Keyless Entry System.>