


30. Auto Headlight Beam Leveler Control Module

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector, and remove the unit.

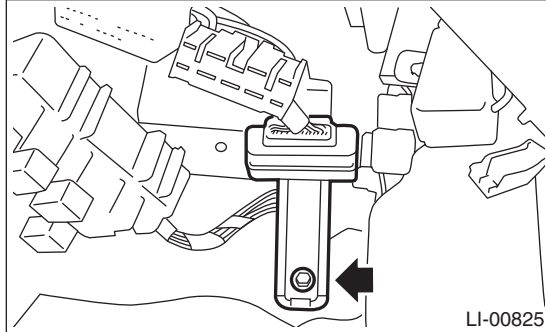

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

NOTE:

Perform reinitialization if the auto head light leveler control module was removed. <Ref. to LI-15, PROCEDURE, Auto Headlight Beam Leveler System.>