


31.Front Height Sensor

A: REMOVAL


CAUTION:

Always remove the vehicle height sensor before removing any parts related to the suspension.

- 1) Disconnect the ground cable from the battery.
- 2) Lift up the vehicle and remove the left front wheel.
- 3) Remove the under cover.
- 4) Disconnect the sensor connector.

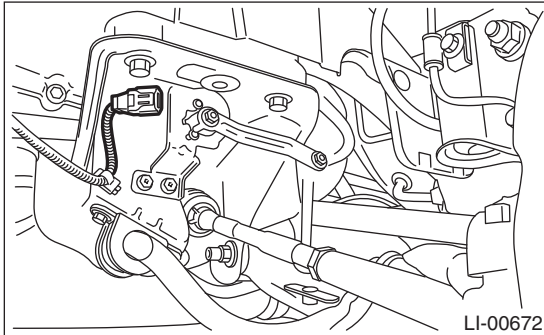

- 5) Remove the bracket from the front crossmember.

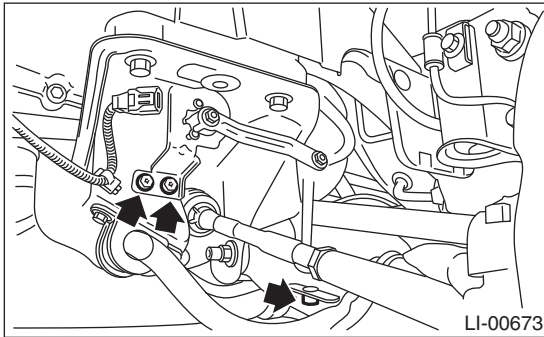

- 6) Remove the bracket from the transverse link.

CAUTION:

Do not disassemble the sensor and lever.

B: INSTALLATION

- 1) Align the bracket clip with the front crossmember installation hole, and install the bracket.
- 2) Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

NOTE:

Perform reinitialization if the front vehicle height sensor was removed. <Ref. to LI-15, PROCEDURE, Auto Headlight Beam Leveler System.>