

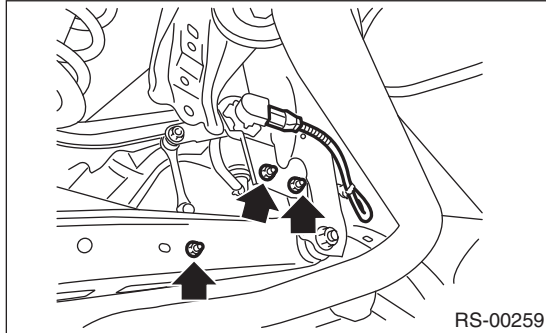
32.Rear Height Sensor

A: REMOVAL

CAUTION:

Always remove the vehicle height sensor before removing any parts related to the suspension.

- 1) Disconnect the negative terminal of the battery.
- 2) Lift up the vehicle and remove the left rear wheel.
- 3) Disconnect the sensor connector, remove the nut and remove the rear vehicle height sensor.

**CAUTION:**

Do not disassemble the sensor and lever.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

NOTE:

Perform reinitialization if the rear vehicle height sensor was removed. <Ref. to LI-15, PROCEDURE, Auto Headlight Beam Leveler System.>