


35. Door Switch

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the screw, and pull out the door switch.

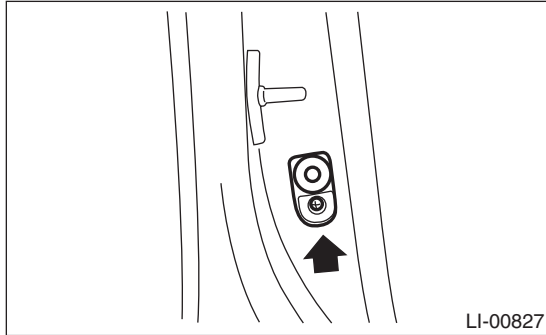

- 3) Disconnect the harness connector.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Refer to the door switch inspection of the room light system. <Ref. to LI-9, DOOR SWITCH, INSPECTION, Room Light System.>

WIPER AND WASHER SYSTEMS

WW

	Page
1. General Description	2
2. Wiper and Washer System	7
3. Combination Switch (Wiper)	8
4. Wiper Blade	12
5. Washer Tank and Motor	14
6. Front Wiper Arm	15
7. Front Wiper Motor and Link	16
8. Front Washer Nozzle	18
9. Rear Wiper Arm	19
10. Rear Wiper Motor	20
11. Rear Washer	21