


Chrysler Imperial 1981 – 1983 fuse box diagram

Fuse box

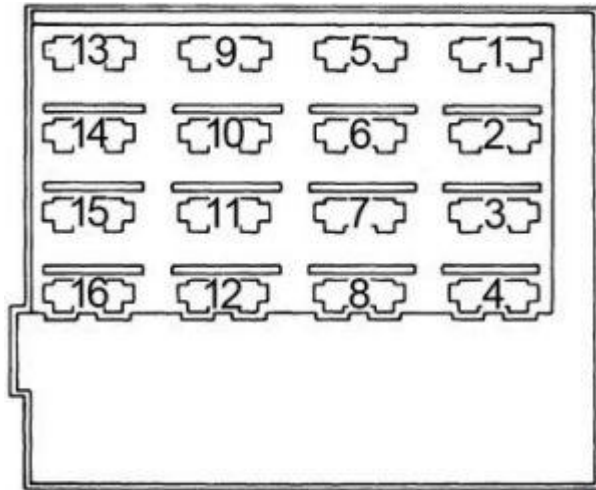

Chrysler Imperial – fuse box diagram

Nº	A	Protected Component
1	20	Hazard flasher
2	20	In-tank fuel pump
3	30	<i>Circuit Breaker:</i> Power windows
4	30	Automatic temperature control blower motor, defogger relay, deck lid release, illuminated entry sense
5	20	Parking, tail, license, side marker, clock, instrument cluster and radio lights
6	25	Stop, door, map, reading, key cylinder, trunk, ignition switch, underhood, vanity and underpanel lights. Electric mirror motors, ignition switch time delay relay, chimes, radio memory, illuminated entry, electronic cluster memory, security alarm and seat switch

7	25	Horn, horn relay, cigar lighter, power antenna and glove box light
8	30	<i>Circuit Breaker:</i> Power door locks and seats
9	–	–
10	–	–
11	5	Brake warning, seat belt warning and low fuel sensor, oil pressure, door ajar and temperature indicators, speed control, cluster electronics, charge light, low voltage light and chimes
12	20	Heated side mirror, air conditioning radiator fan motor
13	4	Cluster, title and radio illumination and radio display dimming
14	20	Radio power booster
15	5	Radio, power antenna controller
16	20	Back-up and turn signal lights, air conditioning clutch and idle stop solenoid, cornering lights