


MZ5 BATTERY REMOVAL INSTALLATION [L3]

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.

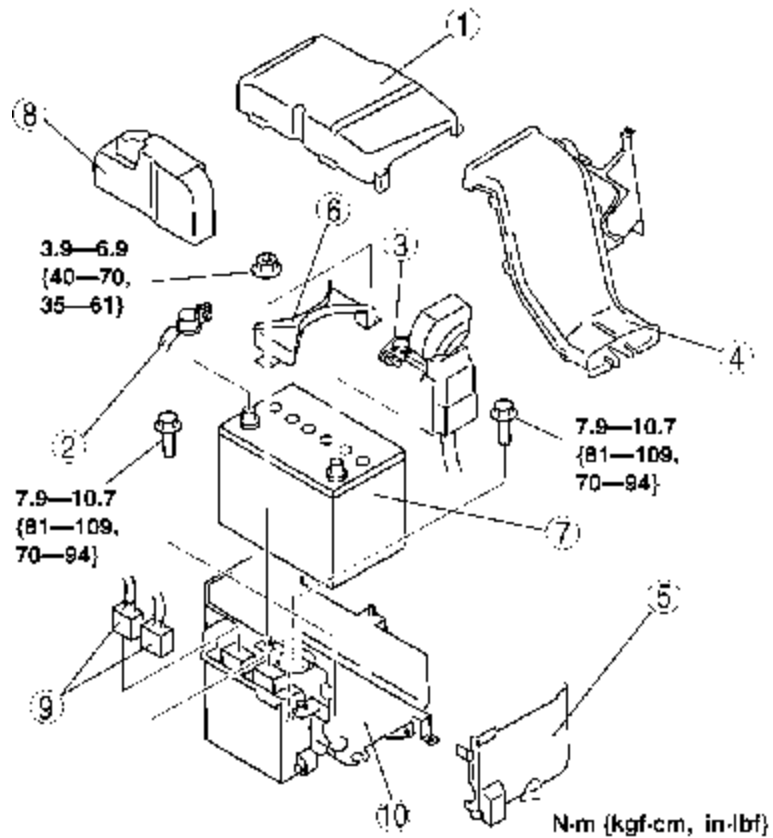


1	Battery cover (See Battery Cover Installation Note .)
2	Negative battery cable
3	Positive battery cable
4	Battery duct (See Battery Duct Installation Note .)
5	Battery box (See Battery Box Installation Note .)
6	Battery clamp (See Battery Clamp Installation Note .)
7	Battery


8	PCM cover (See PCM Cover Installation Note .)
9	Connectors
10	Battery tray and PCM component

PCM Cover Installation Note

1. Install with the PCM cover hooks B aligned with the PCM box holes at two points.

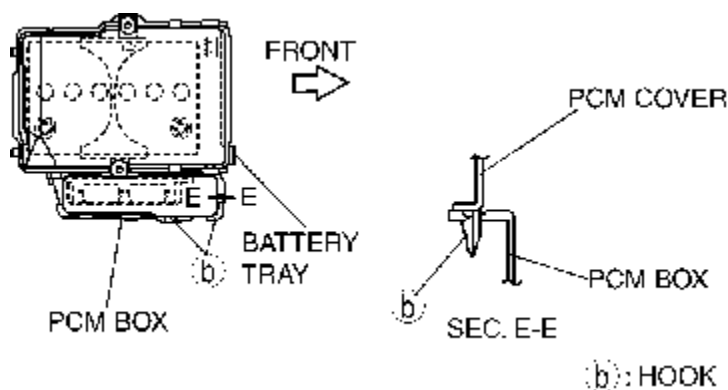


2. Install the PCM cover to the PCM box hook.

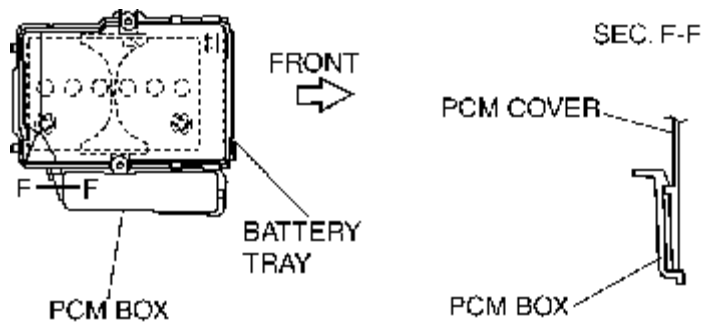


Battery Clamp Installation Note

1. Assemble the battery clamp so that the arrow on it is pointed toward the front of the vehicle.

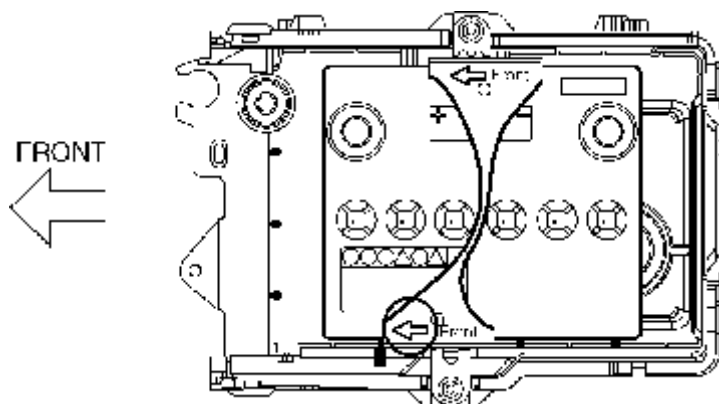


Battery Box Installation Note

1. Assemble with battery box hooks E aligned with the battery tray holes at two points.

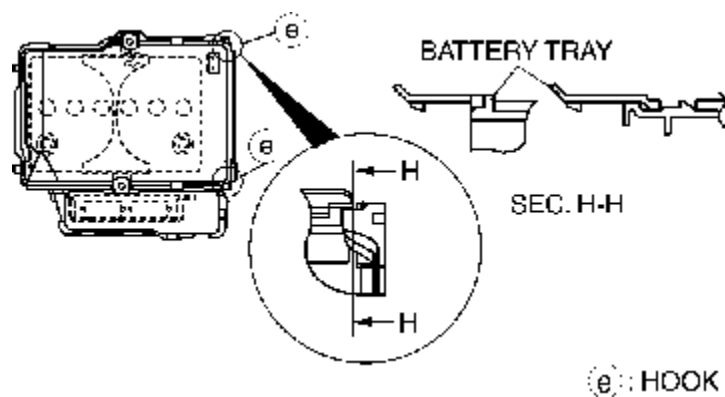


Battery Duct Installation Note

1. Match the mark of the shroud panel and notch in the battery duct, and install the battery duct to the shroud panel.

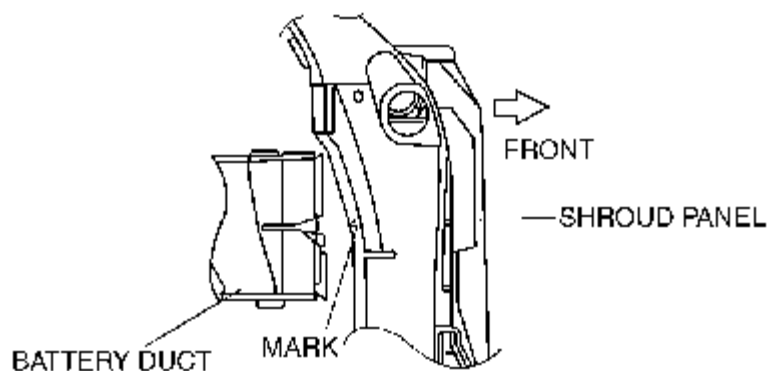



Battery Cover Installation Note

1. Install the battery duct between the battery cover and the battery box.

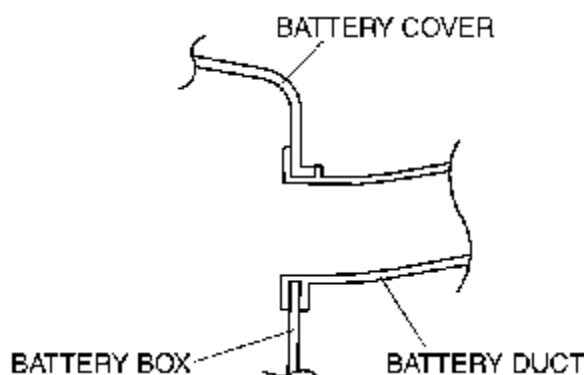


2. Install with battery cover hooks A aligned with the battery tray holes at two points.

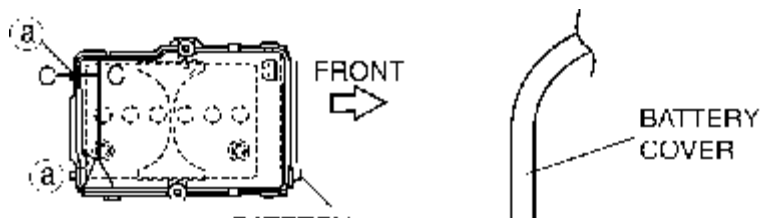

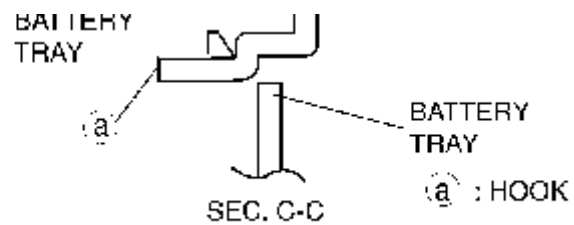

3. Install with battery cover hooks D aligned with the battery tray flange at four points.

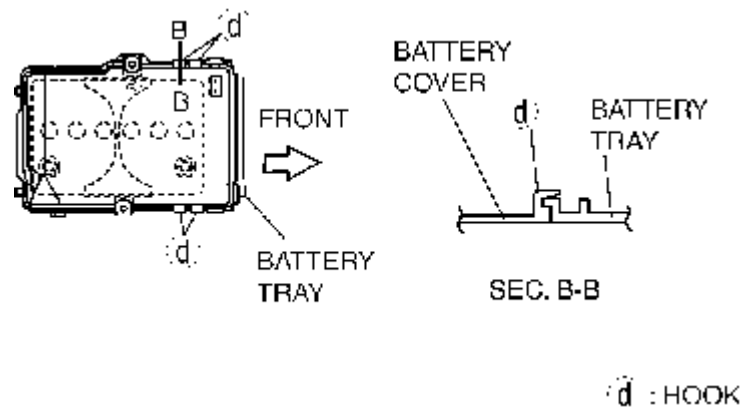

4. Set the battery cover to battery tray hooks C at two points.

