


2006 Mazda5 - CURTAIN AIR BAG MODULE

CURTAIN AIR BAG MODULE REMOVAL/INSTALLATION

WARNING:

- Handling the air bag module improperly can accidentally deploy the air bag module, which may seriously injure you. Read the air bag system service warnings and cautions before handling the air bag module. (See [AIR BAG SYSTEM SERVICE WARNINGS](#).) (See [AIR BAG SYSTEM SERVICE CAUTIONS](#).)

1. Turn the ignition switch to the LOCK position.
2. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[L3\]](#).)
3. Disconnect the negative battery cable and wait for **1 min or more**.
4. Remove the following parts:
 - a. A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION](#).)
 - b. Front scuff plate inner (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - c. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - d. B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION](#).)
 - e. Front seat belt upper anchor installation note (See [FRONT SEAT BELT REMOVAL/INSTALLATION](#).)
 - f. B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION](#).)
 - g. Rear package tray lid (See [REAR PACKAGE TRAY LID REMOVAL/INSTALLATION](#).)
 - h. Third-row seat (See [THIRD-ROW SEAT REMOVAL/INSTALLATION](#).)
 - i. Rear header trim (See [REAR HEADER TRIM REMOVAL/INSTALLATION](#).)
 - j. Trunk end trim (See [TRUNK END TRIM REMOVAL/INSTALLATION](#).)
 - k. Third-row seat belt lower anchor installation note (See [THIRD-ROW SEAT BELT REMOVAL/INSTALLATION](#).)
 - l. Cargo compartment light (See [CARGO COMPARTMENT LIGHT REMOVAL/INSTALLATION](#).)
 - m. Trunk side trim (See [TRUNK SIDE TRIM REMOVAL/INSTALLATION](#).)
 - n. Second-row seat belt upper anchor installation note (See [SECOND-ROW SEAT BELT REMOVAL/INSTALLATION](#).)
 - o. C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION](#).)
 - p. Map light (See [MAP LIGHT REMOVAL/INSTALLATION](#).)
 - q. Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION](#).)
 - r. Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION](#).)
 - s. Headliner (See [HEADLINER REMOVAL/INSTALLATION](#).)
 - t. Rear speaker (See [REAR SPEAKER REMOVAL/INSTALLATION](#).)
5. Remove in the order indicated in the table.

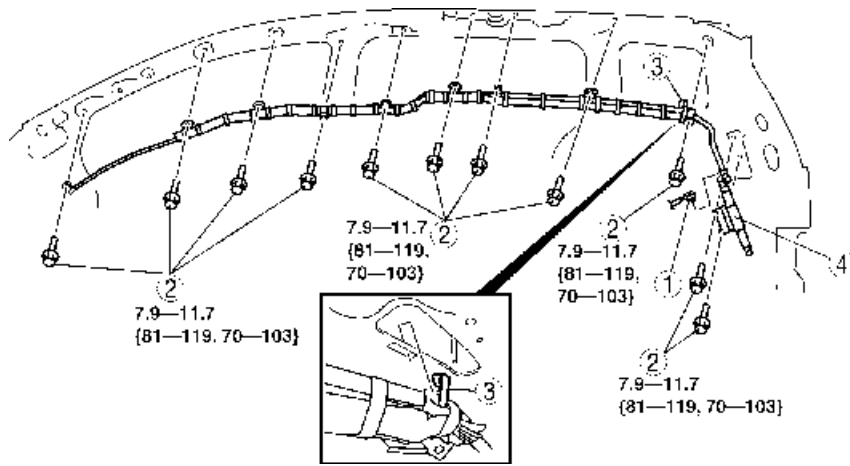


N·m {kgf·cm, in·lbf}

1	Connector (See Connector Removal Note .)
2	Bolt
3	Hook
4	Curtain air bag module (See Curtain Air Bag Module Installation Note .)

6. Install in the reverse order of removal.
7. When the ignition switch is turned to the ON position verify that the air bag system warning light illuminates for **approx. 6 s** and goes out.
 - If the air bag system warning light does not operate normally, refer to the on-board diagnostic system (air bag system) and perform inspection of the system.

Connector Removal Note

1. Using flathead screwdriver, pry out the connector stopper plate.

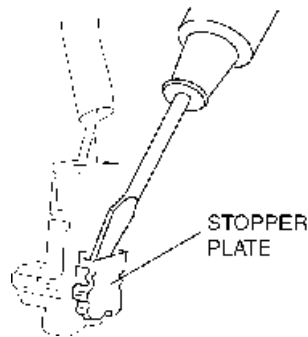

2. Disconnect the connector.

Curtain Air Bag Module Installation Note

1. Affix the double-sided adhesive tape for the curtain air bag module to the position shown in the figure.

