



MZ5 - DASHBOARD REMOVAL INSTALLATION

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[L3\]](#).)
2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. Front door (See [FRONT DOOR REMOVAL/INSTALLATION](#).)
 - b. Sail garnish (See [SAIL GARNISH REMOVAL](#).)
 - c. Front scuff plate inner (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - d. Front side trim (See [FRONT SIDE TRIM REMOVAL/INSTALLATION](#).)
 - e. Side panel (passenger's side) (See [SIDE PANEL REMOVAL/INSTALLATION](#).)
 - f. Side wall (See [SIDE WALL REMOVAL/INSTALLATION](#).)
 - g. Front console (See [FRONT CONSOLE REMOVAL/INSTALLATION](#).)
 - h. Glove compartment (See [GLOVE COMPARTMENT REMOVAL/INSTALLATION](#).)
 - i. Under cover
 - j. Hood release lever (See [HOOD LATCH AND RELEASE LEVER REMOVAL/INSTALLATION](#).)
 - k. Lower panel (See [LOWER PANEL REMOVAL/INSTALLATION](#).)
 - l. Knee bolster

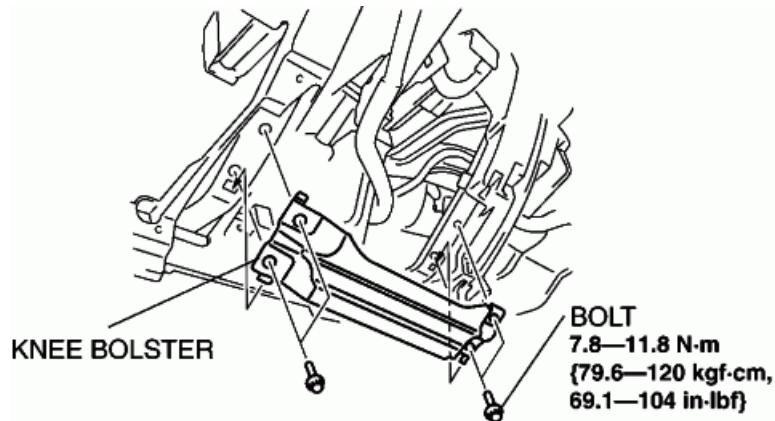

- m. Center panel unit (See [CENTER PANEL UNIT REMOVAL/INSTALLATION](#).)
- n. Selector lever component (See [SELECTOR LEVER COMPONENT REMOVAL/INSTALLATION](#).)
- o. Driver-side air bag module (See [DRIVER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION](#).)
- p. Steering wheel (See [STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION](#).)
- q. Combination switch (See [COMBINATION SWITCH REMOVAL/INSTALLATION](#).)
- r. Meter hood (See [METER HOOD REMOVAL/INSTALLATION](#).)
- s. Lower column cover (See [COLUMN COVER REMOVAL/INSTALLATION](#).)
- t. Instrument cluster (See [INSTRUMENT CLUSTER REMOVAL/INSTALLATION](#).)
- u. Steering shaft (See [STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION](#).)
- v. A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION](#).)

- w. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/INSTALLATION \[FULL-AUTO AIR CONDITIONER\]](#).) (See [CLIMATE CONTROL UNIT REMOVAL \[MANUAL AIR CONDITIONER\]](#).) (See [CLIMATE CONTROL UNIT INSTALLATION \[MANUAL AIR CONDITIONER\]](#).)
 - x. Rear heater duct (1) (See [REAR HEAT DUCT REMOVAL/INSTALLATION](#).)
 - y. Windshield wiper arm and blade (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION](#).)
 - z. Cowl grille (See [COWL GRILLE REMOVAL/INSTALLATION](#).)
4. Disconnect the dashboard harness connectors.
 5. Remove in the order indicated in the figure.
 6. Install in the reverse order of removal.

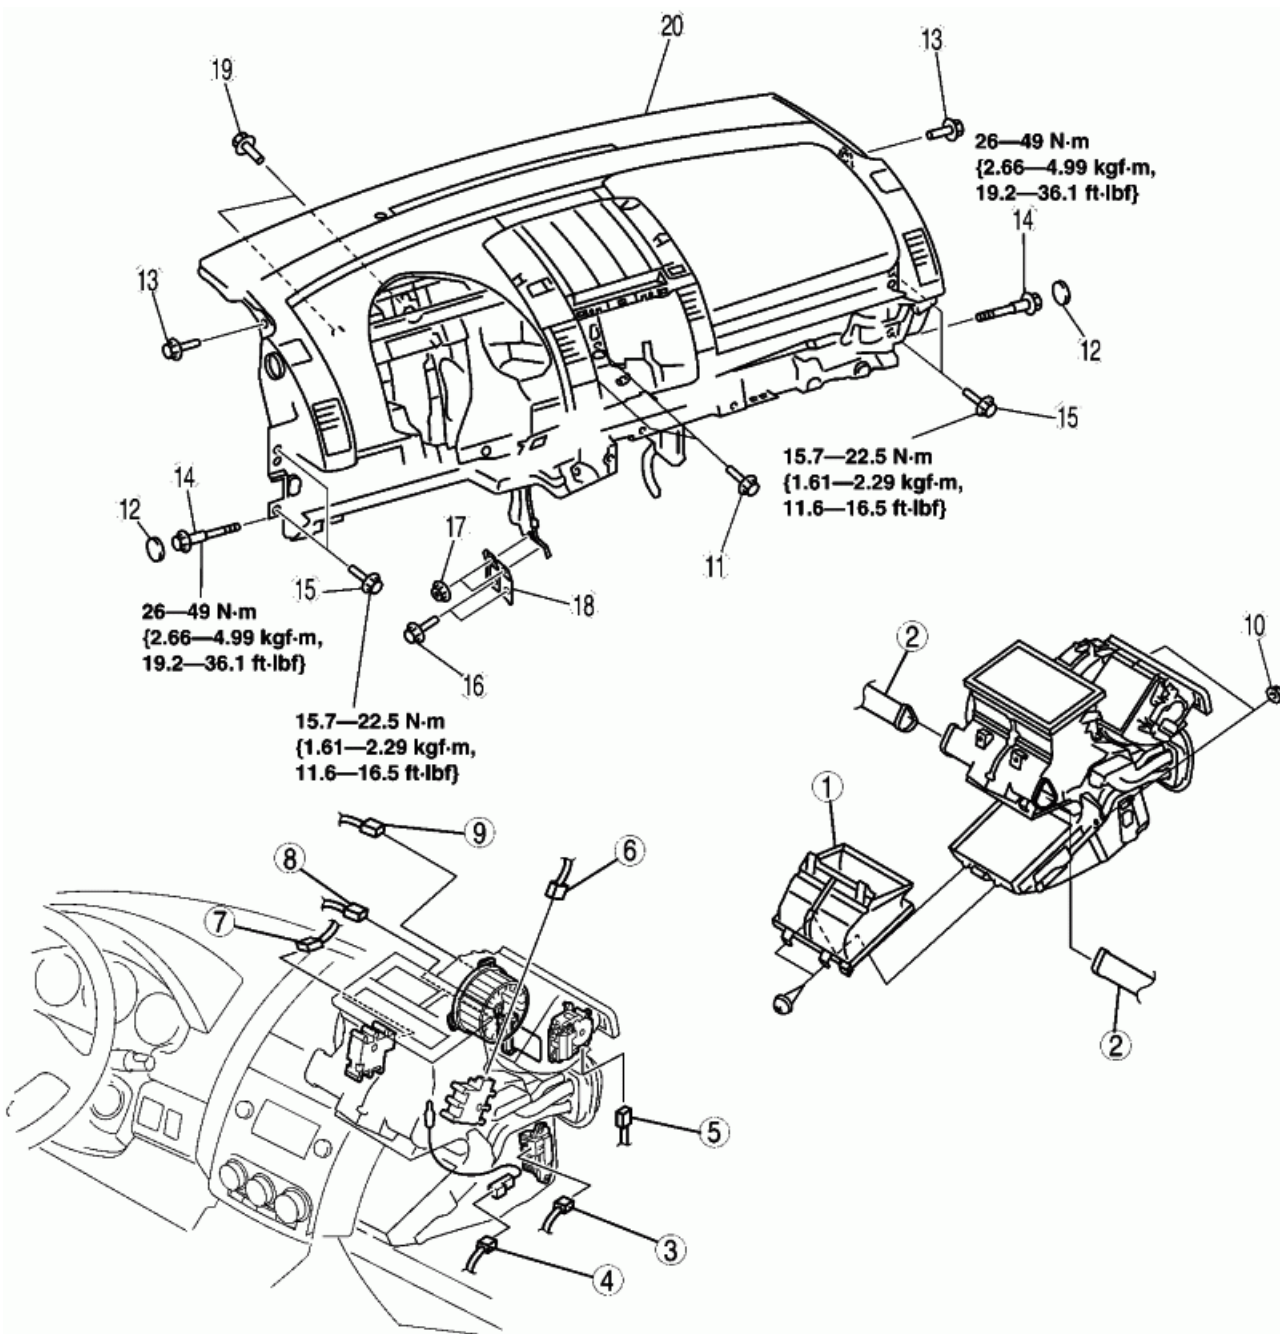


1	Heater case
2	Duct
3	Power MOS FET connector (with full-auto air conditioner)

4	Evaporator temperature sensor connector
5	Air intake actuator connector
6	Air mix actuator connector (with full-auto air conditioner system)
7	Airflow mode actuator connector (with full-auto air conditioner system)
8	Resistor connector (with manual air conditioner system)
9	Blower motor connector
10	Nut A
11	Bolt A
12	Cap
13	Bolt B (See Bolt Removal Note .)
14	Bolt C (See Bolt Removal Note .)
15	Bolt D
16	Bolt E
17	Nut B
18	Dashboard bracket
19	Bolt F
20	Dashboard (See Dashboard Removal Note .)

Bolt Removal Note

CAUTION:

- Bolts or tools dropped into the A-pillar cannot be retrieved. To prevent this, after inserting clean rags into the A-pillar, roll up regular paper into a tube and insert it into each hole, and then secure each tube so that it does not move while performing the work.

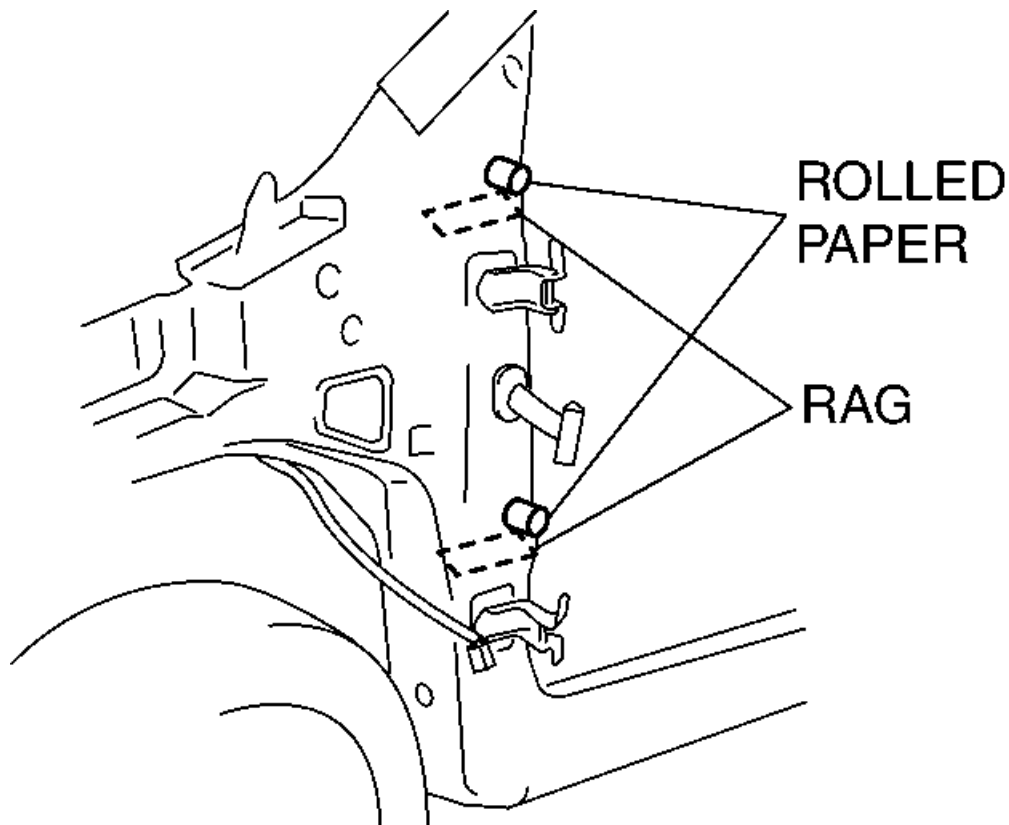

Dashboard Removal Note

WARNING:

- Removing the dashboard without supporting it can be dangerous. The dashboard may fall and injure you. Always perform the following procedure with at least another person.
1. Take the dashboard out through the opened front driver-side door.