


2006 Mazda5 FRONT COMBINATION LIGHT

FRONT COMBINATION LIGHT REMOVAL/INSTALLATION

- 1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[L3\]](#).)
- 2. Disconnect the negative battery cable.
- 3. Remove the front bumper. (See [FRONT BUMPER REMOVAL/INSTALLATION](#).)
- 4. Remove in the order indicated in the table.

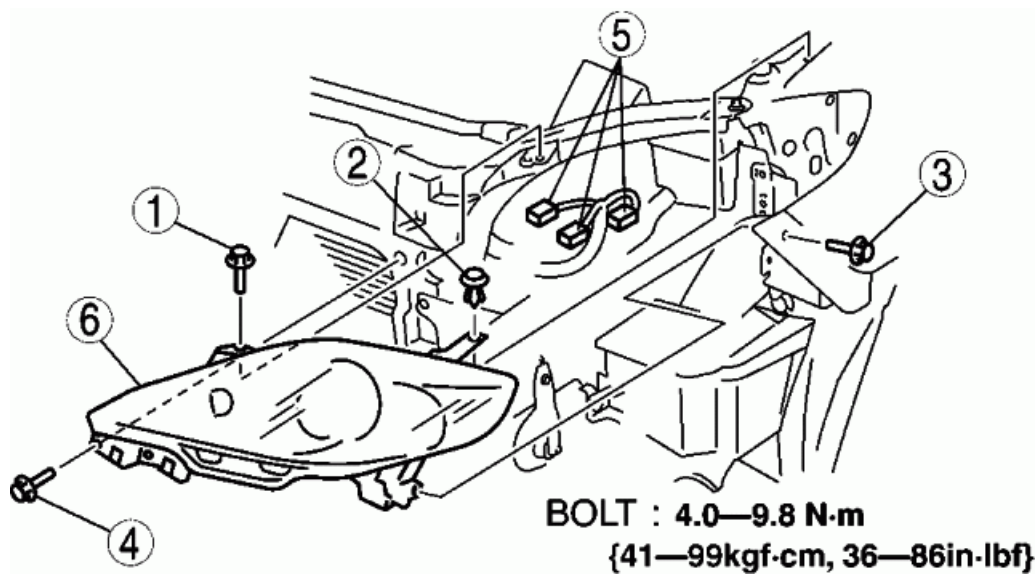


1	Bolt A
2	Fastener
3	Bolt B
4	Bolt C
5	Connector
6	Front combination light

- 5. Install in the reverse order of removal.
- 6. Adjust the headlight aiming. (See [HEADLIGHT AIMING](#).)

FRONT COMBINATION LIGHT BRACKET REPLACEMENT

NOTE:

- Verify that the front combination light is not damaged before using the repair bracket for installation when the original brackets are damaged. If the front combination light component is damaged, replace the light as a single unit.
1. Cut off the front combination light brackets at the locations shown in the figure.

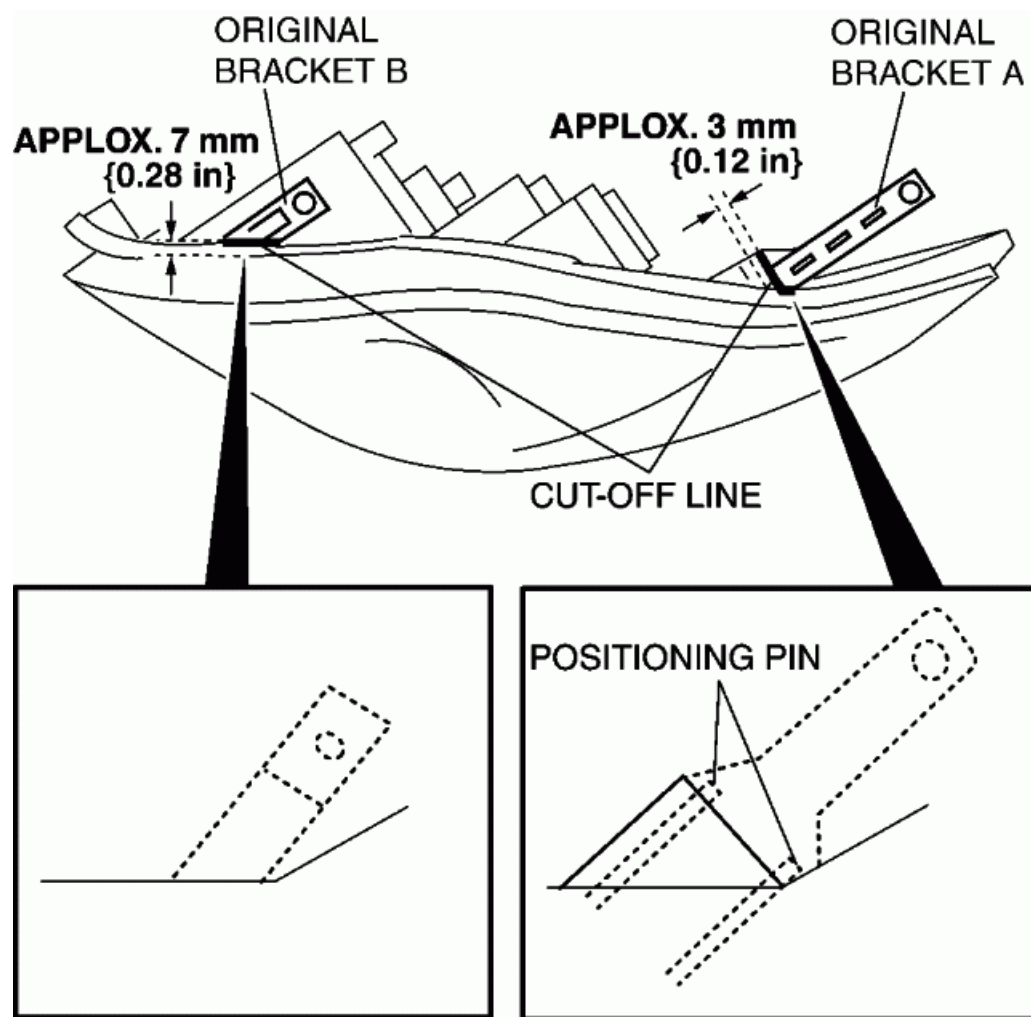

CAUTION:

- Be careful not to cut off the positioning pin.

NOTE:

- After roughly cutting off the brackets, position the repair bracket using the positioning pins, and gradually smoothen any rough areas to create a shape that facilitates installation.
2. Smoothen the cut surfaces using sandpaper so that the repair bracket can be properly installed.
 3. Securely attach the repair bracket to the front combination light using the screws.

