




MZ5 GLOVE COMPARTMENT REMOVAL INSTALLATION

1. Remove the following parts:
 - a. Side wall (See [SIDE WALL REMOVAL/INSTALLATION](#).)
 - b. Front console (See [FRONT CONSOLE REMOVAL/INSTALLATION](#).)
 - c. Front scuff plate inner (passenger's side) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - d. Front side trim (passenger's side) (See [FRONT SIDE TRIM REMOVAL/INSTALLATION](#).)
2. Partially peel back the seaming welt.
3. Remove the side panel. (passenger's side) (See [SIDE PANEL REMOVAL/INSTALLATION](#).)
4. Press the stay damper in the direction shown by the arrow and detach it from the glove compartment lid.

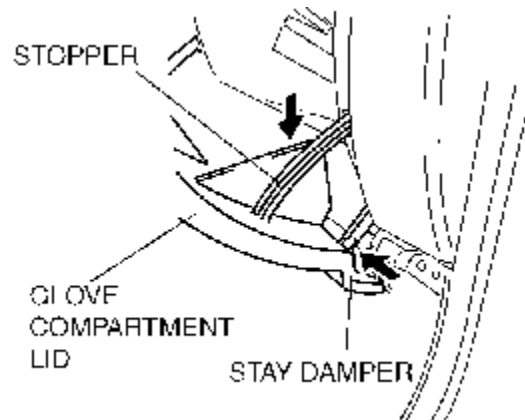


5. While pressing the stopper in the direction shown by the arrow, detach the stopper from the glove compartment lid.
6. Pull the glove compartment lid outward while lowering it to the position shown in the figure, and then detach the clip and remove the glove compartment lid.

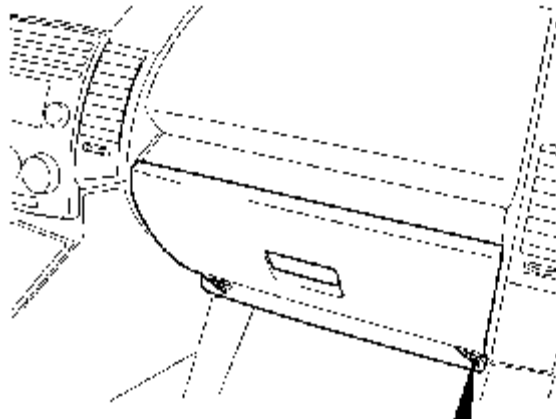

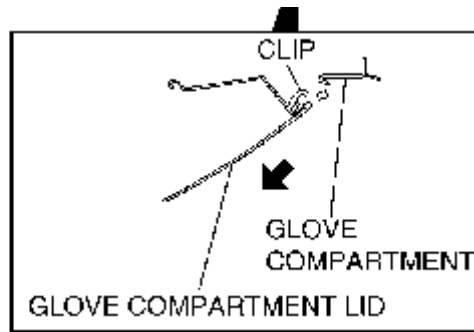

7. Remove the screws.

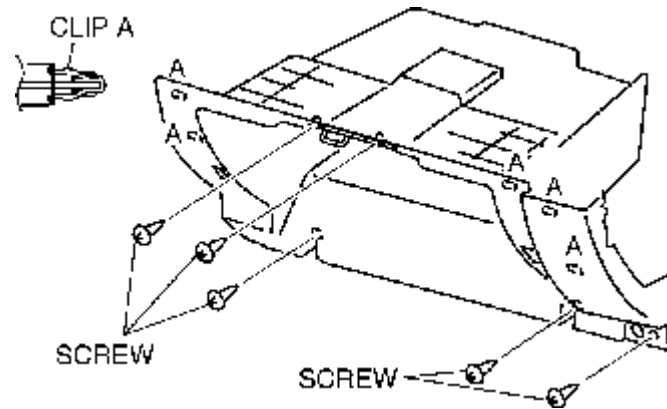

8. Pull the glove compartment outward and detach clips A.

9. Glove compartment light bulb. (vehicles with glove compartment light bulb) (See [GLOVE COMPARTMENT LIGHT BULB REMOVAL/INSTALLATION](#).)

10. Remove the glove compartment.

11. Install in the reverse order of removal.
