



2006 Mazda5 - INTERIOR LIGHT

MAP LIGHT REMOVAL/INSTALLATION

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[L3\]](#).)
2. Disconnect the negative battery cable.
3. Insert a tape-wrapped flathead screwdriver into the gap between the headliner and the map light.
4. Press the tab and remove the map light.

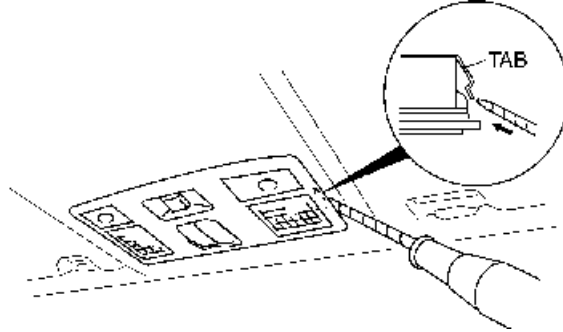


5. Disconnect the connector.

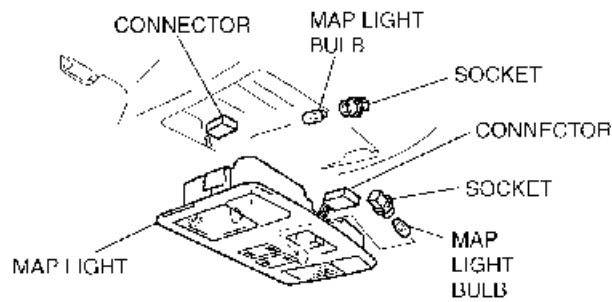

6. Remove the socket, then remove the map light bulb.
7. Install in the reverse order of removal.

MAP LIGHT INSPECTION

1. Verify that the continuity between the map light terminals is as indicated in the table.

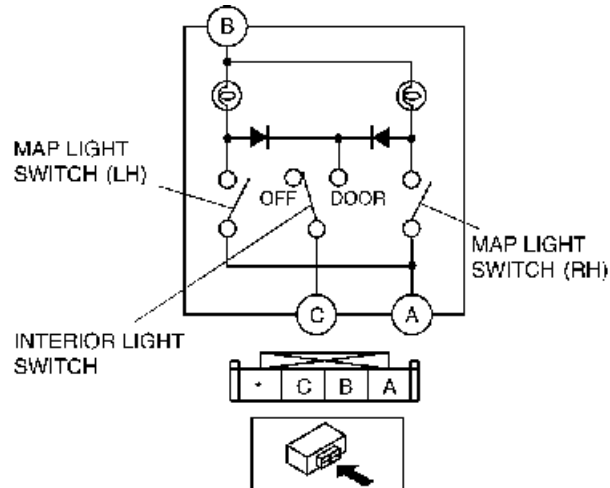


- If not as indicated in the table, replace the map light.

○—○—○ : Bulb


Switch position		Terminal		
MAP LIGHT SWITCH	INTERIOR LIGHT SWITCH	C	B	A
ON	-		○—○—○	○—○—○
-	DOOR	○—○—○	○—○—○	
OFF	OFF			

INTERIOR LIGHT BULB REMOVAL/INSTALLATION

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[L3\]](#).)
2. Disconnect the negative battery cable.
3. Insert a tape-wrapped flathead screwdriver into the service hole and pry with the screwdriver in the direction shown by the arrow to remove the lens.

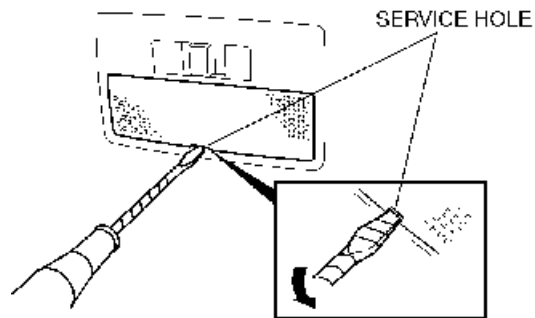

4. Remove the interior light bulb.

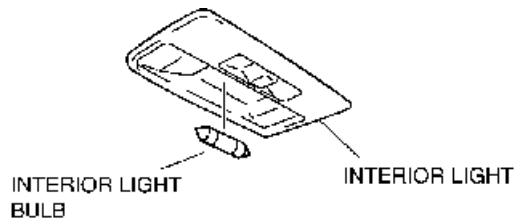


5. Install in the reverse order of removal.

INTERIOR LIGHT REMOVAL/INSTALLATION

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[L3\]](#).)
2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION](#).)
 - b. Front scuff plate inner (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - c. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - d. B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION](#).)
 - e. Front seat belt upper anchor installationbolt (See [FRONT SEAT BELT REMOVAL/INSTALLATION](#).)
 - f. B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION](#).)
 - g. Rear package tray lid (See [REAR PACKAGE TRAY LID REMOVAL/INSTALLATION](#).)
 - h. Sub-trunk


- i. Third-row seat (See [THIRD-ROW SEAT REMOVAL/INSTALLATION.](#))
 - j. Rear header trim (See [REAR HEADER TRIM REMOVAL/INSTALLATION.](#))
 - k. Trunk end trim (See [TRUNK END TRIM REMOVAL/INSTALLATION.](#))
 - l. Third-row seat belt lower anchor installation bolt (See [THIRD-ROW SEAT BELT REMOVAL/INSTALLATION.](#))
 - m. Cargo compartment light (See [CARGO COMPARTMENT LIGHT REMOVAL/INSTALLATION.](#))
 - n. Trunk side trim (See [TRUNK SIDE TRIM REMOVAL/INSTALLATION.](#))
 - o. Second-row seat belt upper anchor installation bolt (See [SECOND-ROW SEAT BELT REMOVAL/INSTALLATION.](#))
 - p. C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - q. Map light (See [MAP LIGHT REMOVAL/INSTALLATION.](#))
 - r. Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION.](#))
 - s. Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION.](#))
 - t. Headliner (See [HEADLINER REMOVAL/INSTALLATION.](#))
4. Detach the tab and remove the bulb housing.

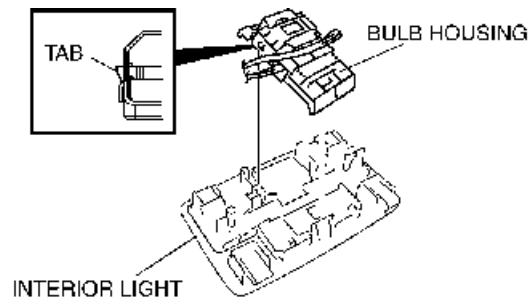

NOTE:

- The valve housing and the wiring harness have been integrated and attached to the headliner. The wiring harness passes under the urethane and shock absorption pad, so if the valve housing is to be replaced, cut the urethane and then cut and remove the shock absorption pad.

5. Pull in the direction of the arrows and detach the tabs.

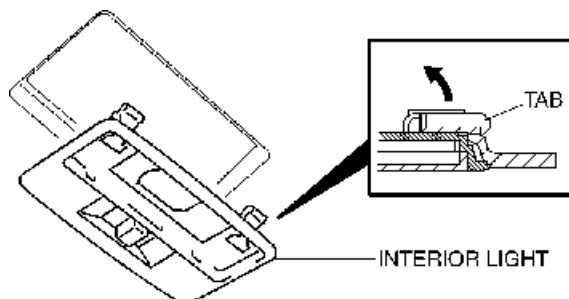

- 6. Remove the interior light.
- 7. Install in the reverse order of removal.

NOTE:

	 : Bulb	
Switch position	Terminal	
	C	A
ON		
DOOR		
OFF		