



2006 Mazda5 - PILLAR TRIM

A-PILLAR TRIM REMOVAL/INSTALLATION

1. Partially peel back the seaming welt.
2. Remove clips A using a fastener remover.
3. Pull the A-pillar trim outward and remove clip B from the grommet (1).
4. Slide the A-pillar trim upward and remove clip B from the A-pillar trim (2).

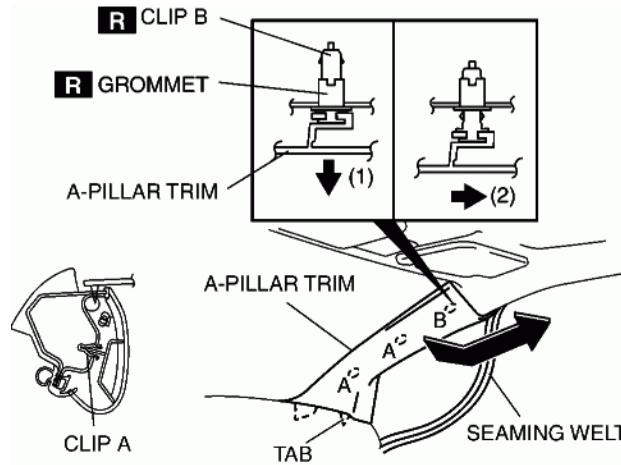


5. Pull clip B out and rotate it 45°.

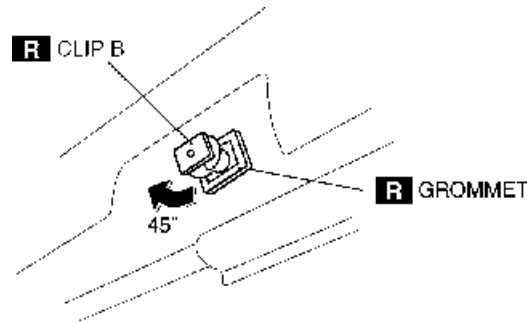

6. Pull clip B and remove it from the grommet.
7. Install clip B to the A-pillar trim.
8. Install in the reverse order of removal.

B-PILLAR LOWER TRIM REMOVAL/INSTALLATION


1. Remove the front scuff plate inner. (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
2. Remove the rear scuff plate. (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
3. Partially peel back the seaming welt.
4. Remove one side of the B-pillar lower trim by pulling A part of the B-pillar lower trim.

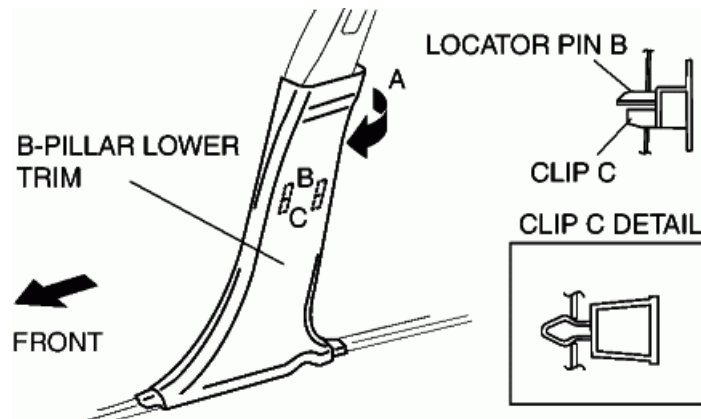

5. Pull the B-pillar lower trim outward and detach clip C and locator pin B.
6. Remove the B-pillar lower trim.
7. Install in the reverse order of removal.

B-PILLAR UPPER TRIM REMOVAL/INSTALLATION

1. Remove the following parts:
 - a. Front seat belt upper anchor installation bolt (See [FRONT SEAT BELT REMOVAL/INSTALLATION](#).)
 - b. Front scuff plate inner (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - c. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - d. B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION](#).)
2. Partially peel back the seaming welt.
3. Pull the B-pillar upper trim outward and detach clips A and locator pin B.

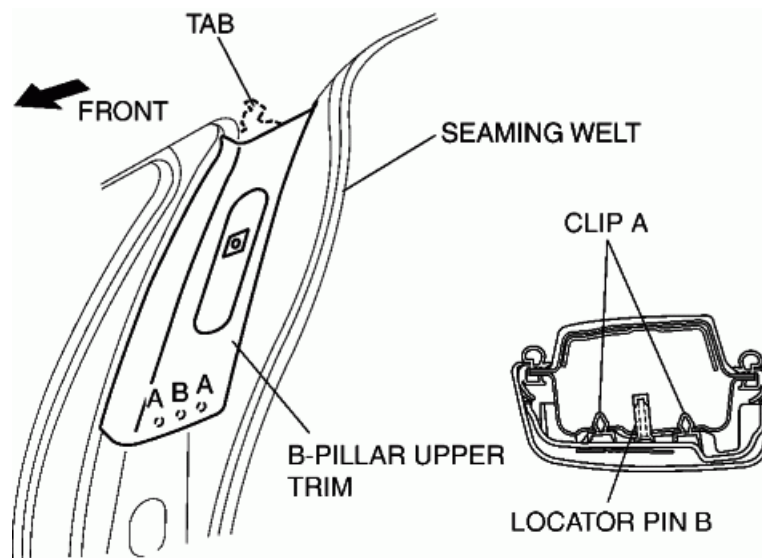


4. Detach the tab from the body and remove the B-pillar upper trim.
5. Install in the reverse order of removal.

C-PILLAR TRIM REMOVAL/INSTALLATION

1. Remove the following parts:
 - a. Rear package tray lid (See [REAR PACKAGE TRAY LID REMOVAL/INSTALLATION](#).)
 - b. Sub-trunk
 - c. Third-row seat (See [THIRD-ROW SEAT REMOVAL/INSTALLATION](#).)
 - d. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - e. Trunk end trim (See [TRUNK END TRIM REMOVAL/INSTALLATION](#).)
 - f. Third-row seat belt lower anchor installation bolt (See [THIRD-ROW SEAT BELT REMOVAL/INSTALLATION](#).)
 - g. Cargo compartment light (See [CARGO COMPARTMENT LIGHT REMOVAL/INSTALLATION](#).)
 - h. Trunk side trim (See [TRUNK SIDE TRIM REMOVAL/INSTALLATION](#).)
 - i. Rear header trim (See [REAR HEADER TRIM REMOVAL/INSTALLATION](#).)

j. Second-row seat belt upper anchor installation bolt (See [SECOND-ROW SEAT BELT REMOVAL/INSTALLATION .](#))

2. Partially peel back the seaming welt.
3. Remove the fastener.

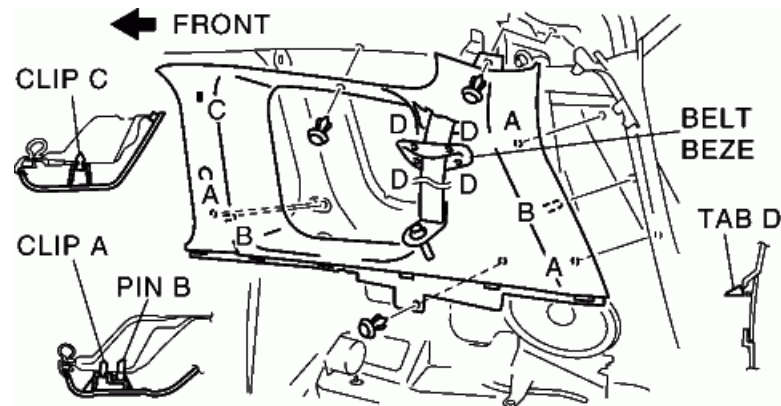

4. Remove clips A, and pins B using a fastener remover.
5. Remove the belt bezel, and remove the third-row seat belt from the C-pillar trim.
6. Slide the C-pillar trim to the vehicle front and remove clips C from the C-pillar trim.
7. Remove the C-pillar trim.
8. Remove clips C from the body, then install it to the C-pillar trim.
9. Install in the reverse order of removal.