


MZ5 REAR HEADER TRIM REMOVAL INSTALLATION

1. Pull the rear header trim and detach clips A and B, pin C, and tabs D.
2. Remove the rear header trim.

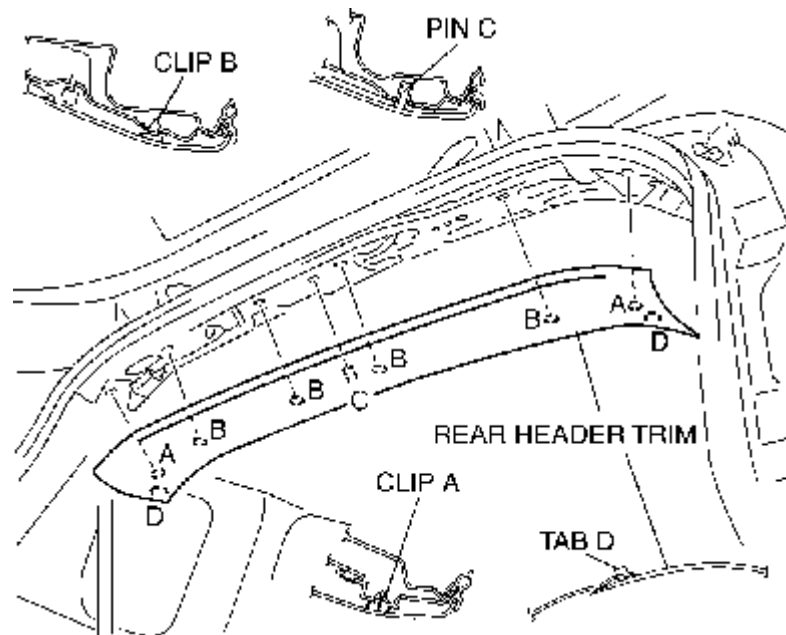

3. Install in the reverse order of removal.